Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Gener8 /
- Gener8 Teeter Totter Instruction Manual (Model GS28277)

Gener8 GS28277

Gener8 Teeter Totter Instruction Manual

Model: GS28277

INTRODUCTION

Welcome to your new Gener8 Teeter Totter. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read all instructions carefully before use to ensure a safe and enjoyable experience.



Image: The Gener8 Teeter Totter fully assembled, featuring a black metal frame, red seats, and red soft-grip handles.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

- Adult supervision is required at all times when children are using the teeter totter.
- Ensure the teeter totter is assembled correctly and all fasteners are secure before each use.
- Do not exceed the maximum weight limit of 95 lbs (approximately 43 kg) per seat.

- Place the teeter totter on a level, soft surface such as grass, wood chips, or sand, away from obstacles, fences, or other play equipment.
- Regularly inspect the product for wear, damage, or loose parts. Discontinue use if any damage is found until repairs are made.
- Instruct children on proper use, including holding onto handles and sitting securely.

WHAT'S IN THE BOX

The Gener8 Teeter Totter package includes the following components:

- Main Teeter Totter Beam
- Central Support Base (multiple parts)
- Two Molded Plastic Seats (Red)
- Two Handlebars with Soft Grips (Red)
- Stopper Pole for Extra Safety
- All necessary assembly hardware (bolts, washers, nuts, screws)
- Instruction Sheet



Image: All components of the Gener8 Teeter Totter, including the main beam, base parts, seats, handles, and hardware, laid out for assembly.



Image: The Gener8 Teeter Totter product packaging box.

SETUP AND ASSEMBLY

Adult assembly is required. Please follow these steps carefully. It is recommended to have two adults for assembly to ensure stability and ease of construction.

Tools Required: Wrench (not included).

- 1. Unpack all components from the box and verify that all parts listed in the "What's in the Box" section are present.
- 2. Assemble the central support base. Connect the base legs to the central pivot mechanism. Ensure all connections are secure and the base is stable.
- Attach the main teeter totter beam to the central support base. Align the holes and secure with the
 provided bolts and washers. Ensure washers are placed correctly on both sides of the connection points
 before tightening bolts.
- 4. Install the molded plastic seats onto each end of the main beam. Secure them firmly with the designated hardware.
- 5. Insert the handlebars into their designated slots on each end of the beam, near the seats. You may need to apply gentle, even pressure to fully seat the handles for proper screw alignment. Secure them with the provided screws.
- 6. Attach the stopper pole to the underside of the main beam, as indicated in the assembly diagram, for additional safety and controlled movement.
- 7. Once assembled, double-check all bolts, nuts, and screws to ensure they are tightly secured. Test the stability of the teeter totter before allowing children to use it.

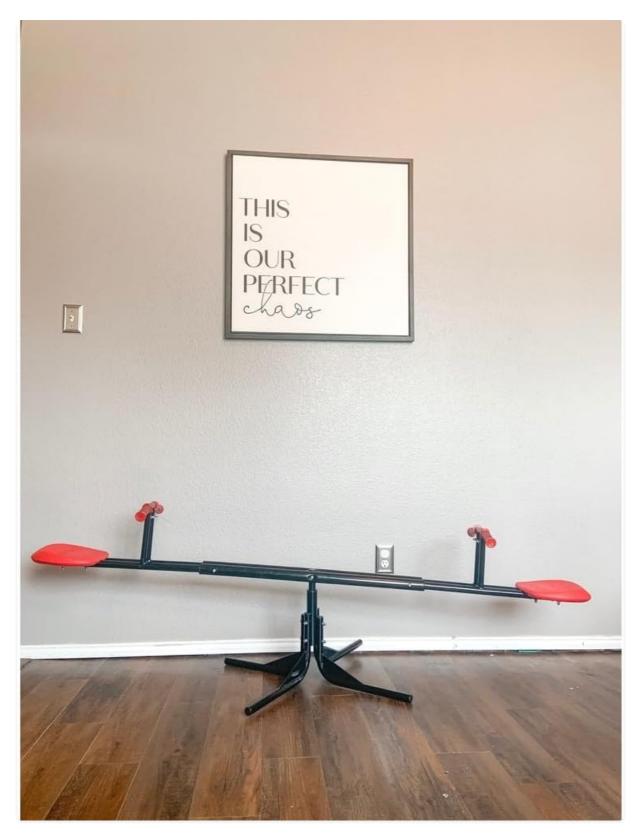


Image: The Gener8 Teeter Totter fully assembled and ready for use, positioned indoors.

OPERATING INSTRUCTIONS

The Gener8 Teeter Totter is designed for two children to play simultaneously. Always ensure children are supervised during play.

Proper Usage:

- Each child should sit securely on a seat, facing inwards towards the center of the teeter totter.
- Instruct children to firmly grasp the soft grip handles with both hands throughout play.
- Children can initiate movement by pushing off the ground with their feet. The teeter totter moves up and down and features a 360-degree rotation capability from its central pivot.
- Encourage children to maintain a balanced and controlled motion, avoiding sudden or excessive force.
- Always ensure children dismount safely by waiting for the teeter totter to come to a complete stop and stepping off carefully.

Weight Limit: Maximum 95 lbs (approximately 43 kg) per seat.



Image: Two young boys enjoying the Gener8 Teeter Totter indoors, demonstrating its up-and-down movement.



Image: Two young boys playing on the Gener8 Teeter Totter outdoors in a grassy field, showcasing its use in an open environment.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your Gener8 Teeter Totter. Follow these guidelines to keep your product in optimal condition.

- **Cleaning:** Wipe down plastic seats and the metal frame with a damp cloth and mild soap as needed. Rinse thoroughly with water and dry to prevent water spots or rust.
- **Inspection:** Before each use, conduct a visual inspection of all parts for signs of wear, damage, cracks, or corrosion. Pay close attention to the integrity of the frame, seats, and handles. Check for any loose bolts, nuts, and screws. Tighten any loose fasteners immediately using the appropriate tools.
- Rust Prevention: While the metal frame is designed for outdoor use, prolonged exposure to moisture
 can lead to rust. Store the teeter totter indoors or cover it with a protective tarp during inclement weather
 or extended periods of non-use. Address any rust spots promptly with appropriate rust treatment
 products.
- **Lubrication:** Periodically apply a silicone-based lubricant to the central pivot point and any other moving parts to ensure smooth 360-degree rotation and effortless up-and-down movement. This will also help reduce squeaking.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Gener8 Teeter Totter.

• **Squeaking Noise:** If the teeter totter produces squeaking sounds during use, apply a silicone-based lubricant to the central pivot mechanism and any other friction points.

- **Unstable Base:** Ensure the teeter totter is placed on a flat, level surface. Re-check all base assembly bolts for tightness and ensure they are fully secured.
- **Difficulty Rotating/Moving:** Verify that the central pivot is clean and adequately lubricated. Check for any obstructions or debris that might be hindering movement.
- Loose Handles/Seats: If handles or seats feel wobbly, tighten all screws and bolts securing them to the main beam. Do not overtighten, but ensure they are snug.
- Parts Not Fitting During Assembly: Double-check the instruction manual diagrams to ensure parts are oriented correctly. Sometimes, gentle force or slight adjustments are needed for alignment.

SPECIFICATIONS

Detailed specifications for the Gener8 Teeter Totter, Model GS28277.

Feature	Detail
Model Number	GS28277
Product Dimensions (Assembled)	78 inches (L) x 30 inches (W) x 22 inches (H)
Item Weight	18.36 pounds (approximately 8.33 kg)
Maximum Weight per Seat	95 lbs (approximately 43 kg)
Recommended Age	36 months - 12 years
Material	Black metal frame, red rubber grips, molded plastic seats
Key Features	Up and down movement, 360-degree rotation, soft grip handles, stopper pole for safety

WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the contact details provided with your original purchase documentation. You may also visit the official Gener8 website for customer service information. Please retain your proof of purchase for any warranty claims.

Related Documents - GS28277





Gener8 GS20901 Wireless Headset User Guide and Instructions

Learn how to use your Gener8 GS20901 wireless headset with this comprehensive guide. Covers key operating instructions, LED indicators, connectivity, and functional parameters.



DAB, DAB+ and DMB Product Guide 2011 - WorldDMB Forum

Comprehensive product guide from WorldDMB Forum listing DAB, DAB+, and DMB radios, digital audio players, and related devices released in 2011, detailing features and specifications.