

[Manuals.plus](#) /

› [BABY born](#) /

› BABY born Boutique Fashion Shop (Model 824757) Instruction Manual

BABY born 824757

BABY born Boutique Fashion Shop Instruction Manual

Model: 824757

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your BABY born Boutique Fashion Shop. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The BABY born Boutique Fashion Shop, showcasing its various sections and accessories.

2. SAFETY INFORMATION

WARNING:

- Contains small parts. Not suitable for children under 3 years due to choking hazard.
- Adult supervision is recommended during play.
- Keep packaging materials away from children to prevent suffocation.
- Ensure all components are securely assembled before use.

3. PACKAGE CONTENTS

The BABY born Boutique Fashion Shop includes a comprehensive set of items for an immersive play experience. Please verify that all components listed below are present:

- Foldable Fashion Shop structure
- 4 Dresses
- 3 T-shirts
- 2 Pairs of Pants
- 2 Skirts
- 4 Pairs of Shoes
- 4 Sunglasses
- 4 Handbags/Pockets
- Jewelry (various pieces)
- 4 Bracelets
- 2 Headbands with interchangeable pins
- 4 Hangers
- 2 Display Stands (mannequins)
- Shelves and 3 additional supports
- Checkout Counter with scanner, calculator, and sound effects
- 4 Shopping Bags
- Play Money and Credit Card



Image 3.1: A detailed view of the BABY born Boutique Fashion Shop and its extensive accessory collection.

4. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging. Dispose of packaging materials responsibly.
2. **Unfold the Shop:** The main shop structure is foldable. Gently unfold the sections until the shop stands upright and stable. Ensure all connecting points are secure.
3. **Assemble Display Racks:** Attach the shelves and display supports as indicated in the diagrams (refer to Image 4.1 for guidance). These are designed to hold shoes, sunglasses, and other small accessories.
4. **Position Checkout Counter:** Place the checkout counter in its designated area within the shop.

5. **Install Batteries (for Cash Register):** The cash register requires batteries for sound effects and calculator functions. Open the battery compartment (usually located on the underside) with a small screwdriver. Insert the required batteries (type and quantity specified on the compartment) ensuring correct polarity (+/-). Close the compartment securely.
6. **Arrange Accessories:** Hang clothes on the provided hangers and place them on the clothing rails. Arrange shoes, sunglasses, handbags, and jewelry on the shelves and display stands.



Image 4.1: Detail of the accessory display rack, showing how shoes and sunglasses can be arranged.



Image 4.2: An example of a doll outfit hanging on a rail within the shop.

5. OPERATING INSTRUCTIONS

The BABY born Boutique Fashion Shop is designed for imaginative role-play. Here's how to use its main features:

- **Fashion Display:** Use the hangers and display stands to showcase the various outfits and accessories. Encourage creative combinations.
- **Changing Room:** The shop includes a designated area that can serve as a changing room for dolls to "try on" clothes.

- **Checkout Counter:**
 - **Scanner:** Press the scanner button to activate sound effects, simulating a product scan.
 - **Calculator:** Use the numerical keypad to "calculate" prices.
 - **Cash Drawer:** The cash drawer can be opened to handle play money.
 - **Card Reader:** Simulate card payments using the play credit card.
- **Shopping Bags:** After "purchases," place items into the provided shopping bags.



Image 5.1: The interactive cash register with its scanner and calculator functions.

6. MAINTENANCE

- **Cleaning:** Wipe all plastic surfaces with a damp cloth. Do not use abrasive cleaners or solvents. Ensure the cash register is dry before use.
- **Storage:** When not in use, the Fashion Shop can be folded for compact storage. Ensure all accessories are stored safely to prevent loss.
- **Battery Replacement:** If the cash register's sound effects or calculator functions become weak or stop working, replace the batteries as described in the Setup section.



Image 6.1: The BABY born Boutique Fashion Shop folded for convenient storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cash register not making sounds or calculator not working.	Batteries are low or incorrectly installed.	Check battery polarity. Replace with fresh batteries.
Shop structure feels unstable.	Sections not fully unfolded or connected.	Ensure all foldable sections are fully extended and securely locked into place.
Missing accessories.	Items may have been misplaced during play or storage.	Thoroughly check the play area and storage containers. Refer to the "Package Contents" section to verify all items.

8. SPECIFICATIONS

- **Model Number:** 824757

- **Brand:** BABY born (by Zapf Creation)
- **Dimensions (L x W x H):** 53 x 42 x 35 cm (unfolded)
- **Weight:** 1 Kilogram
- **Material:** Plastic
- **Recommended Age:** 3+ years (36 months - 99 years)
- **Batteries Required:** Yes (for cash register, type not specified in product data, typically AA or AAA)
- **Educational Objective:** Fosters creativity, social skills, and role-play understanding.
- **Operation:** Manual
- **Foldable:** Yes



Image 8.1: Dimensions of the BABY born Boutique Fashion Shop.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided by Zapf Creation on their official

website or product packaging. Keep your proof of purchase for any warranty claims.

Manufacturer: Zapf Creation

Website: www.zapf-creation.com (This is a generic link, actual link might vary by region)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BWTZCHS>

More documents and user manuals: <https://manuals.plus/>