



Manuals.plus /

› **Kyocera** /

› Kyocera Dura XE E4710 Flip Phone User Manual

## Kyocera E4710

# Kyocera Dura XE E4710 Flip Phone User Manual

Model: E4710

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Kyocera Dura XE E4710 flip phone. The Dura XE E4710 is a rugged 4G LTE feature phone designed to withstand challenging environments, featuring loud dual-front speakers, impact resistance, and Enhanced Push-To-Talk (EPTT) support.

## 2. PACKAGE CONTENTS

---

Verify that your package contains the following items:

- Kyocera Dura XE E4710 Handset
- Battery
- Charger

## 3. DEVICE OVERVIEW

---

Familiarize yourself with the physical components of your Kyocera Dura XE E4710.



**Figure 3.1:** Front view of the closed Kyocera Dura XE E4710 flip phone, displaying the outer screen with time and date, and the Kyocera logo.



**Figure 3.2:** Front and side view of the closed Kyocera Dura XE E4710 flip phone, highlighting its compact, rugged design and side buttons.



**Figure 3.3:** The Kyocera Dura XE E4710 flip phone in an open position, revealing the internal screen and the full keypad with navigation buttons.



**Figure 3.4:** Rear view of the Kyocera Dura XE E4710 flip phone, showing the textured back panel and charging contacts.

## 4. SETUP

---

### 4.1. Installing the Battery

1. Remove the back cover of the phone.
2. Align the battery contacts with the terminals in the battery compartment.
3. Gently press the battery into place until it clicks.
4. Replace the back cover, ensuring it is securely fastened to maintain water and dust resistance.

### 4.2. Installing the SIM Card

1. With the battery removed, locate the SIM card slot.
2. Insert the SIM card into the slot with the gold contacts facing down and the cut corner aligned correctly.
3. Gently push the SIM card until it locks into place.
4. Reinstall the battery and back cover.

### 4.3. Charging the Battery

1. Connect the charger to a power outlet.
2. Plug the charger cable into the phone's charging port.
3. Allow the phone to charge completely before initial use. The charging indicator will show progress.

## 5. BASIC OPERATION

---

### 5.1. Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the phone vibrates and the screen illuminates.

- **To Power Off:** Press and hold the Power/End Call button, then select 'Power Off' from the options on the screen.

## 5.2. Making Calls

1. Open the flip to activate the screen.
2. Enter the phone number using the keypad.
3. Press the Green Call button to initiate the call.
4. To end a call, press the Red End Call button.

## 5.3. Receiving Calls

- When the phone rings, open the flip or press the Green Call button to answer.
- To decline a call, press the Red End Call button.

## 5.4. Sending Text Messages

1. Navigate to the 'Messages' application from the main menu.
2. Select 'New Message' or 'Create Message'.
3. Enter the recipient's phone number or select from contacts.
4. Type your message using the keypad.
5. Press 'Send'.

## 6. KEY FEATURES

---

- **Rugged Design:** The Dura XE E4710 is built to be waterproof, dustproof, and shock-resistant, making it suitable for demanding environments.
- **4G LTE Connectivity:** Experience fast data speeds and reliable network performance.
- **Dual-Front Speakers:** Enjoy clear audio with loud dual-front speakers, ideal for noisy settings.
- **Enhanced Push-To-Talk (EPTT):** Utilize instant communication capabilities for efficient team coordination (service subscription may be required).

## 7. MAINTENANCE

---

- **Cleaning:** Use a soft, damp cloth to clean the phone's exterior. Avoid harsh chemicals or abrasive materials.
- **Water Exposure:** While waterproof, ensure all port covers are securely closed before exposing the phone to water. After exposure, dry the phone thoroughly before charging.
- **Temperature:** Avoid exposing the phone to extreme temperatures (hot or cold) for extended periods.
- **Battery Care:** To prolong battery life, avoid overcharging and allow the battery to discharge periodically.

## 8. TROUBLESHOOTING

---

### 8.1. Phone Does Not Power On

- Ensure the battery is correctly installed and fully charged.
- Try connecting the phone to the charger and attempting to power on.

### 8.2. Cannot Make or Receive Calls

- Check if the SIM card is properly inserted.
- Verify that you have network signal.
- Ensure your account is active with your service provider (AT&T).

### 8.3. Poor Audio Quality

- Ensure the speaker and microphone are not obstructed.
- Adjust the call volume during a conversation.
- Move to an area with better network coverage.

For further assistance, refer to the official Kyocera support website or contact your service provider.

## 9. SPECIFICATIONS

Feature	Specification
Model Number	E4710
Product Dimensions	4.2 x 1 x 2.2 inches
Item Weight	6.4 ounces
Operating System	Android (version not specified)
RAM	8 GB
Memory Storage Capacity	8 GB
Wireless Communication	Cellular, Wi-Fi
Human Interface Input	Buttons, Keypad
Screen Size	2.6 Inches
Resolution	480 x 854
Form Factor	Flip
Color	Black
Battery Power Rating	3600 Amp Hours
Phone Talk Time	6 Hours
Manufacturer	Kyocera
Wireless Carrier	AT&T

## 10. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the documentation provided with your purchase or visit the official Kyocera website. You may also contact your service provider, AT&T, for assistance related to network services and device support.

Please retain your proof of purchase for warranty claims.

