

[Manuals.plus](#) /

> [Sony](#) /

> Sony DPT-CP1/B 10-inch Digital Paper Instruction Manual

Sony DPT-CP1/B

Sony DPT-CP1/B 10-inch Digital Paper Instruction Manual

Model: DPT-CP1/B

INTRODUCTION

The Sony DPT-CP1/B Digital Paper is a lightweight, 10.3-inch e-note device designed for reading, annotating documents, and taking handwritten notes. It offers a low-glare display and a paper-like texture for a comfortable writing experience, aiming to streamline your workflow by reducing reliance on physical paper. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Digital Paper device.

WHAT'S IN THE BOX

Verify that all the following items are included in your package:

- Digital Paper device
- Quick Start Guide
- Stylus
- Stylus Tips (replacement nibs)
- Tip Puller
- USB Cable (1.5M)
- Warranty Cards



Image: The Sony DPT-CP1/B Digital Paper device shown with its accompanying stylus.

SETUP

1. Initial Charging

Before first use, ensure the device is fully charged. Connect the Digital Paper to a computer using the supplied USB cable or to an AC adaptor (not included) for charging.

- **Computer-based Charging:** Approximately 5.5 hours.
- **AC Adaptor-based Charging:** Approximately 3.5 hours.

Long battery life
Enjoy up to one week of use on a single charge¹ with Wi-Fi or Bluetooth on, and up to three weeks with Wi-Fi or Bluetooth off.

1. Actual performance varies based on settings, environmental conditions, and usage. Extensive handwriting and/or continuous connection with Bluetooth or Wi-Fi will draw more power and require more frequent charging.

Image: The Sony Digital Paper connected via USB for charging.

2. Installing the Digital Paper Application

To transfer documents and notes between your computer and the Digital Paper, you must install the dedicated Digital Paper application. This application is compatible with:

- **Windows:** 10 Home, 10 Pro, 8.1, 8.1 Pro, 7 Home Premium (SP1 or later), 7 Professional (SP1 or later), 7 Ultimate (SP1 or later)
- **macOS:** 10.13 (High Sierra), 10.12 (Sierra), Mac OS X 10.11 (El Capitan)

Download the application from the official Sony support website.

3. Wi-Fi Connectivity

The device supports Wi-Fi connectivity (IEEE 802.11a/b/g/n/ac MIMO) for wireless document transfer. Follow the on-screen instructions on the Digital Paper to connect to your preferred Wi-Fi network after initial setup.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button located on the top edge of the device to power it on or off.

2. Navigating the Interface

The Digital Paper features a simple, intuitive interface. Use the stylus to tap on menu options, open documents, and navigate through pages.

3. Reading Documents

Transfer PDF documents to your device using the Digital Paper application. The 10.3-inch high-contrast display (1404 x 1872 dots) provides a low-glare viewing experience suitable for extended reading.

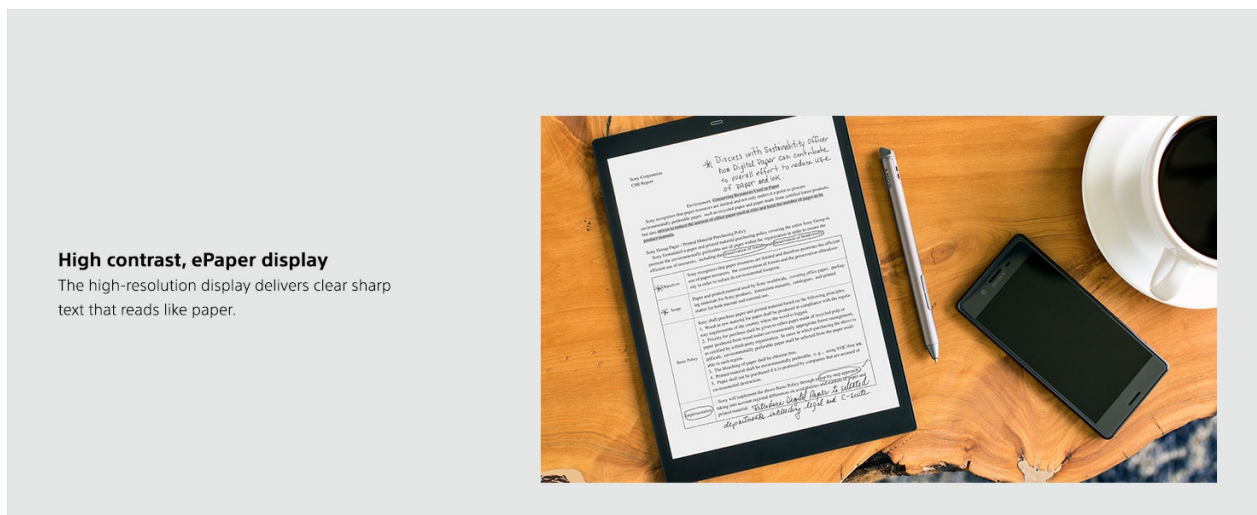


Image: The Digital Paper screen showing a document with text and a pie chart, demonstrating its e-paper display.

4. Taking Notes and Annotating


The included stylus allows for precise writing and drawing directly on documents. The screen's paper-like texture enhances the writing experience. The stylus offers 8192 levels of pressure sensitivity for varied line thickness.

Use the stylus buttons for quick access to highlighting and erasing functions. The device is ideal for marking up PDFs, taking meeting notes, or sketching ideas.



PC/Mac companion app

Easily transfer documents to and from your Digital Paper to your PC/Mac. It also automatically syncs all of your files.

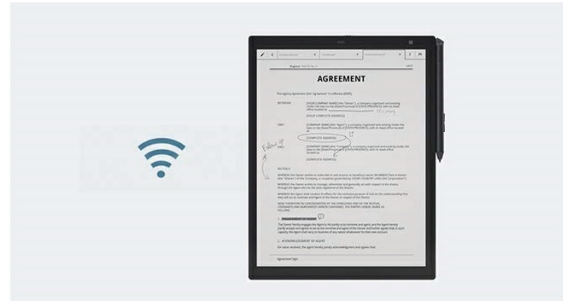

Wireless transfer

Transfer documents with ease using Wi-Fi or Bluetooth wireless technology.

Image: A hand using the stylus to write on the Sony Digital Paper, highlighting its digital note-taking capability.

5. Document Transfer

Documents can be transferred to and from the Digital Paper via:

- **USB Cable:** Connect the device to your computer and use the Digital Paper application.
- **Wi-Fi:** Utilize the Digital Paper application on your computer to wirelessly sync documents.

The device is designed to work seamlessly with your personal computer for document management.

6. Video Demonstration

Your browser does not support the video tag.

Video: An official demonstration of the Sony DPT-CP1/B Digital Paper in use, showcasing its features and portability in various professional settings.

MAINTENANCE

1. Battery Management

To maximize battery life, ensure the device is fully charged before use. Typical battery life is approximately 1 week with Wi-Fi on, and up to 3 weeks with Wi-Fi off.

Regular charging helps maintain battery health. Avoid completely draining the battery frequently.

2. Stylus Tip Replacement

The stylus tips are consumable items and will wear down with use. Replace them when they show signs of significant wear to maintain optimal writing performance. Use the provided tip puller to safely remove and replace tips.

Replacement stylus tips can be purchased separately from authorized retailers.

3. Cleaning the Device

Gently wipe the screen and body of the Digital Paper with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the screen or finish.

TROUBLESHOOTING

Device Not Responding

If the device becomes unresponsive, perform a reset:

1. Ensure the device is fully charged.
2. Locate the reset button at the top of the device.
3. Gently press the reset button using a thin, pointed object (e.g., a paperclip).

Connectivity Issues

If you experience problems transferring documents or connecting via Wi-Fi:

- Verify that your Wi-Fi network is active and the password is correct.
- Ensure the Digital Paper application on your computer is up-to-date.
- Try restarting both your computer and the Digital Paper device.
- Check the USB cable for damage if using a wired connection.

Stylus Not Working

If the stylus is not responding or writing incorrectly:

- Check if the stylus tip is worn and replace it if necessary.
- Ensure the stylus is properly paired with the device (if applicable, refer to the Quick Start Guide for initial pairing).

SPECIFICATIONS

Feature	Detail
Brand	Sony
Model Number	DPTCP1/B
Model Name	Digital Paper
Screen Size	10.3 Inches (diagonal)
Native Resolution	1404 x 1872 dots
Display Type	Passive matrix, Low-glare
Item Weight	Approximately 8.5 oz (240 Grams)
Dimensions (L x W)	7.36"L x 1.08"W <i>(Note: This dimension likely refers to thickness or a specific part, not overall width.)</i>
Connectivity Technology	USB, Wi-Fi (IEEE 802.11a/b/g/n/ac MIMO)
Operating System Compatibility	Windows 10/8.1/7, macOS 10.13/10.12/10.11
Stylus Pressure Sensitivity	8192 Levels
Battery Life (Wi-Fi On)	Approx. 1 week

Feature	Detail
Battery Life (Wi-Fi Off)	Approx. 3 weeks

WARRANTY AND SUPPORT

The Sony DPT-CP1/B Digital Paper comes with a **1-year warranty** from the date of purchase. For detailed warranty terms, technical support, driver downloads, and additional resources, please visit the official Sony support website. You can find contact information and FAQs there. Keep your purchase receipt and warranty cards in a safe place as proof of purchase may be required for warranty claims.

© 2024 Sony Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.