

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [JBL](#) /
- › [JBL Pulse 3 Bluetooth Speaker User Manual](#)

**JBL fm\_bs\_019**

# JBL Pulse 3 Bluetooth Speaker User Manual

Model: fm\_bs\_019

## INTRODUCTION

The JBL Pulse 3 is a portable, waterproof Bluetooth speaker designed to enhance your audio experience with 360-degree sound and an integrated 360-degree light show. This manual provides essential information for setting up, operating, and maintaining your JBL Pulse 3 speaker.



*Image: The JBL Pulse 3 speaker, showcasing its distinctive light-up cylindrical design and speaker grille base.*

## WHAT'S IN THE BOX

Please check that all items are present in your product packaging:

- JBL Pulse 3 Speaker
- USB Charging Cable
- Quick Start Guide
- Safety Sheet
- Warranty Card

## SETUP

### 1. Charging the Battery

Before first use, fully charge the JBL Pulse 3. Connect the provided USB charging cable to the speaker's charging port and a power source (e.g., USB wall adapter or computer USB port). The LED indicator will show charging status.

- A full charge provides up to 12 hours of playtime.

### 2. Power On/Off

Press the **Power button** located on the speaker to turn it on or off.

### 3. Bluetooth Pairing

1. Turn on the JBL Pulse 3. It will automatically enter Bluetooth pairing mode if not connected to a device. The Bluetooth indicator light will flash.
2. On your smartphone or tablet, enable Bluetooth and search for available devices.
3. Select "**JBL Pulse 3**" from the list of devices.
4. Once connected, the Bluetooth indicator light will remain solid.

*Note: The JBL Pulse 3 can connect to multiple devices, but only one can play audio at a time.*

## OPERATING THE JBL PULSE 3

### Music Playback

- Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the audio level.
- Press the **Play/Pause button** to play or pause music.
- Double-press the **Play/Pause button** to skip to the next track.

### 360-Degree Lightshow

The JBL Pulse 3 features a customizable 360-degree light show. You can change light patterns and colors using the dedicated Lightshow button on the speaker or through the JBL Connect app.

- Press the **Lightshow button** to cycle through pre-set light themes.
- Shake the Pulse 3 to create a synchronized light show with other Pulse 3 devices (when connected via JBL Connect+).

### JBL Connect+

JBL Connect+ technology allows you to wirelessly link more than 100 JBL Connect+ enabled speakers to amplify your listening experience.

1. Ensure all JBL Connect+ enabled speakers are powered on.
2. Press the **JBL Connect+ button** on your primary Pulse 3 speaker.
3. Within 30 seconds, press the **JBL Connect+ button** on all other speakers you wish to link.
4. The speakers will connect and play audio simultaneously.

## Speakerphone Function

The JBL Pulse 3 includes a noise and echo-cancelling speakerphone for crystal clear calls.

- To answer an incoming call, press the **Play/Pause button** once.
- To end a call, press the **Play/Pause button** once.
- To reject a call, press and hold the **Play/Pause button** for 2 seconds.

## JBL Connect App

Download the JBL Connect app from your device's app store to customize your light show experience, manage JBL Connect+ settings, and update speaker firmware.

- Search for "JBL Connect" in the App Store (iOS) or Google Play Store (Android).
- Install the app and follow the on-screen instructions to connect to your Pulse 3.

## MAINTENANCE

### Waterproofing (IPX7)

The JBL Pulse 3 is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for up to 30 minutes. To ensure waterproofing:

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to salt water or other liquids besides fresh water.
- After exposure to water, dry the speaker thoroughly before charging.

### Cleaning

Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device or speaker is not in pairing mode.	Ensure Bluetooth is enabled on your device. Press the Bluetooth button on the speaker to enter pairing mode. Move closer to the speaker.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
No sound or low volume.	Volume is too low on speaker or connected device.	Increase volume on both the JBL Pulse 3 and your connected device.
Light show not working.	Light show feature may be off or app settings need adjustment.	Press the Lightshow button. Check settings in the JBL Connect app.

## **SPECIFICATIONS**

- **Model Name:** JBL Pulse 3
- **Model Number:** fm\_bs\_019
- **Power Source:** Battery Powered
- **Battery Life:** Up to 12 Hours
- **Waterproof Rating:** IPX7 (True)
- **Connectivity Protocol:** Bluetooth
- **Speaker Connectivity:** Wireless
- **Control Method:** App Control
- **Special Features:** Waterproof, 360-degree Lightshow, JBL Connect+, Speakerphone
- **Compatible Devices:** Tablet, Smartphone

## **WARRANTY AND SUPPORT**

The JBL Pulse 3 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for detailed terms and conditions.

For technical support, product inquiries, or warranty claims, please visit the official JBL support website or contact their customer service. Contact information can typically be found on the JBL website or in your product documentation.

You can also visit the [JBL Store on Amazon](#) for more product information.