

## AUNA 00819885021020US

# AUNA Roadie KIDS Boombox User Manual

Model: 00819885021020US

## INTRODUCTION

---

The AUNA Roadie KIDS Boombox is a versatile and portable audio system designed for children, offering multiple playback options including CD, Bluetooth, USB, and AM/FM radio. It features integrated multi-color LED lights that synchronize with the music, enhancing the listening experience. This manual provides detailed instructions for the safe and effective use of your boombox.

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

## PACKAGE CONTENTS

---

Verify that all items are present upon opening the package:

- 1 x AUNA Roadie KIDS Boombox
- 1 x AC Power Cable
- 1 x User Manual (English, German, French)

## PRODUCT OVERVIEW

---

Familiarize yourself with the various parts and controls of your AUNA Roadie KIDS Boombox.



Figure 1: Front view of the AUNA Roadie KIDS Boombox, showcasing the main unit with illuminated speakers and central display.

**Front Panel and Display**



Figure 2: Detailed view of the boombox's front, highlighting the digital display, USB port, and power/FM ST indicators.

- **Digital Display:** Shows track number, radio frequency, and mode.
- **USB Port:** For connecting USB flash drives for MP3/WMA playback.
- **Power/FM ST Indicators:** Lights indicating power status and FM stereo reception.
- **LED Lights:** Multi-color LEDs integrated into the speaker grilles, changing with the music.

## Top Panel and CD Compartment



Figure 3: The top-loading CD compartment, shown open for disc insertion.

- **CD Compartment:** Top-loading tray for Audio CDs, CD-R, CD-RW, and MP3-CDs.
- **Control Buttons:** Play/Pause, Stop, Skip/Search (forward/backward), Program, Repeat, Mode.

### Side and Rear Panels





## PLAY IT LOUD OR LOW

Via 2 built-in speakers or headphone jack



Figure 4: Side view illustrating the volume control knob and the function selector switch.

- **Volume Knob:** Analog control for adjusting audio output level.
- **Function Switch:** Selects between AM, FM, CD/USB, Bluetooth, and AUX modes.
- **Light Switch:** On/Off switch for the LED lights.



# MUSIC EVERYWHERE

Listen anywhere with battery power



Figure 5: Rear view displaying the extendable antenna, AUX input, headphone output, and AC power input.

- **Extendable Antenna:** For improved radio reception.
- **AUX Input (3.5mm):** For connecting external audio devices.
- **Headphone Output (3.5mm):** For private listening.
- **AC Power Input:** For connecting the included power cable.
- **Battery Compartment:** Located on the bottom, for 6 x C-type batteries (not included).

## SETUP

---

### Powering the Boombox

The AUNA Roadie KIDS Boombox can be powered by either AC power or batteries.

#### AC Power (Recommended for stationary use)

1. Ensure the boombox is switched off.
2. Insert the included AC power cable into the AC power input jack on the rear of the boombox.
3. Plug the other end of the power cable into a standard 110-120V ~ / 50-60Hz wall outlet.

## Battery Power (For portable use)

1. Ensure the boombox is switched off and disconnected from AC power.
2. Locate the battery compartment on the bottom of the unit.
3. Open the battery compartment cover.
4. Insert 6 x C-type batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
5. Close the battery compartment cover securely.

*Note: Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.*

## OPERATING INSTRUCTIONS

---

### General Operation

- **Power On/Off:** Use the on/off switch located on the left outer side of the unit.
- **Mode Selection:** Use the function switch on the side to select desired mode (AM, FM, CD/USB, BT/AUX).
- **Volume Adjustment:** Rotate the analog volume knob on the side to increase or decrease the sound level.
- **LED Lights:** Use the "Light On/Off" switch on the rear to control the multi-color LED lights.

### CD Playback

1. Switch the function selector to "CD/USB" mode.
2. Open the CD compartment cover on the top of the unit.
3. Place an Audio CD, CD-R, CD-RW, or MP3-CD onto the spindle with the label side facing up.
4. Close the CD compartment cover. The display will show the total number of tracks.
5. Press the **PLAY/PAUSE** button to start playback.
6. Use the **SKIP/SEARCH** buttons to navigate between tracks. Hold to fast forward/rewind.
7. Press the **STOP** button to stop playback.
8. **Program Playback:** Press the **PROGRAM** button to create a playlist of up to 20 tracks for CDs or 99 tracks for MP3-CDs.
9. **Repeat Functions:** Press the **REPEAT** button to cycle through repeat modes (repeat one, repeat all, repeat folder for MP3-CDs).
10. **Random Playback:** Press the **RANDOM** button for shuffled playback.

### Bluetooth Connectivity

Stream music wirelessly from your smartphone or tablet.

1. Switch the function selector to "BT/AUX" mode. The unit will enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "AUNA Roadie" from the list of devices.
4. Once paired, the Bluetooth icon will stop flashing, and you can play music from your device through the boombox.

### USB Playback



## VERSATILE

Built-in CD/MP3-player,  
MP3-USB port and  
AM/FM radio



Figure 6: USB port with a flash drive inserted, ready for media playback.

The boombox supports MP3 and WMA file types from USB flash drives.

1. Switch the function selector to "CD/USB" mode.
2. Insert a USB flash drive into the USB port on the front panel.
3. The unit will automatically detect and begin playing supported audio files.
4. Use the **PLAY/PAUSE**, **STOP**, and **SKIP/SEARCH** buttons for control.

### Radio Operation (AM/FM)

1. Switch the function selector to "AM" or "FM" mode.
2. Extend the telescopic antenna on the rear of the unit for optimal FM reception. For AM, rotate the unit for best reception.
3. Use the **TUNING** knob on the side to manually tune to your desired radio station.



## AUX Input

Connect external audio devices using a 3.5mm audio cable (not included).

1. Switch the function selector to "BT/AUX" mode.
2. Connect one end of a 3.5mm audio cable to the AUX input jack on the rear of the boombox.
3. Connect the other end to the headphone jack or audio output of your external device (e.g., MP3 player, smartphone).
4. Audio from the external device will now play through the boombox speakers. Control playback from your external device.

## Headphone Output

For private listening, connect headphones to the 3.5mm headphone output jack on the rear of the unit. The speakers will automatically mute when headphones are connected.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If the CD player experiences reading errors, use a commercially available CD lens cleaner disc to clean the lens.
- **Storage:** When not in use for extended periods, store the boombox in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for a long time.

## TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted; Power switch off.	Ensure AC cable is securely plugged in; Replace batteries or check polarity; Turn the power switch to "On".
No sound	Volume too low; Headphones connected; Incorrect mode selected; Mute function active on connected Bluetooth device.	Increase volume; Disconnect headphones; Select the correct mode (CD, BT, USB, AM, FM, AUX); Check volume/mute on connected device.
CD not playing/skipping	CD dirty or scratched; CD inserted incorrectly; Unsupported CD format.	Clean CD with a soft cloth; Insert CD with label side up; Ensure CD is Audio CD, CD-R, CD-RW, or MP3-CD.
Bluetooth not pairing	Boombox not in pairing mode; Bluetooth disabled on device; Device too far from boombox.	Ensure boombox is in "BT/AUX" mode; Enable Bluetooth on your device; Move device closer to the boombox (within 10 meters).
Poor radio reception	Antenna not extended; Weak signal.	Fully extend the telescopic antenna; Try repositioning the unit for better reception.

## SPECIFICATIONS

### Technical Data

Brand	AUNA
Model	00819885021020US
Dimensions (W x H x D)	9.4 x 5.1 x 7.9 inches (approx.)
Weight	3.4 pounds (approx.)
Power Supply (AC)	110-120 V ~ / 50-60 Hz
Power Supply (Battery)	6 x C-type batteries (9 V DC, not included)
Speaker Output	2 x 1.5 W
Compatible CD Formats	Audio CD, CD-R, CD-RW, MP3-CDs
Supported USB File Types	MP3, WMA
Bluetooth Version	2.1 + EDR
Bluetooth Profiles	A2DP, AVRCP
Connectivity	Bluetooth, Auxiliary (3.5mm), USB, AM/FM Radio

### WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official AUNA website. This product includes a user manual in English, German, and French.