

[Manuals.plus](#) /

› [AOC](#) /

› AOC 24P1 23.8-inch Full HD IPS Monitor User Manual

AOC 24P1

AOC 24P1 23.8-inch Full HD IPS Monitor User Manual

Model: 24P1

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your AOC 24P1 23.8-inch Full HD IPS Monitor. Please read this manual thoroughly before operating the device and retain it for future reference. The AOC 24P1 monitor features a 23.8-inch IPS panel with Full HD (1920 x 1080) resolution, designed for clear visuals and comfortable viewing.



Figure 1: Front view of the AOC 24P1 monitor.

2. SAFETY INFORMATION

- Always place the monitor on a stable, level surface.
- Do not block ventilation openings.
- Use only the power adapter and cables supplied by the manufacturer.
- Keep the monitor away from water, moisture, and extreme temperatures.
- Disconnect the power cable from the outlet before cleaning.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in your package. If any items are missing or damaged, contact your retailer.

- AOC 24P1 Monitor
- Monitor Stand (Base and Neck)

- Power Cable (UK and EU versions may be included)
- HDMI Cable
- DisplayPort Cable
- USB-A to USB-B Cable (for USB hub functionality)
- Quick Setup Guide

4. SETUP

4.1 Assembling the Stand

1. Carefully remove the monitor and stand components from the packaging.
2. Attach the stand neck to the monitor panel. Ensure it clicks securely into place.
3. Attach the stand base to the stand neck and tighten the screw from the bottom of the base.
4. Place the assembled monitor on a stable desk or surface.





Figure 2: Side view illustrating the adjustable stand of the AOC 24P1 monitor.

4.2 Connecting Cables

Connect the necessary cables to the corresponding ports on the back of the monitor and your computer.



Figure 3: Rear view of the AOC 24P1 monitor, highlighting the video input ports (HDMI, DisplayPort).



Figure 4: Rear view of the AOC 24P1 monitor, showing the USB hub ports.

- **Power Connection:** Connect the power cable to the monitor's power input and then to a wall outlet.
- **Video Connection:** Connect either an HDMI cable or a DisplayPort cable from your computer's video output to the corresponding input on the monitor.
- **USB Hub Connection:** To enable the monitor's USB 3.0 hub, connect the supplied USB-A to USB-B cable from your computer's USB-A port to the USB-B upstream port on the monitor.
- **Audio Connection:** If using external speakers or headphones, connect them to the audio output jack on the monitor.

5. OPERATING THE MONITOR

5.1 Power On/Off

Press the power button located on the bottom right bezel of the monitor to turn it on or off. The power indicator light

will illuminate when the monitor is on.

5.2 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Use the buttons on the bottom right bezel to navigate the menu.

- Press any OSD button to activate the OSD menu.
- Use the navigation buttons to move through menu options.
- Press the 'Menu' or 'OK' button to select an option or enter a sub-menu.
- Press the 'Exit' button to return to the previous menu or exit the OSD.

5.3 Common Adjustments

- **Brightness/Contrast:** Adjust these settings for optimal image visibility.
- **Input Select:** Manually switch between HDMI, DisplayPort, or other available inputs.
- **Color Settings:** Fine-tune color temperature, gamma, and other color-related parameters.
- **Picture Mode:** Select from preset modes optimized for different content types (e.g., Standard, Text, Game, Movie).

6. MAINTENANCE

6.1 Cleaning the Monitor

- Always unplug the monitor from the power outlet before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild, non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals or abrasive materials.

6.2 General Care

- Avoid placing heavy objects on the monitor or its cables.
- Do not expose the monitor to direct sunlight for extended periods.
- Ensure adequate ventilation around the monitor to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common problems and solutions:

Problem	Possible Solution
No image on screen	Ensure power cable is securely connected. Check video cable connection. Verify correct input source is selected in OSD.
Image is too dark/bright	Adjust Brightness and Contrast settings in the OSD menu.
Colors are incorrect	Adjust Color Settings in the OSD menu. Reset color settings to factory defaults.
USB ports not working	Ensure the USB-A to USB-B upstream cable is connected between the monitor and your computer.

Problem	Possible Solution
No audio	Check audio cable connection to external speakers/headphones. Verify audio settings in OSD and computer.


8. SPECIFICATIONS

The following table outlines the technical specifications for the AOC 24P1 monitor:

Feature	Specification
Model Number	24P1
Screen Size	23.8 Inches
Panel Type	IPS (WLED)
Resolution	1920 x 1080 (Full HD)
Aspect Ratio	16:9
Response Time	5 ms (GtG)
Product Dimensions	8.27 x 14.96 x 19.29 inches
Item Weight	10.12 pounds
Total USB Ports	4 (USB 3.0 Hub)
Voltage	240 Volts
Screen Surface Description	Glossy

8.1 Energy Label Information

For detailed energy efficiency information, please refer to the energy label below or visit the official EU EPREL database.

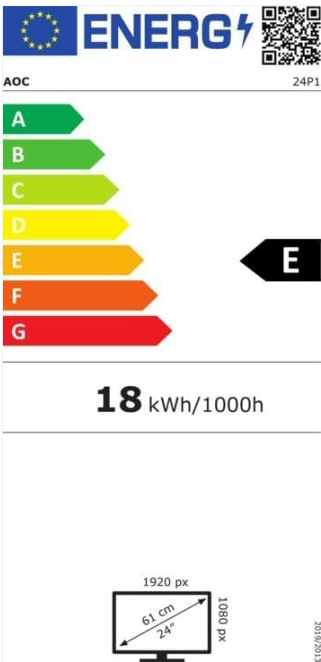

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and conditions for the AOC 24P1 monitor is typically provided with the product packaging or available on the official AOC website. For technical support, service, or warranty claims, please contact AOC customer service or your local retailer.

Please have your monitor's model number (24P1) and serial number ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BYVJ1ZN>

More documents and user manuals: <https://manuals.plus/>