



Manuals.plus /

› Clementoni /

› Clementoni Disney Baby Mickey Crawl With Me Interactive Plush Toy - Model 17237 User Manual

Clementoni 17237

Clementoni Disney Baby Mickey Crawl With Me Interactive Plush Toy - Model 17237 User Manual

1. PRODUCT OVERVIEW

The Clementoni Disney Baby Mickey Crawl With Me interactive plush toy, Model 17237, is designed to support early childhood development. This adorable Baby Mickey plush encourages motor skill development through imitation as it crawls. It also features two interactive buttons that introduce children to their first numbers and animal sounds.



Image 1.1: The Clementoni Disney Baby Mickey Crawl With Me Plush Toy. This image shows the plush toy in a crawling position, featuring its classic Mickey Mouse design with colorful clothing accents.

2. SAFETY INFORMATION

This product complies with relevant safety standards for children's toys. No specific safety warnings are provided beyond general toy safety practices. Please observe the following general safety guidelines:

- Always supervise children during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damage is found.
- Keep packaging materials away from children to prevent suffocation hazards.
- Ensure batteries are inserted correctly and kept out of reach of children.

3. PACKAGE CONTENTS

The package for Model 17237 contains:

- 1 x Clementoni Disney Baby Mickey Crawl With Me Interactive Plush Toy



Image 3.1: The Clementoni Disney Baby Mickey Crawl With Me toy in its retail packaging. The image displays the product box with Baby Mickey visible inside, highlighting its features and age recommendation.

4. SETUP

4.1 Battery Installation

The Baby Mickey toy requires batteries for operation, which are included with the product. To install or replace batteries:

1. Locate the battery compartment, typically on the underside or back of the toy.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

4.2 Power On/Off

Locate the power switch on the toy. This switch typically has two positions for volume control (high/low) and an off position. Slide the switch to either the high or low volume setting to turn the toy on.

5. OPERATING INSTRUCTIONS

The Baby Mickey Crawl With Me toy is designed for intuitive play. Its primary functions include crawling motion and interactive sound features.

5.1 Crawling Function

Once powered on, Baby Mickey will begin to crawl, encouraging children to follow and imitate its movements. For optimal performance, place the toy on a flat, hard surface. Avoid soft surfaces like carpets or sofas, as these may impede its movement.



Image 5.1: A baby crawling alongside the Clementoni Disney Baby Mickey toy. The image illustrates the toy's crawling motion and its role in encouraging a child's motor development.

5.2 Interactive Buttons

The toy features two interactive buttons, typically located on its body. Pressing these buttons will activate sounds and phrases designed to teach children their first numbers and animal sounds. Please note that the toy's spoken language is Italian.

5.3 Volume Control

The power switch also functions as a volume control. You can select between a high or low volume setting to suit your environment and preference.

6. MAINTENANCE AND CARE

To ensure the longevity and hygiene of your Baby Mickey toy, follow these care instructions:

- **Cleaning:** The toy is primarily made of fabric (80% fabric, 20% plastic). Surface clean only with a damp cloth. Do not immerse the toy in water.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

If you encounter any issues with your Baby Mickey toy, refer to the following common problems and solutions:

- **Toy does not turn on or respond:**
 - Check if the power switch is in the 'On' position (high or low volume).
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old or depleted batteries with new ones.
- **Toy does not crawl effectively:**
 - Ensure the toy is placed on a flat, hard surface. Soft surfaces can hinder movement.
 - Check for any obstructions around the toy's moving parts.
- **Sound is unclear or distorted:**
 - Adjust the volume setting using the power switch.
 - Replace batteries if they are low, as this can affect sound quality.
- **Language is Italian:**
 - This is the intended language for this specific model (17237). There is no option to change the language.

8. SPECIFICATIONS

Feature	Detail
Model Number	17237
Brand	Clementoni
Character	Disney Baby Mickey
Dimensions (L x W x H)	12.6 x 6.3 x 10.24 cm
Weight	800 grams
Recommended Age	12 months - 3 years
Educational Value	Fine motor skill development, learning first numbers and animal sounds
Language	Italian
Number of Pieces	1
Assembly Required	No
Batteries Required	Yes
Batteries Included	Yes
Main Material	Fabric (80% fabric, 20% plastic)
Remote Control Included	No
Color	Multicolor

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Clementoni website. Keep your proof of purchase for any warranty claims.