

Manuals.plus /

› Outsunny /

› Outsunny 13' x 13' Patio Gazebo Instruction Manual - Model 84C-052YL

Outsunny 84C-052YL

Outsunny 13' x 13' Patio Gazebo Instruction Manual

Model: 84C-052YL | Brand: Outsunny

1. IMPORTANT SAFETY INFORMATION

WARNING: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, please visit www.p65warnings.ca.gov.

- Assembly requires multiple individuals. It is recommended to have at least three people for safe and efficient assembly.
- Remove the canopy during extreme weather conditions such as storms, heavy winds, or significant rainfall to prevent damage to the gazebo structure and fabric.
- Ensure the gazebo is securely anchored to the ground using the provided stakes or additional weights for stability.
- Do not exceed the maximum weight capacity of any attached accessories or items hung from the frame.
- Regularly inspect all components for wear, damage, or loose connections. Replace damaged parts immediately.

2. PRODUCT OVERVIEW

The Outsunny 13' x 13' Hexagon Outdoor Gazebo Canopy Shelter provides a spacious and comfortable outdoor area. It features a double-tier roof for enhanced airflow and stability, along with mesh netting and privacy curtains for versatile usage.

Key Features:

- **Spacious Design:** Offers 115 square feet of coverage, comfortably accommodating 6-8 people.
- **Double-Tier Hexagon Roof:** Enhances breathability and reduces wind stress. Features mesh vents to deter insects and a PA coating for sun protection. Includes twelve drainage holes to prevent water accumulation.
- **Versatile Sidewalls:** Equipped with six zippered mesh nettings to keep insects out while allowing airflow, and six privacy curtains for protection against wind, UV rays, and glare.
- **Robust Construction:** Built with a powder-coated alloy steel frame for durability and water resistance.
- **Secure Anchoring:** Includes holes in the feet for staking to the ground, providing extra stability.



Figure 2.1: The Outsunny 13' x 13' Hexagon Gazebo with its double roof and tied-back curtains.

This image displays the fully assembled Outsunny 13' x 13' Hexagon Gazebo. It features a beige double-tier roof and beige privacy curtains, some of which are tied back to reveal the interior space. The sturdy steel frame is visible, providing a stable structure for outdoor use.

3. PACKAGE CONTENTS

Before assembly, ensure all components listed below are present and undamaged. Refer to the included manual for a detailed parts list and diagrams.



Figure 3.1: Gazebo components as received in the box.

This image shows the various components of the gazebo neatly packed within the shipping box. Parts are individually wrapped in plastic, including sections of the steel frame, fabric canopy, and smaller hardware. An instruction manual is also visible on top of the packaged items.

4. SETUP INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have at least three people for this process.

1. **Prepare the Area:** Choose a flat, level surface for assembly. Clear any obstacles and ensure sufficient space around the gazebo's footprint.
2. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify against the parts list in your manual.
3. **Assemble the Frame:** Connect the main steel frame components according to the diagrams in your manual. Ensure all connections are secure.
4. **Attach the Canopy:** Drape the main canopy fabric over the assembled frame. Secure it using the integrated hooks and loops or ties as indicated in the manual. Ensure the double-tier roof is correctly aligned for proper ventilation and drainage.

5. **Extend Legs and Secure:** Carefully extend the gazebo legs to their full height, ensuring they lock into place. Anchor the gazebo to the ground using the provided ground nails through the holes in the feet.
6. **Install Sidewalls:** Attach the mesh nettings and privacy curtains to the frame. The nettings and curtains feature zippers for easy opening and closing, and can be tied back when not in use.


MORE DETAILS —



Velcro Straps
tie to the curtains easily



Unique Fence Design
for extra stability

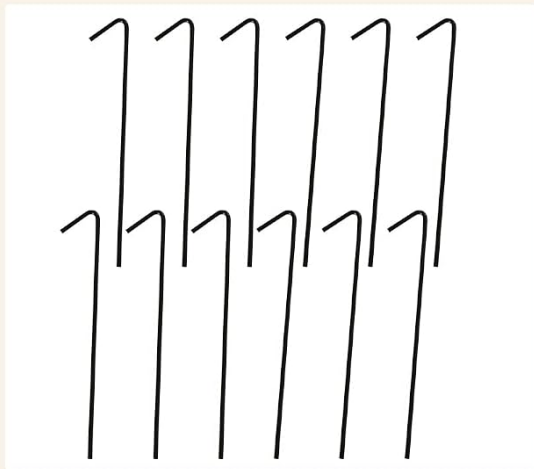

Ground Nails
to reinforce the gazebo



Hook & Loop
easy for connection

Figure 4.1: Close-up details of gazebo features including Velcro straps, fence design, ground nails, and hook & loop fasteners. This image highlights key structural and functional details of the gazebo. It shows Velcro straps for tying back curtains, a unique fence design for added stability, ground nails for securing the structure, and hook & loop fasteners for easy connection of fabric components.

5. OPERATING INSTRUCTIONS

The Outsunny gazebo is designed for flexible use in various outdoor conditions.

- **Adjusting Sidewalls:** The gazebo includes both mesh nettings and privacy curtains. These can be zipped closed to create an enclosed space, providing protection from insects, wind, and sun. They can also be tied back to the support posts for an open-air feel.
- **Ventilation:** The double-tier roof design allows for continuous airflow, preventing heat buildup and ensuring a

comfortable environment even when the sidewalls are closed.

- **Sun Protection:** The canopy fabric features a PA coating to protect against direct sunlight and harmful UV rays.

3-WAY USAGE GAZEBO



Enclosed curtains
can block wind



Mesh sidewalls create a
comfortable space



Opening sidewalls
for an open-air feel

Figure 5.1: Demonstrates the versatile usage options of the gazebo.

This image illustrates three configurations for the gazebo: fully enclosed with curtains for privacy and weather protection, enclosed with mesh sidewalls for insect protection and airflow, and open with all sidewalls tied back for an unobstructed outdoor experience.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your gazebo.

- **Cleaning Fabric:** Clean the canopy, mesh nettings, and curtains with mild soap and water. Rinse thoroughly and allow to air dry completely before storage or prolonged closure. Do not use harsh chemicals or abrasive cleaners.

- **Frame Care:** Periodically inspect the steel frame for any signs of rust or damage. Clean the frame with a damp cloth and mild detergent. If rust appears, clean the affected area and apply a rust-inhibiting paint.
- **Seasonal Storage:** During off-seasons or anticipated severe weather, it is highly recommended to disassemble the canopy and store it in a dry, protected area. This will prevent damage from heavy snow, ice, or prolonged exposure to harsh elements.
- **Drainage Holes:** Ensure the twelve drainage holes on the roof are clear of debris to prevent water pooling during rain.

7. TROUBLESHOOTING

- **Gazebo Instability:** Ensure all frame connections are tightly secured. Verify that ground stakes are fully inserted and the gazebo is anchored on a level surface. Consider using additional weight bags or bolting the feet to a deck for enhanced stability in windy conditions.
- **Water Accumulation on Roof:** Check that all twelve drainage holes on the double-tier roof are clear of debris. Ensure the canopy fabric is taut and properly installed to allow water to run off effectively.
- **Difficulty with Assembly:** Review the instruction manual's diagrams carefully. Ensure all parts are correctly oriented before attempting to connect them. Having the recommended number of people (at least three) for assembly can significantly ease the process.
- **Damaged Fabric:** For minor tears, repair kits may be available. For significant damage, contact customer support for replacement part options.

8. SPECIFICATIONS

Attribute	Detail
Brand	Outsunny
Model Number	84C-052YL
Material	Alloy Steel (Frame)
Color	Beige
Product Dimensions	153.5"L x 153.5"W x 112.5"H
Canopy Size	12.8' L x 12.8' W
Top Height	6.5' H
Eave Height	6.8' H
Side Length	6.5' L
Floor Area	115 Square Feet
Item Weight	90.6 Pounds
Water Resistance Level	Waterproof
Shape	Hexagonal
UV Protection	Yes

Assembly Required	Yes
-------------------	-----



Figure 8.1: Diagram illustrating the key dimensions of the gazebo.

This image provides a visual representation of the gazebo's dimensions, including the top height (6.5 ft), eave height (6.8 ft), and overall width/length (12.8 ft x 12.8 ft).

9. WARRANTY AND SUPPORT

For any questions, concerns, or to inquire about replacement parts, please contact the seller directly. Information regarding specific warranty terms can typically be found on the product's purchase page or by contacting the manufacturer.

- **Customer Support:** Contact Aosom Direct for assistance.
- **Returns:** Refer to the retailer's return policy for details on eligible returns.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BZKL4P7>

More documents and user manuals: <https://manuals.plus/>