

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION Induction Cooktop MD 17595 User Manual

MEDION MD 17595

MEDION Induction Cooktop MD 17595 User Manual

Model: MD 17595

1. INTRODUCTION

This user manual contains important information regarding the installation, operation, maintenance, and safety of your MEDION Induction Cooktop MD 17595. Please read this manual carefully before using the appliance and keep it for future reference.

The MEDION MD 17595 is a powerful induction cooktop with 2000 Watts of power, designed for efficient and safe cooking. It features an LED display with sensor-touch controls and various automatic programs.

2. SAFETY INFORMATION

Read all safety instructions carefully to prevent injury or damage to the appliance.

- **Electrical Safety:** Only connect the appliance to a grounded power outlet with the correct voltage. Unplug the appliance when not in use or before cleaning.
- **Suitable Cookware:** Only use cookware suitable for induction cooktops (ferromagnetic material). Pans with a diameter of up to 20 cm are optimal.
- **Hot Surfaces:** Although the cooktop itself remains relatively cool, the pan and the area around it can become hot. Do not touch the cooktop directly after use.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Never leave the appliance unattended during operation.
- **Ventilation:** Ensure adequate ventilation around the appliance. Do not block the ventilation openings.
- **Cleaning:** Only clean the appliance when it has cooled down and is unplugged from the power outlet.

3. PRODUCT OVERVIEW

The MEDION Induction Cooktop MD 17595 is designed for ease of use and efficiency.



Figure 3.1: General overview of the induction cooktop with a pan on it.

LED-display met sensor-touch

Eenvoudige en comfortabele bediening



Figure 3.2: Detail of the LED display and sensor-touch control buttons.

Key Components:

- **Cooking Surface:** Black crystal glass plate, scratch-resistant and easy to clean.
- **LED Display:** Shows power level, temperature, timer, and selected programs.
- **Sensor-Touch Control Panel:** For setting power, temperature, timer, and automatic programs.
- **Ventilation Openings:** For cooling the internal components.

4. INSTALLATION AND FIRST USE

4.1 Unpacking

- Carefully remove the induction cooktop from its packaging.

- Check that all parts are present and undamaged.
- Remove all packaging materials and any protective films.

4.2 Placement

- Place the induction cooktop on a stable, flat, and heat-resistant surface.
- Ensure sufficient space around the appliance (at least 10 cm on all sides) for optimal ventilation.
- Do not place the appliance near water sources or heat sources.

**Voor potten en pannen
tot 20 cm diameter**



Figure 4.1: Product dimensions and recommended pan size (up to 20 cm diameter).

4.3 Connection

- Plug the induction cooktop's power cord into a suitable grounded power outlet.

- The appliance is now ready for use.

5. OPERATION

5.1 Switching On and Off

- Place suitable cookware with contents on the cooking surface.
- Press the **On/Off** button (🔌) to switch on the appliance. The display will light up.
- To switch off, press the **On/Off** button again. The fan may continue to run for a short period to cool down the appliance.

5.2 Power and Temperature Setting

The cooktop offers 10 power levels and a temperature range from 60°C to 240°C.

2000 watt vermogen
Doelgericht koken met 10 temperatuurstanden tot 240 °C

60°C 80°C 100°C 120°C 140°C 160°C 180°C 200°C 220°C 240°C

Figure 5.1: Overview of power and temperature settings.

- After switching on, you can use the **+** and **-** buttons to set the desired power level.
- Press the **Temperature** button (if present) to switch between power and temperature modes. Then use the **+** and **-** buttons to adjust the temperature.

5.3 Automatic Programs

The cooktop is equipped with 8 automatic cooking programs for various dishes. Please refer to the manufacturer's manual for a detailed list of these programs and their specific settings.

- Press the **Program** button (if present) to cycle through the available automatic programs.
- The display will show the selected program. The appliance will automatically adjust the power and temperature.

5.4 Timer Function

The timer can be set for up to 180 minutes, after which the cooktop will automatically switch off.

180 minuten timer & uitschakelautomaat

Maximale veiligheid en comfort



Figure 5.2: The timer function, adjustable up to 180 minutes.

- Press the **Timer** button.
- Use the **+** and **-** buttons to set the desired cooking time.
- The cooktop will automatically switch off when the set time has elapsed.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures a long lifespan for your induction cooktop.

Zwarte kristallen glasplaat

Hoge temperatuurbestendigheid, krasvast en gemakkelijk te reinigen



Figure 6.1: Cleaning the cooking surface with a sponge.

- **Before Cleaning:** Ensure the cooktop has completely cooled down and is unplugged from the power outlet.
- **Cooking Surface:** Wipe the glass plate clean with a soft, damp cloth and a mild detergent. Do not use abrasive cleaners or sharp objects that could cause scratches.
- **Housing:** Clean the exterior of the appliance with a soft, slightly damp cloth.
- **Storage:** Store the cooktop in a dry place, protected from dust and direct sunlight.

7. TROUBLESHOOTING

Below are common problems and possible solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; plug not properly connected.	Check the power connection and the outlet.
Cooktop does not heat.	Pan is not suitable for induction; pan is too small/large; pan is not centered.	Use a ferromagnetic pan; ensure the pan is the correct size and centered.
Display shows an error code.	Overheating; internal malfunction.	Turn off the appliance, unplug it, and let it cool down. Refer to the full manual for specific error codes.
Fan makes noise after turning off.	Normal cooling procedure.	This is normal. The fan will stop automatically when the appliance has cooled sufficiently.

If the problem persists, please contact MEDION customer service.

8. SPECIFICATIONS

Specification	Value
Brand	MEDION
Model Number	MD 17595
Power	2000 Watt
Temperature Range	60-240°C (in 10 steps)
Automatic Programs	8
Timer	Up to 180 minutes
Dimensions (L x W x H)	36D x 29W x 6H cm (Product dimensions: 29 x 60 x 36 cm; 2.8 kg)
Weight	2.8 kg
Color	Black
Material	Glass
Control Type	Sensor-touch / Push button

9. WARRANTY AND SUPPORT

For warranty claims or technical support, please contact MEDION customer service.

- **Warranty:** Refer to your proof of purchase for specific warranty terms and period.
- **Contact:** Visit the official MEDION website for customer service contact details and frequently asked questions.
- **Online Resources:** For the most current information and support, visit the [official MEDION website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07C173JPH>

More documents and user manuals: <https://manuals.plus/>