

[Manuals.plus](#) /

› [Shop Japan](#) /

› Shop Japan Electric Pressure Cooker Pressure King PRO PKP-NXAM Instruction Manual

Shop Japan PKP-NXAM

Shop Japan Electric Pressure Cooker Pressure King PRO PKP-NXAM Instruction Manual

Model: PKP-NXAM | Brand: Shop Japan

1. INTRODUCTION

Thank you for choosing the Shop Japan Electric Pressure Cooker Pressure King PRO PKP-NXAM. This appliance is designed to simplify your cooking experience by offering a versatile range of functions and significantly reducing cooking times. Please read this instruction manual thoroughly before first use to ensure safe and optimal operation.



The Shop Japan Electric Pressure Cooker Pressure King PRO PKP-NXAM, featuring a sleek design and an intuitive control panel. The inner pot is visible, containing a meal ready for serving.

2. SAFETY INFORMATION

- Always ensure the lid is properly sealed and locked before starting any pressure cooking program.
- Never force the lid open while the cooker is pressurized. Wait until all pressure has been safely released.
- Use caution when releasing steam from the pressure release valve. Always use a utensil or oven mitt to avoid direct contact with hot steam.
- Do not immerse the main unit in water or other liquids. Clean with a damp cloth.
- Keep out of reach of children.
- Ensure the power cord is not damaged and is properly connected to a suitable power outlet (100 Volts).

3. PRODUCT OVERVIEW

3.1 Components

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot, removable for cleaning. Features MAX/MIN fill lines.
- **Lid:** Features a handle, pressure release valve, and sealing gasket.
- **Control Panel:** Digital display and touch buttons for various cooking functions and settings.

3.2 Control Panel Functions

The intuitive touch control panel offers a variety of pre-set programs and manual adjustments:

- **Pre-set Programs:** Stew, Rice, Fish, Meat, Pasta, Soup, Steam, Browning.
- **Delay Timer:** Set a delayed start for cooking.
- **Keep Warm/Slow Cook:** Maintains food temperature or allows for slow cooking.
- **Fast Reheat:** Quickly reheats food.
- **+/- Buttons:** Adjust cooking time or delay timer settings.
- **Cancel:** Stops the current cooking program.

ボタンを押すだけ！ かんたん 電気圧力なべ

1台
6役

調理時間
最大 **1/10**



This image illustrates the simplicity of operation and the versatility of the Pressure King PRO, capable of performing six different cooking functions with just a press of a button, significantly reducing cooking time.

ご飯も炊ける、1台6役



圧力調理

圧力調理はもちろん、
6つの調理がこれ一台

蒸し調理

炊飯

煮込み

無水調理

温め直し



A visual representation of the Pressure King PRO's diverse capabilities, including pressure cooking, steaming, rice preparation, stewing, waterless cooking, and reheating, making it a comprehensive kitchen appliance.

4. SETUP

1. Unpack all components and remove any packaging materials.
2. Wash the inner pot, lid, and sealing gasket with warm, soapy water. Rinse thoroughly and dry completely.
3. Place the inner pot into the main unit, ensuring it sits correctly and is level.
4. Ensure the sealing gasket is properly seated around the lid's rim.
5. Place the pressure cooker on a stable, level, heat-resistant surface away from heat sources.
6. Plug the power cord into a 100 Volt electrical outlet. The display will illuminate.

5. OPERATING INSTRUCTIONS

5.1 Filling the Inner Pot

Add your ingredients to the inner pot. Observe the MAX and MIN fill lines inside the pot. Do not exceed the MAX line for pressure cooking, and ensure liquid levels are above the MIN line.

5.2 Closing and Locking the Lid

1. Place the lid on the main unit, aligning the 'V' mark on the lid with the corresponding mark on the main unit.
2. Turn the lid clockwise until it locks into place. You will hear a click, and the 'V' mark on the lid will no longer align with the mark on the main unit.

5.3 Setting the Pressure Release Valve

For pressure cooking, ensure the pressure release valve on the lid is set to the '**Closed**' position. This prevents steam from escaping and allows pressure to build inside the cooker.

5.4 Selecting a Cooking Program

1. Press the desired pre-set program button (e.g., Meat, Rice, Stew). The default cooking time for that program will appear on the digital display.
2. To adjust the cooking time, use the '+' or '-' buttons.
3. The cooker will automatically begin the pre-heating phase, and then the cooking cycle will start.



※乾燥黒豆の浸水時間を含む調理時間との比較
※予熱時間は含めません。 ※食材の量や状態により異なります。

This graphic highlights the efficiency of the Pressure King PRO, showcasing significantly reduced cooking times for popular dishes such as Oden, Curry, and Rice, demonstrating up to a 90% reduction compared to conventional methods.

5.5 Releasing Pressure and Opening the Lid

1. Once cooking is complete, the cooker will beep and may switch to a 'Keep Warm' setting.
2. To release pressure, carefully turn the pressure release valve to the '**Open**' position using a long-handled utensil or oven mitt. **Do not use bare hands as hot steam will be released.**
3. Wait until all steam has been released and the float valve drops down. The lid cannot be opened until the pressure is fully released.
4. Once pressure is released, turn the lid counter-clockwise to unlock it, aligning the 'V' mark on the lid with the mark on the main unit.
5. Carefully lift the lid away from your face to avoid any residual steam.

プレッシャーキングプロのメリット

MERIT1

食材は
冷凍のままでOK



冷凍のまま食材
を入れてOK！
解凍する手間
が省けます。

MERIT2

便利な
タイマー機能付き



タイマーをセッ
トしておけば、
出来たて料理
がすぐに食べら
れます。

MERIT3

片付け
ラクラク



後片付けは、焦
げ付き防止加
工の内釜をサ
ッと洗うだけ
でOK！

Key advantages of the Pressure King PRO are presented, including the ability to cook ingredients directly from frozen, a convenient timer function for delayed cooking, and a non-stick inner pot designed for effortless cleaning.



A collage of nine diverse and delicious dishes, illustrating the wide range of meals that can be effortlessly prepared with the Pressure King PRO electric pressure cooker.

6. MAINTENANCE AND CLEANING

- **Inner Pot:** The inner pot is **NOT dishwasher safe**. Wash by hand with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly.
- **Lid:** Remove the sealing gasket and wash it with warm, soapy water. Clean the lid, including the pressure release valve area, with a damp cloth. Ensure all parts are dry before reassembling.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.
- Regularly check the pressure release valve and float valve to ensure they are not blocked by food debris.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid cannot be opened after cooking.	Pressure has not been fully released.	Ensure the pressure release valve is in the 'Open' position and wait until all steam has escaped and the float valve drops.
Steam leaks from around the lid during cooking.	Sealing gasket is not properly seated or is damaged.	Check the sealing gasket for proper placement and damage. Replace if necessary. Ensure the lid is correctly locked.
Food is undercooked.	Insufficient cooking time or liquid.	Increase cooking time using the '+' button. Ensure adequate liquid is added according to recipe.

8. SPECIFICATIONS

Feature	Detail
Brand	Shop Japan
Model Number	PKP-NXAM
Capacity	3.2 Liters
Material	Stainless steel
Finish Type	Chrome
Special Feature	Keep Warm Setting
Wattage	700 watts
Item Weight	3.6 Kilograms (7.92 pounds)
Control Method	Touch
Operation Mode	Automatic
Dishwasher Safe	No
Voltage	100 Volts
Product Dimensions	11.22 x 10.75 x 11.61 inches

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Shop Japan customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question