



Manuals.plus /

› NOXARTE /

› NOXARTE 42 Inch Crystal Chandelier Fan User Manual

## NOXARTE YJ8563

# NOXARTE 42 Inch Crystal Chandelier Fan User Manual

Model: YJ8563

## 1. INTRODUCTION

Thank you for choosing the NOXARTE 42 Inch Crystal Chandelier Fan. This modern fixture combines the elegance of a crystal chandelier with the functionality of a ceiling fan, featuring retractable blades and LED dimmable lighting. This manual provides detailed instructions for safe installation, operation, and maintenance to ensure optimal performance and longevity of your product.



Figure 1.1: The NOXARTE 42 Inch Crystal Chandelier Fan, showcasing its elegant design and retractable blades.

## 2. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always disconnect power at the main circuit breaker before installation or servicing.
- Installation should be performed by a qualified electrician to ensure proper wiring and safety compliance.
- Ensure the mounting structure can support the weight of the fan (approximately 37.3 pounds).
- Do not bend the fan blades when installing or cleaning.
- Use only the remote control provided with the fan.

## 3. PRODUCT FEATURES

---

- **LED Dimmable Lighting:** Integrated 36-watt LED panel with 3 color temperatures (2700K Warm White, 4500K Day Light, 6000K Cool White). Brightness is fully dimmable.
- **Remote Control:** Independent control for fan speed and light settings, including timing control and reverse function.

- **Silent Motor:** Equipped with a quiet motor for strong airflow with minimal noise, enhancing sleep quality. Features 6-speed settings.
- **Retractable Blades:** Four acrylic blades extend to 42 inches when the fan is on and retract to 21 inches when off, seamlessly integrating into the chandelier design.
- **Two-Way Rotation:** Supports both downdraft mode for cooling in summer and updraft mode for improved air circulation in winter.
- **Elegant Crystal Design:** Features K9 crystal decoration for a luxurious aesthetic.

## CEILING FAN WITH LIGHT DETAIL



Figure 3.1: Key components and features of the ceiling fan with light.

# LED DIMMABLE

Brightness can be adjusted from weak to strong

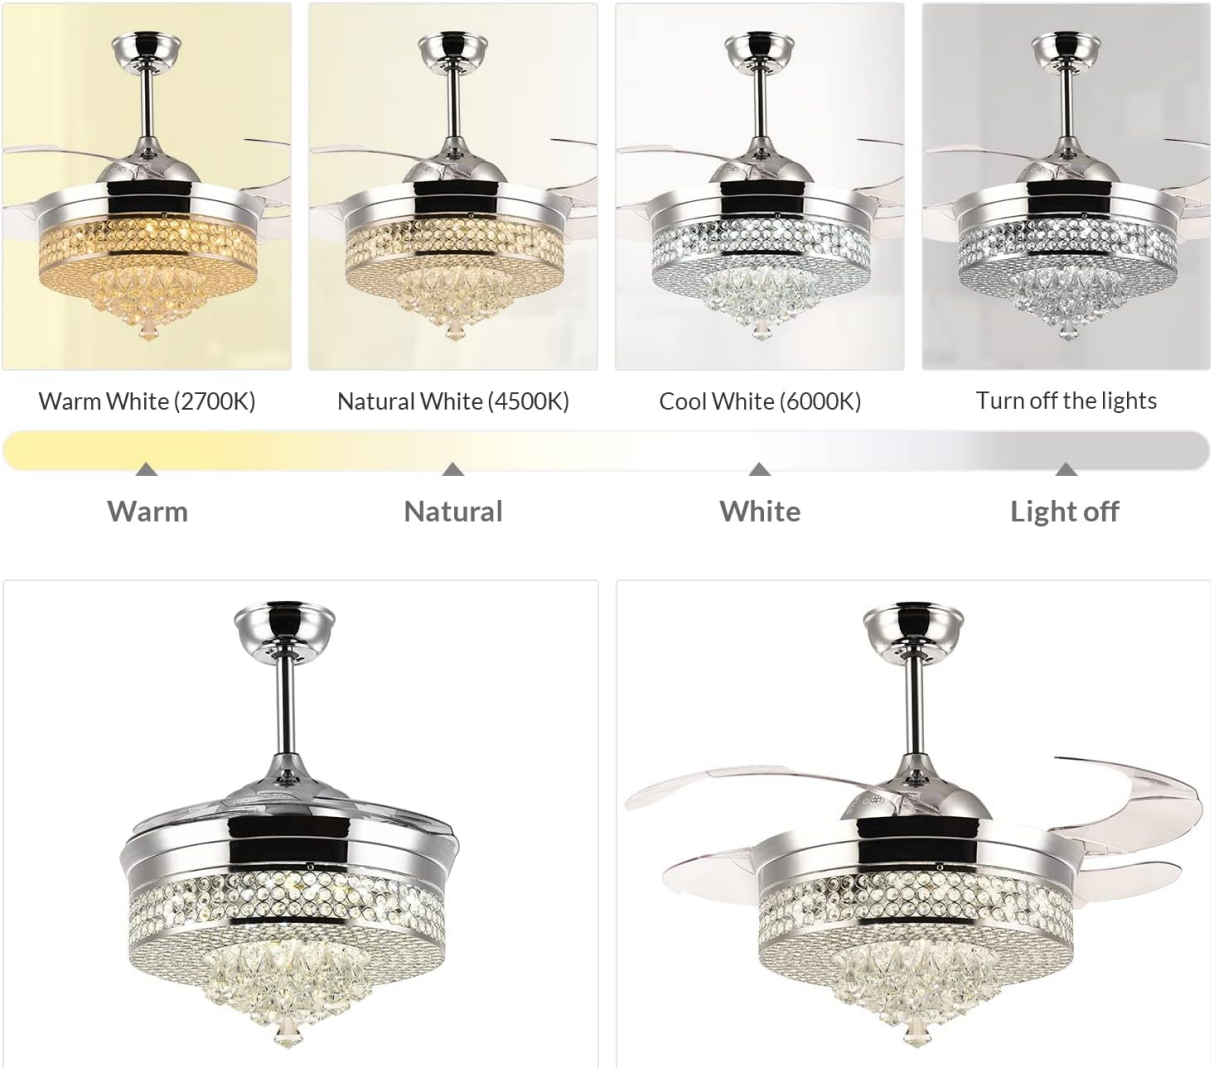


Figure 3.2: Adjustable LED light temperatures from warm to cool white.

## FORWARD AND REVERSE FUNCTION



Figure 3.3: Forward and reverse function for year-round comfort.



Figure 3.4: Fan speed settings for various comfort levels.

## 4. SETUP AND INSTALLATION

Professional installation is highly recommended for this product due to its electrical nature and assembly requirements. Ensure all components are present before beginning installation.

### 4.1 Package Contents

- Chandelier Fan Body with Retractable Blades
- Remote Control
- Mounting Bracket and Hardware
- Downrods (typically 5" and 10" options)
- Crystal Decorations
- Instruction Manual

### 4.2 Dimensions

# CEILING FAN WITH LIGHT SIZE



Figure 4.1: Product dimensions for installation planning.

## 4.3 Installation Steps (Overview)

1. Turn off power at the circuit breaker.
2. Mount the ceiling bracket securely to the junction box.
3. Assemble the downrod and canopy to the fan motor.
4. Perform electrical wiring connections (Live, Neutral, Ground).
5. Secure the fan assembly to the ceiling bracket.
6. Attach the crystal decorations and light panel.
7. Restore power and test the fan and light functions.

## 5. OPERATING INSTRUCTIONS

The NOXARTE Chandelier Fan is operated using the included remote control. Ensure the remote has working batteries (not included).

### 5.1 Remote Control Functions

## REMOTE CONTROL INSTRUCTIONS



### Here is a quick way to check the fandelier:

1. Turn off the wall switch for about 1 minute to run out the power in the fandelier, and get the remote ready.
2. Then turn on the switch again. The lights will on with a short double beep sound. (Per your reply, your fandelier works in this step.)
3. Long press the "SET UP" key within 5 seconds once the light is on. Signal will be matched with the light blinking for one time.
4. Then try to control the fan with the remote, see if the fan works accordingly.

Figure 5.1: Remote control layout and functions.

- **Lights On/Off:** Toggles the light on or off.
- **Quick Switch for Light Colors:** Cycles through Warm White, Natural White, and Cool White.
- **Night Mode Button:** Activates a low-light setting.
- **Adjust Color Temperature (+/-):** Fine-tunes the light color temperature.
- **2H Timing:** Sets a 2-hour timer for the fan.
- **F/R (Forward/Reverse Wind):** Changes the fan's rotation direction for summer (downdraft) or winter (updraft) modes.
- **6 Fan Speed Buttons (1-6):** Selects desired fan speed.
- **Wind Speeds Changed Auto:** Activates an automatic fan speed cycle.
- **Turn Off the Fan:** Stops the fan.
- **ALL OFF:** Turns off both lights and fan.

### 5.2 Remote Pairing Instructions

1. Turn off the wall switch for the fan for approximately 1 minute to fully discharge power.
2. Turn the wall switch back on. The lights will illuminate with a short double beep sound.
3. Within 5 seconds of turning the light on, long press the "SET UP" key on the remote. The light will blink once to confirm successful pairing.

4. Test all remote functions to ensure proper operation.

### 5.3 Official Product Video

Watch this official video from NOXARTE Lighting demonstrating the crystal ceiling fan's features and appearance.

Video 5.1: NOXARTE Crystal Ceiling Fan Lighting Buyer Show. This video provides a visual overview of the fan's design and lighting effects.

## 6. MAINTENANCE AND CARE

Regular cleaning will help maintain the appearance and performance of your fan.

- Before cleaning, ensure the fan is turned off and power is disconnected at the circuit breaker.
- Wipe the motor housing and blades with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For crystal components, use a soft, lint-free cloth. A mild glass cleaner can be used sparingly if needed, applied to the cloth, not directly to the crystals.
- Periodically check all connections and screws to ensure they are secure.

## 7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate / Light does not turn on	No power supply; Loose wiring; Remote not paired; Remote batteries dead.	Check circuit breaker; Verify all wire connections; Re-pair remote (see Section 5.2); Replace remote batteries.
Fan makes excessive noise	Loose screws; Blades unbalanced; Motor issue.	Tighten all screws; Check blade balance; Contact customer support if motor noise persists.
Light flickers or changes color unexpectedly	Loose wiring to LED panel; Remote interference.	Check light panel connections; Ensure no other devices are interfering with remote signal.
Remote control beeps loudly	Normal operation sound (confirmation beep).	This is a characteristic of the product and cannot be adjusted.

If you are unable to resolve an issue after consulting this section, please contact NOXARTE customer support.

## 8. SPECIFICATIONS

Attribute	Detail
Brand	NOXARTE
Model Number	YJ8563
Size	42 Inch (extended)
Material	Crystal, Acrylic, Metal
Light Source Type	LED
Voltage	110 Volts
Control Method	Remote Control
Item Weight	37.3 pounds
Product Dimensions	42"L x 42"W x 18"H
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact NOXARTE customer service directly. Contact details can typically be found on the product packaging or the official NOXARTE website.