



Manuals.plus /

› Tefal /

› Tefal CY505E40 All-in-One Electric Pressure / Multi Cooker User Manual

Tefal CY505E40

Tefal All-in-One Electric Pressure / Multi Cooker

MODEL: CY505E40

Introduction

Welcome to the user manual for your new Tefal CY505E40 All-in-One Electric Pressure / Multi Cooker. This versatile appliance is designed to simplify your cooking process, offering a wide range of functions including pressure cooking, slow cooking, steaming, and more. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Do not open until the unit has cooled and internal pressure has been released.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dehydrated vegetables, do not fill the unit over 1/2 full.
- Do not use this pressure cooker for deep frying with oil.
- This appliance is for household use only.

Product Overview

Familiarize yourself with the components of your Tefal All-in-One Electric Pressure / Multi Cooker.



Image: Front view of the Tefal CY505E40 Electric Pressure Cooker, showing the main unit, lid, and control panel with digital display.

Tefal

Fast & Delicious Multicooker
ELECTRICAL PRESSURE COOKER

COUNTLESS RECIPES,
PERFECTLY COOKED IN NO TIME!

Comfortable
and robust handles

Safe pressure
release button

LED display

Durable and elegant
Stainless Steel body

Adjustable time
and temperature
for personalized results

User friendly
control panel
including 25
automatic programs,
keep warm, delayed
start and timer

6L
1000-1200W

Electric Pressure Cooker, Slow Cooker & more...

Image: Diagram highlighting key features of the Tefal CY505E40: LED display, comfortable and robust handles, durable and elegant Stainless Steel body, user-friendly control panel with 25 automatic programs, adjustable time and temperature, and a safe pressure release button. The cooker has a 6L capacity and 1000-1200W power.

Key Components:

- **Main Unit:** The base housing the heating element and control panel.
- **Lid:** Features a hinged design for easy opening and closing, with a pressure release valve and safety mechanisms.
- **Inner Pot:** Non-stick cooking pot, removable for easy cleaning.
- **Control Panel:** Digital LED display and push-button controls for various cooking programs and settings.
- **Pressure Release Button:** Dedicated button for safely releasing pressure.

Setup

Before using your multi cooker for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and accessories.

2. **Clean:** Wash the inner pot, sealing gasket, and lid components with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. **Note: The main unit is NOT dishwasher safe.**
3. **Assemble:** Ensure the sealing gasket is properly seated around the lid. Place the inner pot into the main unit.
4. **Placement:** Place the appliance on a stable, level, heat-resistant surface, away from heat sources and direct sunlight. Ensure adequate ventilation around the unit.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (240 Volts). The display will illuminate.



Image: A person adding ingredients into the inner pot of the Tefal Electric Pressure Cooker, demonstrating the ease of preparation before cooking.

Operating Instructions

Your Tefal All-in-One Multi Cooker features a user-friendly control panel with 25 automatic programs for various cooking needs.

General Operation:

1. **Add Ingredients:** Place your desired ingredients into the inner pot. Ensure the liquid level does not exceed the MAX fill line for pressure cooking.
2. **Close Lid:** Close the lid securely. For pressure cooking, ensure the lid is properly locked and the pressure release valve is in the sealed position.
3. **Select Program:** Use the control panel buttons to select one of the 25 pre-set cooking programs (e.g., Rice, Oatmeal, Baby Food, Veg, Fish, Meat, Stew/Soup, Steam, Brown, Simmer, Slow Cook, Reheat, Bake, DIY).
4. **Adjust Settings (Optional):** For some programs, you can adjust cooking time and temperature using the +/- buttons. The LED display will show the current settings.
5. **Start Cooking:** Press the "Start" button to begin the cooking cycle. The cooker will automatically preheat and then begin the selected program.
6. **Pressure Release (for Pressure Cooking):** Once pressure cooking is complete, the cooker will beep. You can choose

between Natural Release (allow pressure to dissipate naturally) or Quick Release (press the dedicated pressure release button to quickly vent steam). **Always keep hands and face clear of the steam release valve.**

7. **Keep Warm:** After cooking, the appliance may automatically switch to a "Keep Warm" function.



Image: Close-up view of the top of the Tefal Electric Pressure Cooker lid, showing the separate buttons for pressure release, emphasizing the safety feature.

Specific Functions:

- **Pressure Cook:** Ideal for fast cooking of meats, stews, and legumes. Select the appropriate program (e.g., Meat, Stew/Soup) and ensure the lid is sealed.
- **Slow Cook:** Perfect for tenderizing tougher cuts of meat or preparing dishes that benefit from long, gentle cooking. Select "Slow Cook" and set your desired time.
- **Steam:** Use the steam function for vegetables, fish, or dumplings. A steaming rack (if included) can be used.
- **Brown/Sauté:** This function allows you to brown ingredients directly in the inner pot before adding liquids for pressure or slow cooking.
- **DIY Mode:** Provides manual control over cooking time and temperature, allowing for customized recipes.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your appliance.

- **Always Unplug:** Before cleaning, always unplug the cooker from the power outlet and allow it to cool completely.
- **Inner Pot:** The non-stick inner pot can be washed with warm, soapy water and a soft sponge. Rinse thoroughly and dry. It is not recommended for dishwasher use to preserve the non-stick coating.
- **Lid:** Remove the sealing gasket and wash it along with the lid under warm, soapy water. Clean the steam release valve and anti-block shield to ensure no food particles are obstructing them.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. **Never immerse the main unit in water or any other liquid.**
- **Storage:** Store the cooker in a dry place. Ensure all parts are clean and dry before storage.

Troubleshooting

If you encounter issues with your Tefal Multi Cooker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cooker not turning on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged in. Check circuit breaker. Try a different outlet.
Pressure not building.	Lid not properly closed/sealed; sealing gasket not in place or damaged; insufficient liquid.	Ensure lid is locked correctly. Check sealing gasket for proper placement and damage. Add more liquid if necessary.
Steam leaking from lid.	Sealing gasket dirty or damaged; food debris on rim; lid not properly closed.	Clean or replace sealing gasket. Clean lid rim. Ensure lid is closed and locked correctly.
Food undercooked/overcooked.	Incorrect cooking time/temperature; insufficient liquid; power fluctuation.	Adjust cooking time/temperature. Ensure adequate liquid. Consult recipes for recommended settings.
Error code on display.	Specific internal issue.	Refer to the full manual for specific error code meanings. Unplug and plug back in. If persistent, contact customer support.

Specifications

Feature	Detail
Brand	Tefal
Model Number	CY505E40
Capacity	6 Liters
Material	Stainless Steel
Color	Black/Steel
Wattage	1200 watts
Voltage	240 Volts
Control Method	Touch / Push Button
Product Dimensions	5.27 x 5.27 x 6.15 inches
Item Weight	12.79 pounds
Dishwasher Safe Parts	No (Inner pot and lid components are hand-washable)

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Tefal website.

Online Support: www.tefal.com

Please have your model number (CY505E40) and purchase date ready when contacting support.

Official Product Videos

No official product videos from the seller are available for embedding at this time.