

[Manuals.plus](#) /

› [Philips](#) /

› Philips S1030/04 Wet and Dry Electric Shaver User Manual

Philips S1030

Philips S1030/04 Wet and Dry Electric Shaver

Model: S1030

INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips S1030/04 Wet and Dry Electric Shaver. Designed for both wet and dry shaving, this shaver offers a protective shave against nicks and cuts, ensuring enhanced skin comfort. Please read these instructions carefully before first use and retain them for future reference.

SAFETY INFORMATION

- Ensure the appliance is unplugged before cleaning.
- Do not use the shaver while it is connected to the power cable. This appliance operates in cordless mode only.
- Keep the appliance dry when charging.
- This appliance is 100% waterproof and can be rinsed under the tap. Ensure the charging part is dry before connecting to power.
- Do not use if the appliance or charging cable is damaged.
- Keep out of reach of children.

PRODUCT OVERVIEW

The Philips S1030/04 features a sleek design with advanced shaving technology. Key components include:

- **Shaving Heads:** Equipped with 3 independent, flexible heads that adjust to facial contours.
- **CloseCut Blade System:** Self-sharpening precision blades for a reliable clean shave.
- **Power Button:** For turning the shaver on and off.
- **Charging Indicator:** Light to show charging status.
- **Ergonomic Grip:** Designed for easy and comfortable handling.



Image: Philips S1030/04 Wet and Dry Electric Shaver, showcasing its black and blue design.



3 directional flex heads

Image: Close-up of the shaver heads, highlighting the 3 directional flex heads that adapt to facial curves for a close shave.

SETUP

Charging the Shaver

1. Ensure the shaver is dry before charging.
2. Connect the charging cable to the shaver and plug it into a power outlet.
3. The charging indicator light will illuminate.
4. A full charge takes approximately 10 hours and provides 45+ minutes of cordless running time (about 15 shaves).
5. The shaver only operates in cordless mode. Unplug before use.

OPERATING INSTRUCTIONS

Shaving Techniques

The Philips S1030/04 can be used for both wet and dry shaving.

Dry Shave:

- Ensure your face is clean and dry.
- Press the power button to turn on the shaver.
- Move the shaver in small, circular motions over your skin.
- Stretch the skin with your free hand to ensure a closer shave, especially in tricky areas.

Wet Shave (with gel or foam):

- Wet your face and apply shaving gel or foam.
- Press the power button to turn on the shaver.
- Move the shaver in small, circular motions over your skin.
- The Aquatec seal ensures a safe, refreshing wet shave, even under the shower.



Image: A man using the Philips S1030/04 shaver with shaving foam, demonstrating a wet shave.



45 mins of cordless running time – that's about 15 shaves

Image: An illustration indicating the shaver provides 45 minutes of cordless running time, equivalent to approximately 15 shaves.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the shaver.
2. Open the shaving head unit (refer to product diagram for specific mechanism).
3. Rinse the shaving heads and the hair chamber thoroughly under warm running water.
4. Shake off excess water and allow the shaver to air dry completely before closing the head unit or storing.
5. The shaver is fully washable.

Blade Replacement

The self-sharpening blades are designed for long-lasting performance. It is recommended to replace the shaving heads

every 2 years for optimal shaving results.



Self sharpening blades

Image: A magnified view of the shaver's internal mechanism, illustrating the self-sharpening blade technology for consistent performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for 10 hours. Ensure it is unplugged before attempting to use.
Poor shaving performance.	Blades are dull or clogged with hair.	Clean the shaving heads thoroughly. Consider replacing shaving heads if they are older than 2 years.

Problem	Possible Cause	Solution
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are using small, circular motions. Try wet shaving with gel or foam for enhanced comfort. Allow skin to adapt.

SPECIFICATIONS

- **Model:** S1030
- **Power Source:** Battery Powered; Corded Electric (for charging only)
- **Automatic Voltage:** 100-240 V
- **Max Power Consumption:** 2 W
- **Stand-by Power:** 0.1W
- **Charging Time:** 10 hours for full charge
- **Running Time:** 45+ minutes (approx. 15 shaves)
- **Blade Material:** Stainless Steel
- **Head Type:** Rotary, Flex heads with 3 independent movements
- **Waterproof:** 100% washable
- **Item Weight:** 286 g
- **Product Dimensions:** 0.7 x 0.9 x 1.7 cm

WARRANTY AND SUPPORT

Your Philips S1030/04 Electric Shaver comes with a **2-year worldwide guarantee**.

For support, service, or further information, please refer to the official Philips support channels or visit their website.

Ensure to keep your purchase receipt as proof of purchase for warranty claims.

This product is designed to adapt to any voltage (100-240V).