

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [beFree Sound](#) /

› [Befree Sound Dual 10 Inch Subwoofer Bluetooth Portable Party Speaker with Sound Reactive Party Lights, USB/SD Input, Rechargeable Battery, Remote Control and 2 Wireless Microphones](#)

beFree Sound Light Up Party speaker

Befree Sound Dual 10 Inch Subwoofer Bluetooth Portable Party Speaker

Model: Light Up Party speaker

Brand: beFree Sound

INTRODUCTION

Thank you for choosing the Befree Sound Dual 10 Inch Subwoofer Bluetooth Portable Party Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Figure 1: Befree Sound Dual 10 Inch Subwoofer Bluetooth Portable Party Speaker. This image displays the speaker's front view, highlighting its dual 10-inch subwoofers with reactive party lights, the top control panel, and the included wireless microphones and remote control.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Befree Sound Dual 10 Inch Subwoofer Bluetooth Portable Party Speaker
- Remote Control
- 2 Wireless Microphones
- Power Cable
- User Manual (this document)

PRODUCT FEATURES

- Dual 10-inch Subwoofers for powerful sound output.
- Bluetooth connectivity for wireless audio streaming.
- USB and SD card inputs for direct media playback.
- FM Radio tuner.
- Sound-reactive party lights with dual layers.
- Rechargeable battery for portable use.
- Includes 2 wireless microphones for karaoke or public address.
- Remote control for convenient operation.
- Integrated handles (top, side, extendable back handle) and dual caster wheels for easy portability.
- Adjustable Treble, Bass, Echo, and Volume controls.



Figure 2: Key features of the speaker, including the extendable handle, top panel controls, embedded side handle, and dancing lights woofers.

SETUP

1. Unpacking and Placement

1. Carefully remove the speaker and all accessories from the packaging.
2. Place the speaker on a stable, flat surface. Ensure there is adequate ventilation around the unit.

2. Powering On and Charging

1. Locate the power input on the back of the speaker.
2. Connect the provided power cable to the speaker's power input and then to a standard AC power outlet (110V-220V/50Hz-60Hz).
3. Flip the power switch to the "ON" position. The speaker will power on.
4. For initial use, it is recommended to fully charge the internal rechargeable battery. The charging indicator light will show the charging status.

EXTENDABLE HANDLE



TWO CASTER WHEELS

Figure 3: Rear view of the speaker, showing the power input, AUX input, and power switch. The extendable handle and two castor wheels are also visible.

3. Connecting Microphones

1. The speaker comes with two wireless microphones. Ensure they have batteries installed.
2. Turn on the wireless microphones. They should automatically pair with the speaker.
3. For wired microphones (not included), connect them to the microphone input jacks on the speaker's control panel.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Turn on the speaker.
2. Press the "MODE" button on the control panel or remote until "Bluetooth" mode is selected. The display will show "BLUE" and a Bluetooth icon may flash, indicating it's ready for pairing.

3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Befree Sound" (or similar name) from the list. Once paired, the speaker will emit a confirmation sound, and the Bluetooth icon will stop flashing.
5. You can now play audio from your device through the speaker.

2. USB/SD Card Playback

1. Insert a USB flash drive or SD card into the respective slot on the control panel.
2. The speaker will automatically switch to USB/SD mode and begin playing compatible audio files. If not, press the "MODE" button to select USB or SD mode.
3. Use the Play/Pause, Next, and Previous buttons on the control panel or remote to navigate tracks.

3. FM Radio

1. Press the "MODE" button until "FM" mode is selected.
2. Press and hold the Play/Pause button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the Next and Previous buttons to switch between saved stations.

4. AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX input jack on the speaker using a 3.5mm audio cable (not included).
2. Press the "MODE" button until "AUX" mode is selected.
3. Control playback from your connected device.

5. Microphone Usage and Audio Adjustment

1. Ensure microphones are connected and powered on.
2. Use the dedicated "MIC VOL" knob on the control panel to adjust the microphone volume.
3. Adjust the "ECHO" knob to add reverberation to the microphone sound for a karaoke effect.
4. The main "VOLUME" knob controls the overall speaker volume.
5. Use the "TREBLE" and "BASS" knobs to fine-tune the audio output to your preference.

6. Controlling Party Lights

1. The speaker features sound-reactive party lights on the woofers.
2. To turn off the lights, locate the "LED POWER" switch on the back of the speaker and toggle it to the "OFF" position.





Figure 4: Close-up view of the speaker's dual 10-inch woofers, showcasing the vibrant, sound-reactive LED lights.

MAINTENANCE

1. Cleaning

1. Before cleaning, ensure the speaker is powered off and unplugged from the power outlet.
2. Use a soft, dry cloth to wipe down the exterior surfaces of the speaker.
3. Do not use liquid cleaners, abrasive cleaners, or solvents, as these may damage the finish.

2. Storage

1. Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
2. If storing for an extended period, it is recommended to charge the battery fully every 3-6 months to maintain its lifespan.

3. Battery Care

1. Avoid completely draining the battery frequently.
2. Do not expose the battery to excessive heat or cold.
3. If the battery performance significantly degrades, contact customer support for assistance.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|---|
| Speaker does not power on. | No power, battery drained, power switch off. | Ensure power cable is securely connected and plugged into a live outlet. Check if the power switch is ON. Charge the battery. |
| No sound from speaker. | Volume too low, incorrect mode selected, device not connected properly. | Increase the main volume. Press "MODE" to select the correct input (Bluetooth, USB, SD, AUX, FM). Ensure Bluetooth device is paired or AUX cable is fully inserted. |
| Bluetooth pairing fails. | Speaker not in pairing mode, device too far, interference. | Ensure speaker is in Bluetooth mode and flashing. Move device closer to speaker. Turn off other Bluetooth devices to reduce interference. Try unpairing and re-pairing. |
| Microphone volume is low or music volume decreases when using microphone. | MIC VOL knob too low, microphone batteries low, system design. | Increase the "MIC VOL" knob. Replace microphone batteries. Note: Some systems may prioritize microphone input, causing a slight dip in music volume. Adjust overall volume and MIC VOL for balance. |
| Party lights are not working. | LED POWER switch is off. | Check the "LED POWER" switch on the back of the speaker and ensure it is in the "ON" position. |

SPECIFICATIONS

| Feature | Detail |
|---------------|--------------------------|
| Brand | beFree Sound |
| Model Number | Light Up Party speaker |
| Mounting Type | Freestanding, Plug Mount |
| Power Source | DC |

| Feature | Detail |
|--------------------------------|---|
| Connector Type | Aux |
| Item Weight | 42 Pounds (19.05 kg) |
| Output Wattage | 700 Watts |
| Number of Channels | 2 |
| Audio Input | Bluetooth, USB, SD, FM Radio, Wireless Microphones, Wired Microphones |
| Product Dimensions (L x W x H) | 42.5 x 17 x 15.5 inches (108 x 43.2 x 39.4 cm) |
| Color | Black |
| Compatible Devices | Smartphone |
| UPC | 602573510360 |

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official beFree Sound website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please contact beFree Sound customer service for further assistance.

