
[Manuals.plus](#) /

› [GE home electrical](#) /

› GE Backlit Universal Remote Control User Manual

GE home electrical 40081

GE Backlit Universal Remote Control User Manual

Model: 40081 | Brand: GE home electrical

INTRODUCTION

The GE 4-Device Universal Remote Control is designed to simplify your home entertainment experience by consolidating control of up to four audio and video devices into a single remote. This manual provides comprehensive instructions for setup, operation, and troubleshooting to ensure optimal performance.



Image: The GE 4-Device Universal Remote Control shown alongside its product packaging, highlighting its key features.

KEY FEATURES


- **Multi-device control:** Operate up to four audio and video devices such as your TV, Blu-ray player, DVD player, cable or satellite receiver, soundbar, streaming media player or other compatible devices.
- **Best TV remote code library:** Universal TV remote works with all major brands and supports thousands of the latest audio and video devices (not for use with radio frequency devices like Roku Streaming Sticks and Amazon Fire TV/Sticks).
- **Simple setup:** Add two AAA batteries (not included) and enjoy easy automatic code search and direct code entry programming, as well as master volume control to adjust the audio no matter which device is being used.

- **Preprogrammed for Samsung and Roku:** Universal remote's TV and STRM device buttons are preprogrammed for immediate use with Samsung TVs and Roku streaming media boxes (not compatible with Roku Streaming Sticks).
- **Fully backlit with a stylish finish:** The classic black finish adds a classic look to any décor; blue LED backlighting helps you see each button easily in dark or dimly lit rooms.



Pro™

Up to 4 controllable devices

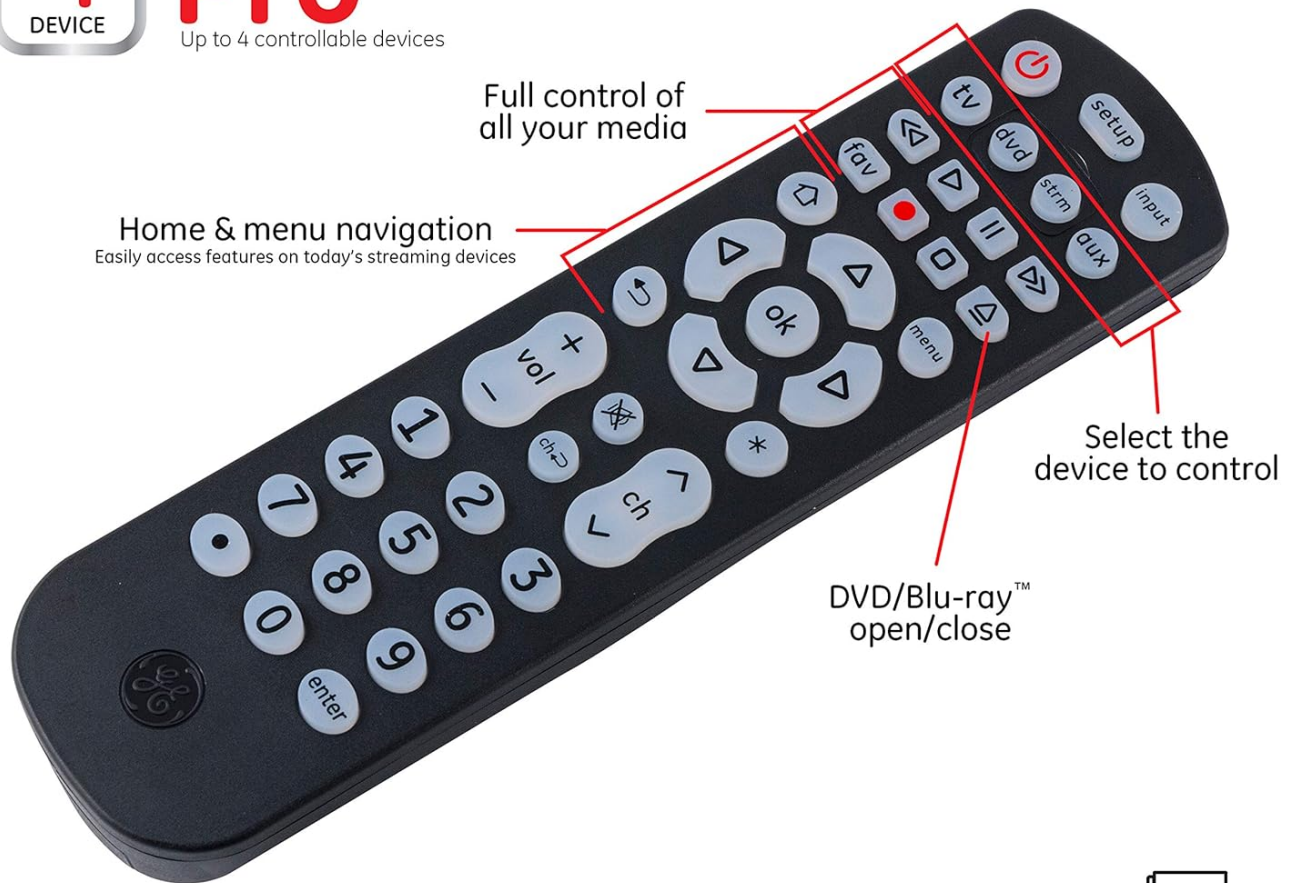

Requires 2 AA batteries
(Not Included)

Preprogrammed for Roku® & Samsung TVs

Control your Samsung TV or Roku® device with out any programming required via TV or STRM buttons. NOT COMPATIBLE with Roku Streaming Stick or Amazon Fire TV/Stick.

Image: An illustration of the GE Universal Remote highlighting its key features such as 4-device control, full media control, home and menu navigation, device selection, and DVD/Blu-ray open/close functionality. It also notes pre-programming for Roku and Samsung TVs.

WHAT'S IN THE BOX

- Universal Remote
- User manual/code list

SETUP

Battery Installation

This remote control requires two AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the remote.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring correct polarity (+ and -).
4. Slide the battery cover back into place until it clicks securely.

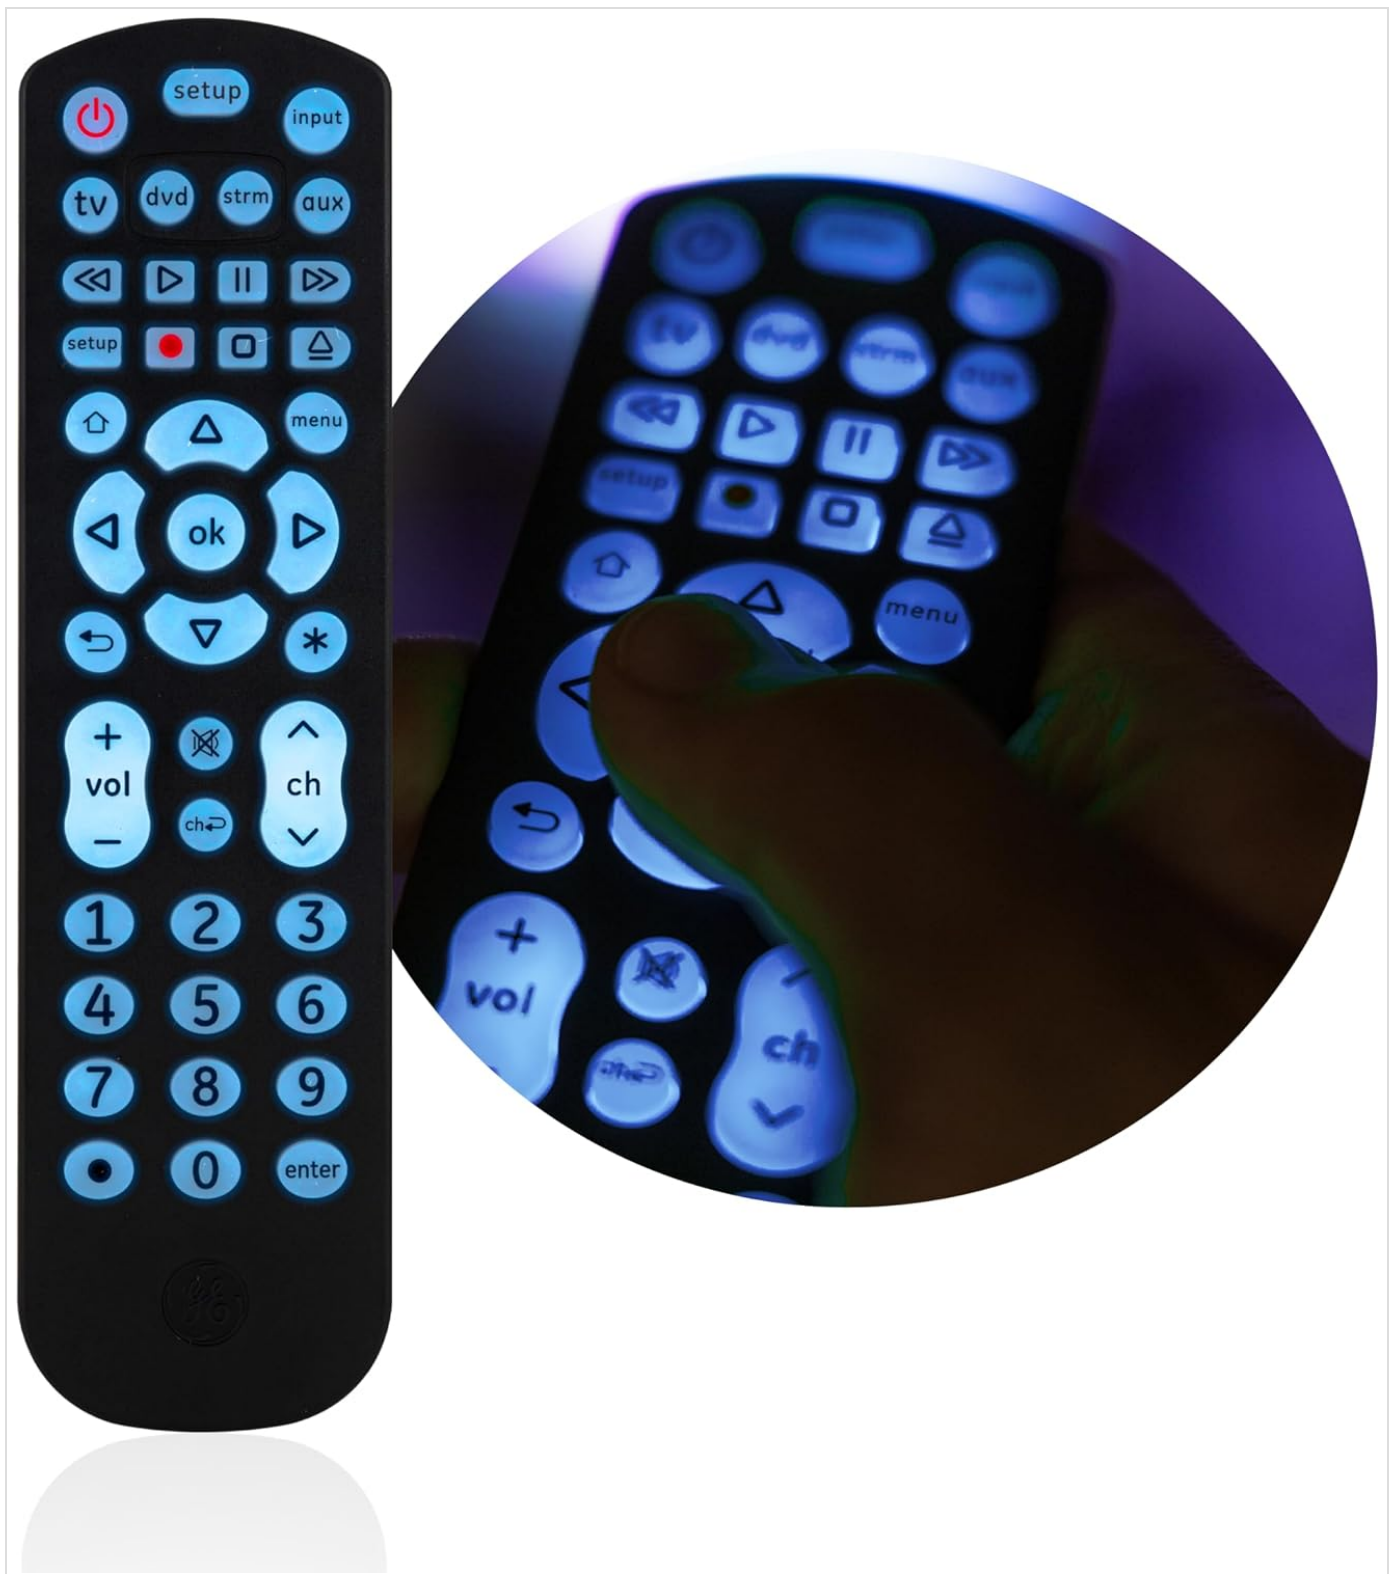


Image: A hand holding the GE Universal Remote, demonstrating its blue LED backlighting in use.

Programming Your Device

The remote can be programmed using either automatic code search or direct code entry. For detailed codes, refer to the included code list or the official user manual PDF linked in the Support section.

1. Find the remote codes for your device in the provided code list.

2. Press and hold the 'setup' button until the red indicator light turns on, then release.
3. Press and release the device button (TV, DVD, STRM, AUX) on the remote that corresponds to the device you wish to control.
4. Starting with the first code, key in the code using the number buttons.
5. Point your remote at the device and test different buttons (e.g., Power, Volume) to see if the device responds.
6. Repeat the process for each additional device you wish to control.



How To Program Device

1. Find the remote codes for your device.*
2. Press the setup button until the red indicator light turns on then release.
3. Press and release device button on remote.
4. Starting with the first code, key in the code using the number buttons.
5. Point your remote at the device and test different buttons to see if the device responds.
6. Repeat process for each additional device.

*Find your codes at www.byjasco.com/remotecodes

Image: A visual guide illustrating the six steps to program the GE Universal Remote for various devices.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and ease of programming the GE Universal Remote. This video highlights the multi-device compatibility and simple setup process.

OPERATING INSTRUCTIONS

Once programmed, your GE Universal Remote is ready for use. Select the desired device by pressing its corresponding

button (TV, DVD, STRM, AUX) before issuing commands.

- **Power:** Press the **Power** button to turn the selected device on or off.
- **Volume Control:** Use the **Vol +** and **Vol -** buttons to adjust the volume. The master volume control allows you to adjust audio regardless of the selected device.
- **Channel Control:** Use the **Ch +** and **Ch -** buttons to change channels.
- **Menu Navigation:** Use the directional arrows and **OK** button to navigate menus on your devices.
- **Backlighting:** The remote features full blue LED backlighting. Press any button to illuminate the keypad for enhanced visibility in low-light conditions.
- **Favorites:** Program up to 10 of your most-watched channels for quick access using the favorites button.
- **Dot Button:** Access sub-channels (e.g., 4.2) using the dot button.





Image: A split image of the GE Universal Remote, showing the buttons unlit on one side and illuminated with blue LED backlighting on the other, demonstrating the visibility feature.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Clean the remote regularly with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Replace batteries when the remote's performance degrades or the backlight dims significantly.
- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the remote or exposing it to excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to device.	Incorrect code programmed; batteries low/dead; obstructed signal.	Verify the correct code for your device. Replace batteries. Ensure clear line of sight between remote and device.
Backlight not working.	Batteries low/dead.	Replace batteries with fresh AAA batteries.
Some buttons not working.	Incorrect device mode selected; specific function not supported by device.	Ensure the correct device button (TV, DVD, STRM, AUX) is selected. Not all functions may be supported by every device.

SPECIFICATIONS

- **Product Dimensions:** 1 x 1.75 x 6.75 inches
- **Item Weight:** 2.88 ounces

- **Item Model Number:** 40081
- **Batteries:** 2 AAA batteries required (not included)
- **Manufacturer:** Jasco Products Company, LLC
- **Country of Origin:** China
- **Special Feature:** Backlit
- **Color:** Black Remote Blue Backlit
- **Max Number of Supported Devices:** 4
- **Compatible Devices:** Sony, Samsung, Hisense, Westinghouse, LG, Toshiba, Sharp, Vizio, Insignia, Philips, TCL, Panasonic, Roku, Apple TV, Smart TVs, Streaming Players, Blu-Ray, DVD, VCR, Home Theater (and more)

WARRANTY AND SUPPORT

For detailed warranty information and additional support, please refer to the official user manual. A digital version of the user manual, including a comprehensive code list, can be accessed via the following link:

[Download User Manual \(PDF\)](#)

For further assistance, please contact GE home electrical customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

[Submit question](#)