

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Garmin](#) /

› [Garmin Approach S10 GPS Golf Watch Instruction Manual \(Model 010-02028-00\)](#)

## Garmin 010-02028-00

# Garmin Approach S10 GPS Golf Watch Instruction Manual

Brand: Garmin | Model: 010-02028-00

## INTRODUCTION

The Garmin Approach S10 golf watch is designed to help you stay focused on your game and the course. This easy-to-use GPS golf watch automatically selects the course you are playing from over 41,000 preloaded courses worldwide, which include free lifetime updates. It provides essential yardages to the front, back, and middle of the green, as well as to hazards and doglegs. The watch automatically transitions to the next hole as you move from the green to the next tee box. You can also measure shot distances for tracking and analysis.

## WHAT'S IN THE BOX

- Approach S10 - Black GPS Golf Watch
- Charging/Data Cable
- Manual

## SETUP

### Charging the Device

Before initial use, fully charge your Approach S10 device. Connect the charging/data cable to the charging port on the back of the watch and plug the other end into a USB power source. A full charge typically takes a few hours.

### Powering On/Off

- To power on: Press and hold the power button (usually located on the side) until the screen activates.
- To power off: Press and hold the power button until the power options appear, then select 'Power Off'.

### Initial Setup and Course Loading

Upon first power-on, the device will guide you through initial setup steps, including language selection and time zone. Based on your location, the Approach S10 automatically identifies and loads courses. Ensure you are in an open area for optimal GPS signal acquisition.

## OPERATING INSTRUCTIONS

### Playing Golf

1. From the watch face, press the **OK** button to enter the main menu.
2. Select **Play Golf**.
3. The watch will acquire GPS signals and display a list of nearby courses. Select your desired course.
4. The watch will automatically display yardages to the front, middle, and back of the green for the current hole.
5. As you walk to the next tee box, the watch will automatically advance to the next hole.

### Viewing Hazards and Doglegs

While playing a hole, press the **UP** or **DOWN** buttons to scroll through information screens, which include distances to various hazards and doglegs on the course.

### Keeping Score

The Approach S10 allows you to keep score directly on the watch. After completing a hole, the watch will prompt you to enter your score. Use the **UP** or **DOWN** buttons to adjust the score and press **OK** to confirm.

### Measuring a Shot

To measure the distance of your last shot, after hitting the ball, walk to your ball's landing spot. The watch will automatically detect the shot and display the distance. You can also manually initiate shot measurement from the menu.

### Uploading Scorecards with Garmin Express

To keep track of your rounds and analyze your game, connect your Approach S10 to a computer using the charging/data cable. Use the Garmin Express software (available for download from Garmin's website) to upload your scorecards. This allows for detailed post-round analysis and participation in online leaderboards.

## KEY FEATURES

- Simple, easy-to-use golf watch with button controls.
- Sleek, lightweight, and comfortable design with a high-resolution, sunlight-readable display.
- Provides accurate yardages to the front, back, and middle of the green, as well as to hazards and doglegs, on over 41,000 preloaded courses worldwide.
- Integrated scorecard feature on the watch for a summary of your round, total distance played, and total time.
- Ability to upload scorecards to Garmin Express for round tracking and participation in the Garmin Golf™ app.
- Rechargeable battery provides up to 12 hours of play in GPS golf mode.

## MEDIA GALLERY

### Product Images



The Garmin Approach S10 watch showing hole number 3, par 4, with distances to the front, middle, and back of the green. The display is clear and easy to read.



The Garmin Approach S10 watch displaying a 150-yard layup distance to a specific point on the course, with the total distance to the green also visible.



Keep score on the watch  
for a summary of your rounds, total  
distance played and total time

A man wearing the Garmin Approach S10 on his wrist while on a golf course, looking down at his club. The image highlights the watch's use during a round.




Provides yardages to front, back and middle of the green – as well as hazards and doglegs – on more than 41,000 preloaded courses worldwide

A woman wearing the Garmin Approach S10 on her wrist, holding a golf club. The image emphasizes the watch's comfortable fit and discreet presence during play.



Sleek, lightweight and comfortable  
with a high-resolution,  
sunlight-readable display

A close-up view of the Garmin Approach S10 on a golfer's wrist, showing the watch face with distances. The golfer is wearing a white glove, indicating active play.

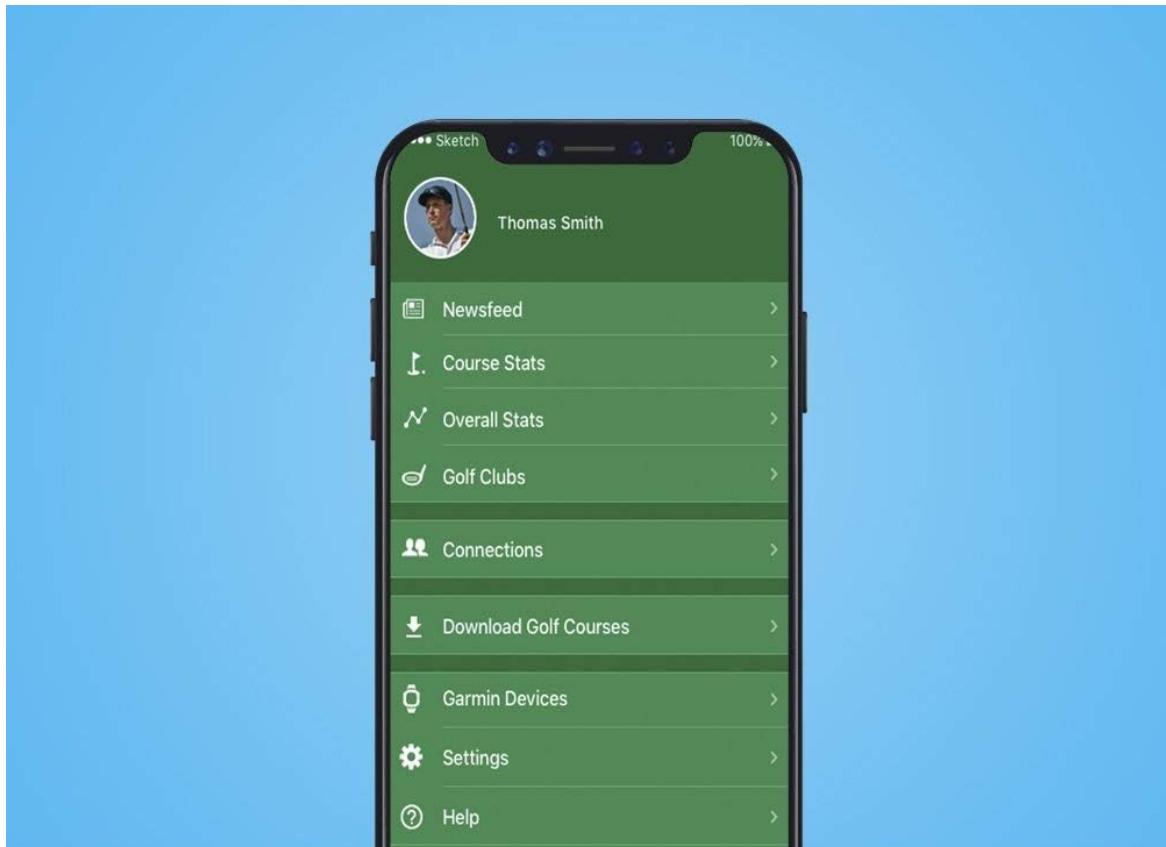

Upload your scorecards through Garmin Express™ to keep track of your rounds and participate in weekly leaderboards in the Garmin Golf™ app

A smartphone screen displaying the Garmin Golf app interface, showing options like Newsfeed, Course Stats, Overall Stats, Golf Clubs, and Download Golf Courses. This illustrates the companion app's functionality.

### Official Product Videos

Video comparing Garmin Instinct and Garmin Approach S10 watches, highlighting differences in design and features for various activities.

Video comparing Garmin Forerunner 45S and Garmin Approach S10 watches, focusing on their respective functionalities and target users.

Video comparing Apple Watch Series 6 and Garmin Approach S10, discussing key considerations before purchasing either device for golf and daily use.

Video comparing Garmin Approach S10 and Amazfit Bip 3 Pro, highlighting their features and differences for potential buyers.

Video comparing Garmin Lily and Garmin Approach S10, offering insights into their features and helping viewers decide which watch is best for them.

Video comparing Garmin Approach S10 and Amazfit GTS 4 Mini, providing a detailed comparison of their features and benefits.

Video comparing Garmin Approach S10 and Amazfit Band 7, offering a comprehensive look at their features and helping users make an informed decision.

Video comparing Samsung Galaxy Watch 4 and Garmin Approach S10, providing a detailed overview of their

functionalities and helping potential buyers choose.

Video comparing Fitbit Inspire 2 and Garmin Approach S10, offering a detailed comparison of their features and helping users decide which device suits their needs.

Video comparing Samsung Galaxy Watch Active 2 and Garmin Approach S10, providing a detailed overview of their functionalities and helping potential buyers choose.

## Maintenance

### Cleaning the Device

Regularly clean your Approach S10 to maintain its performance and appearance. Wipe the device with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the screen or casing.

### Storage

When not in use, store your Approach S10 in a cool, dry place away from direct sunlight and extreme temperatures. This helps prolong battery life and device longevity.

### Water Resistance

The Approach S10 is waterproof. However, prolonged submersion or exposure to high-pressure water jets should be avoided to prevent potential damage.

## Troubleshooting

### Device Not Powering On

- Ensure the device is fully charged. Connect it to the charging cable and a power source for at least 30 minutes.
- Perform a soft reset by holding down the power button for 15 seconds.

### GPS Signal Issues

- Ensure you are in an open area with a clear view of the sky.
- Wait a few minutes for the device to acquire satellites.
- Sync the device with Garmin Express to ensure course maps are up-to-date.

### Inaccurate Yardages

- Verify that the correct course is selected on the device.
- Ensure the device has a strong GPS signal.
- Update course maps via Garmin Express.

## Specifications

Feature	Detail
Product Dimensions	1.6 x 0.4 x 1.4 inches
Item Weight	1.23 ounces
Item Model Number	010-02028-00
Batteries	1 CR2 batteries required (included)
Display Technology	Sunlight-readable, high-resolution, transflective memory-in-pixel (MIP)
Human Interface Input	Buttons
Scanner Resolution	128 x 128
Color	Black
Screen Size	1 Inches
Special Feature	Waterproof
Connectivity Technology	Bluetooth
Map Type	Worldwide
Battery Life	12 Hours (in GPS golf mode)

## WARRANTY AND SUPPORT

Your Garmin Approach S10 comes with a standard manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please visit the official Garmin support website or contact their customer service. Keep your proof of purchase for warranty claims.