



Manuals.plus /

- › **Braun** /
- › Braun Silk-épil 9 9-890 Epilator User Manual

Braun Silk-épil 9 9-890

Braun Silk-épil 9 9-890 Epilator User Manual

Model: Silk-épil 9 9-890

INTRODUCTION

The Braun Silk-épil 9 9-890 is a versatile hair removal system designed for efficient and gentle epilation, shaving, and trimming. This device features SensoSmart technology to guide your epilation, ensuring optimal pressure for effective hair removal. It is 100% waterproof, allowing for comfortable wet and dry use. This manual provides essential information for safe and effective operation, maintenance, and care of your device.



Image: Braun Silk-épil 9 9-890 Epilator device.

WHAT'S INCLUDED

Your Braun Silk-épil 9 9-890 package includes the following components:

- Silk-épil 9 Device
- Trimmer Cap
- Shaver Head
- Skin Contact Cap
- Facial Cap
- Bikini Styler
- Pouch
- Cleaning Brush
- Power Cord (not pictured)

What's included?

Trimmer Cap



Silk-épil 9 Device



Shaver Head



Skin Contact
and Facial Caps



Bikini Styler



Pouch



Cleaning
Brush

Included but not pictured: Power Cord

Image: All components included with the Braun Silk-épil 9 9-890 epilator, including the main device, various caps, shaver head, bikini styler, pouch, and cleaning brush.

SAFETY INFORMATION

Please read all instructions before using this appliance to ensure safe operation and to reduce the risk of injury. Keep this manual for future reference.

- This appliance is suitable for use in a bath or shower. For safety reasons, it can only be operated cordless.
- Do not use the appliance on irritated skin, open wounds, moles, or varicose veins. Consult a doctor if you have a skin condition or are taking medication that affects the skin.
- Keep the appliance away from children.
- Ensure the appliance is fully dry before charging.
- Only use the power supply provided with the appliance.

SETUP

Charging the Device

Before first use, fully charge the epilator for approximately 1 hour. A full charge provides up to 50 minutes of cordless operation. The charging indicator light will show the charging status.

- Connect the power cord to the epilator and plug it into an electrical outlet.
- The charging light will blink to indicate charging and remain solid when fully charged.
- The device can only be operated cordless for safety in wet conditions.

Attaching/Detaching Heads

To change an attachment, simply pull the current head upwards to remove it and press the desired head onto the device until it clicks into place.

OPERATING INSTRUCTIONS

Understanding Epilation

Epilation removes hair from the root, resulting in smoother skin for longer periods compared to shaving. The Braun Silk-épil 9 uses 40 Micro-Grip tweezers to capture even the finest hairs.

Results of waxing, without the hassle

- ✓ Stop waxing at the salon and save over \$700 a year
- ✓ Removes hair 4x shorter than waxing for no more in-between days!
- ✓ No more appointments, no more waiting at the salon
- ✓ No tugging and pulling on your skin
- ✓ On your terms whenever, wherever



Image: Diagram illustrating how the epilator's tweezers pull hair from the root without impacting the skin's surface, leading to finer hair regrowth.

Epilation Guide (Epilation 101)

1. **Exfoliate:** Before epilating, gently exfoliate your skin to prevent ingrown hairs and ensure the best results.
2. **Wet or Dry Use:** For extra comfort, especially if it's your first time, epilate in water (bath or shower). The device is 100% waterproof.
3. **Angle:** Hold the epilator at a 90-degree angle against the direction of hair growth.
4. **Movement:** Move the epilator slowly and steadily. For legs, it takes approximately 15 seconds from ankle to knee.
5. **Moisturize:** After epilating, moisturize your skin for a smooth and radiant finish.

Epilation 101

The step-by-step
how to guide

1

Before you epilate, remember to **exfoliate** to ensure the best results.

2

If possible, **epilate in water** for extra comfort, especially if it's your first time.



3

Epilate at a **90-degree angle** against the direction of hair growth.



4

Slow and steady wins the race, it takes about **15 seconds from ankle to knee**.



5


Moisturize after epiling for smooth radiant skin.



Image: Visual guide demonstrating the five steps for effective epilation: exfoliate, use wet, hold at 90-degree angle, slow movement, and moisturize.

Using Different Attachments

- **Epilator Head with SensoSmart:** The main epilator head features SensoSmart technology, which guides you to apply the right amount of pressure. A red light indicates if you are pressing too hard.
- **Trimmer Cap:** Use this cap to trim hair to a shorter length before epilating, which can make the epilation process more comfortable, especially for longer hair.
- **Shaver Head:** For sensitive areas or when you prefer shaving over epilation, attach the shaver head. It provides a close shave.
- **Skin Contact and Facial Caps:** These caps are designed for more precise epilation on smaller or more sensitive areas, such as the face or underarms.
- **Bikini Styler:** The included bikini styler is ideal for precise shaping and trimming in the bikini area.

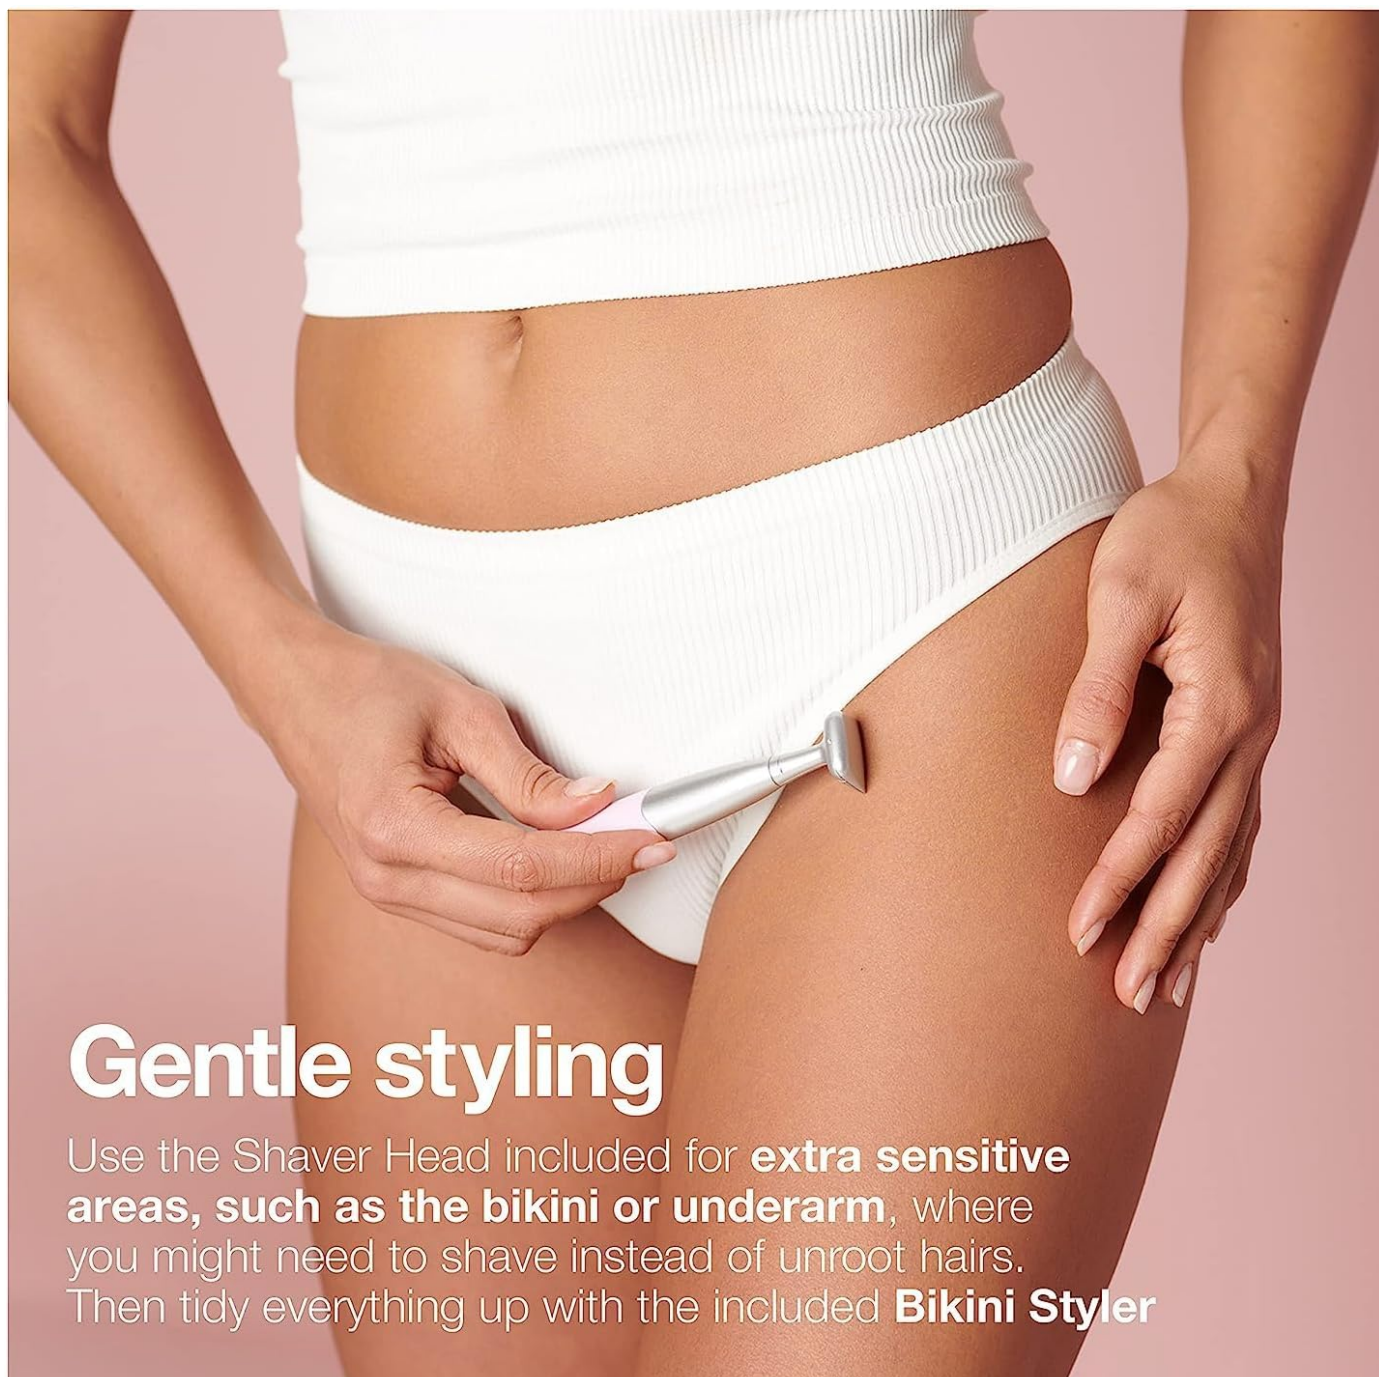

Gentle styling

Use the Shaver Head included for **extra sensitive areas, such as the bikini or underarm**, where you might need to shave instead of unroot hairs. Then tidy everything up with the included **Bikini Styler**

Image: A person using the Bikini Styler for gentle styling in the bikini area, demonstrating its use for sensitive areas.

MAINTENANCE

Cleaning the Device

Regular cleaning ensures optimal performance and hygiene.

- After each use, switch off the appliance and disconnect it from the power supply.
- Remove the attachment head.
- Use the cleaning brush to remove any trapped hairs from the epilator head.
- Rinse the epilator head and the main body under running water. Ensure the device is completely dry before reattaching the head or charging.

Storage

Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children. Use the provided pouch for

protection.

TROUBLESHOOTING

Device not turning on:

Ensure the device is fully charged. The Silk-épil 9 operates only cordless for safety in wet environments.

Poor hair removal performance:

Ensure the epilator head is clean and free of hair. Make sure you are holding the device at a 90-degree angle against hair growth and moving it slowly. Exfoliating beforehand can also improve results.

Red light indicator is on:

The red light indicates you are applying too much pressure. Reduce pressure for optimal epilation and to protect your skin.

Skin irritation after use:

Some redness is normal, especially during initial uses. Ensure you are not pressing too hard. Moisturize your skin after epilation. If irritation persists, consult a healthcare professional.

SPECIFICATIONS

Brand	Braun
Model Name	Silk-épil 9
Power Source	Battery Powered (1 Lithium Polymer battery included)
Water Resistance Level	Waterproof
Item Weight	0.88 Pounds
Recommended Uses	Hair Removal, Hair Trimmer
Included Components	Battery

WARRANTY AND SUPPORT

This Braun product is manufactured to the highest quality standards. For detailed warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Braun website. Keep your proof of purchase for any warranty claims.