

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [A&D](#) /
- > [A&D AXP-AD5698-2 Replacement Belt Instruction Manual](#)

A&D AXP-AD5698-2

A&D AXP-AD5698-2 Replacement Belt Instruction Manual

For AD-5698 and AD-5698B Heat Stroke Index Monitors

1. INTRODUCTION

The A&D AXP-AD5698-2 is a genuine replacement belt designed specifically for the A&D AD-5698 and AD-5698B Heat Stroke Index Monitors. This belt ensures secure attachment and comfortable use of your monitor, maintaining the original functionality and quality of your device.



Image 1.1: A&D AXP-AD5698-2 Replacement Belt. This image shows the black nylon belt with its attachment mechanism.

2. PRODUCT OVERVIEW

This replacement belt is identical to the one originally supplied with your A&D AD-5698 or AD-5698B monitor. It is manufactured to A&D's quality standards to ensure compatibility and durability.

- **Material:** Nylon
- **Country of Origin:** China
- **Compatible Models:** A&D AD-5698, A&D AD-5698B



Image 2.1: A&D AD-5698 Heat Stroke Index Monitor. This image displays the compatible monitor, which the AXP-AD5698-2 belt is designed to attach to.

3. SETUP AND INSTALLATION

Follow these steps to replace the belt on your A&D AD-5698 or AD-5698B monitor:

1. **Prepare the Monitor:** Ensure your AD-5698 or AD-5698B monitor is turned off.
2. **Remove Old Belt (if applicable):** If a belt is currently attached, carefully detach it from the monitor's attachment points. These points are typically small loops or slots on the device casing.
3. **Attach New Belt:** Thread the ends of the AXP-AD5698-2 replacement belt through the designated attachment points on your monitor. Ensure the belt is oriented correctly, with any buckles or adjustment mechanisms facing outwards for ease of use.
4. **Secure the Belt:** Fasten the belt securely. Verify that both ends are firmly attached and that the belt cannot easily come loose.
5. **Adjust for Comfort:** Once attached, adjust the belt length to ensure a comfortable and secure fit for its intended use (e.g., around the wrist, arm, or attached to equipment).

Note: Refer to your AD-5698 or AD-5698B monitor's original manual for specific details on its belt attachment points if you encounter difficulty.

4. OPERATING CONSIDERATIONS

The AXP-AD5698-2 belt serves as a secure attachment for your A&D Heat Stroke Index Monitor. Proper use of the belt ensures the monitor remains in place during operation, allowing for accurate readings and preventing accidental drops or loss.

- **Secure Fit:** Always ensure the belt is adjusted to a snug but comfortable fit. An overly loose belt may allow the monitor to move excessively, while an overly tight belt may cause discomfort.
- **Positioning:** Position the monitor according to the recommendations in your AD-5698/AD-5698B user manual for optimal environmental monitoring.
- **Inspection:** Before each use, quickly inspect the belt for any signs of wear, fraying, or damage to ensure it can securely hold the monitor.

5. MAINTENANCE AND CARE

To prolong the life of your AXP-AD5698-2 replacement belt, follow these care instructions:

- **Cleaning:** Wipe the belt with a damp cloth and mild soap if it becomes dirty. Rinse thoroughly with clean water and allow it to air dry completely before reattaching it to the monitor or storing it. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the belt in a clean, dry place away from direct sunlight and extreme temperatures when not in use.
- **Inspection:** Regularly inspect the belt for any signs of damage, such as cuts, tears, or fraying. Replace the belt immediately if any damage is observed to prevent the monitor from falling.

6. TROUBLESHOOTING

If you encounter issues with your AXP-AD5698-2 replacement belt, consider the following:

- **Belt Does Not Fit:**
 - Ensure you have the correct model (AXP-AD5698-2) for your AD-5698 or AD-5698B monitor.
 - Verify that you are attempting to attach the belt to the correct attachment points on the monitor.
- **Belt Feels Loose After Attachment:**
 - Double-check that the belt ends are fully threaded and secured through the monitor's attachment points.
 - Adjust the buckle or slider to tighten the belt to a secure fit.
- **Signs of Wear or Damage:**
 - If the belt shows significant wear, fraying, or damage, it should be replaced to ensure the safety of your monitor. Continued use of a damaged belt may lead to the monitor falling and being damaged.

7. SPECIFICATIONS

Attribute	Detail
Model Number	AXP-AD5698-2

Brand	A&D (A&D Company, Limited)
Compatible Devices	A&D AD-5698, A&D AD-5698B Heat Stroke Index Monitors
Material	Nylon
Product Weight	0.01 kg
Country of Origin	China
Unit Count	1 Piece
ASIN	B07C369LXT

8. WARRANTY AND SUPPORT

For warranty information, technical support, or inquiries regarding your A&D AXP-AD5698-2 replacement belt or compatible A&D monitors, please contact A&D customer service directly. Refer to the official A&D website or your monitor's original documentation for contact details.

A&D Company, Limited Official Website: <https://www.aandd.co.jp/>