

[manuals.plus](#) /› [Barbie](#) /› [Barbie Large Cash Register Interactive Toy Instruction Manual](#)**Barbie 62976**

Barbie Large Cash Register Interactive Toy Instruction Manual

PRODUCT OVERVIEW

The Barbie Large Cash Register is an interactive toy designed for pretend play, featuring realistic sounds, lights, and various accessories. This manual provides instructions for setting up, operating, and maintaining your cash register toy.

Key Features:

- Working calculator for totaling purchases.
- Realistic register sounds and fun Barbie phrases.
- Pop-out cash drawer for play money.
- Portable cell phone with built-in play scanner and credit card reader.

Included Components:

- One Barbie Cash Register with sounds and phrases
- One cell phone with built-in scanner
- One play bottle of sunscreen
- One play water bottle
- One play credit card
- Play cash and coins

IMPORTANT SAFETY INFORMATION

WARNING: May contain small pieces. Not suitable for children under 3 years due to potential choking hazards. Adult supervision is recommended during play.

SETUP AND BATTERY INSTALLATION

Before first use, install the required batteries into the cash register unit.

1. Locate the battery compartment on the underside of the cash register.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert two (2) AA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image: The Barbie Large Cash Register and its accessories as they appear in the product packaging, ready for unboxing and setup.

Once batteries are installed, the cash register is ready for play.

OPERATING INSTRUCTIONS

Using the Cash Register

The main cash register unit offers several interactive features:

- **Calculator:** Press the number buttons on the keypad to input prices. The display will show the entered numbers. Press the "TOTAL" button to simulate a transaction total.
- **Sounds and Phrases:** Press various buttons on the keypad or the dedicated sound buttons to activate realistic register sounds and fun Barbie phrases.

- **Cash Drawer:** Press the designated button (often labeled "OPEN" or located near the drawer) to make the cash drawer pop out, allowing for pretend money transactions.

Using the Portable Scanner and Credit Card Reader

The included cell phone accessory functions as a portable scanner and credit card reader for on-the-go transactions:

- **Scanner:** Point the top of the cell phone (where the scanner is located) at pretend product barcodes to simulate scanning items.
- **Credit Card Reader:** Insert the play credit card into the slot on the side of the cell phone to simulate a card payment.



Image: Two children engaged in pretend play with the Barbie Large Cash Register, demonstrating its interactive features during use.



Image: A detailed view of the portable credit card reader accessory, showing how the play credit card is inserted for simulated transactions.

MAINTENANCE

Cleaning

To clean the Barbie Large Cash Register and its accessories, wipe surfaces with a soft, damp cloth. Do not immerse the unit in water or use harsh cleaning agents, as this may damage the electronic components.

Battery Care

To prolong battery life and prevent damage:

- Remove batteries if the toy will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- No Power/Sounds:** Ensure batteries are correctly installed with proper polarity. Replace old batteries with new ones. Check that the power switch (if present) is in the "ON" position.
- Cash Drawer Stuck:** If the cash drawer does not open smoothly, check for any obstructions inside the drawer mechanism. Avoid forcing the drawer open. If play money frequently gets stuck, ensure it is inserted and removed carefully.
- Buttons Unresponsive:** If certain buttons do not respond, try replacing the batteries. If the issue persists, ensure no debris is lodged around the buttons.

PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	13 x 5.75 x 12.75 inches
Item Weight	2.29 pounds
Item Model Number	62976
Manufacturer Recommended Age	36 months - 8 years
Batteries Required	2 AA batteries (not included)
Manufacturer	Just Play
Release Date	January 1, 2020

WARRANTY AND SUPPORT

Information regarding product warranty and customer support contact details is not provided within this instruction manual. Please refer to the product packaging or the manufacturer's official website for warranty claims and support inquiries.