

Manuals.plus /

› Whirlpool /

› Whirlpool Whitemagic Classic 652 SD 6.5 kg Fully-Automatic Top Loading Washing Machine User Manual

Whirlpool Whitemagic Classic 652 SD

Whirlpool Whitemagic Classic 652 SD 6.5 kg Fully-Automatic Top Loading Washing Machine User Manual

Model: Whitemagic Classic 652 SD

Brand: Whirlpool

1. INTRODUCTION

Welcome to the user manual for your new Whirlpool Whitemagic Classic 652 SD Fully-Automatic Top Loading Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.

Your Whirlpool washing machine is equipped with 6th Sense 1-2-3 Technology, designed for ease of use and optimal washing performance.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Ensure the washing machine is properly grounded to prevent electric shock.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not operate the appliance if it has a damaged cord or plug, or if it is not working properly or has been dropped or damaged.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Always disconnect the appliance from the power supply before attempting any service or cleaning.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Fully-automatic top load washing machine:** Offers great wash quality and ease of use.
- **Capacity 6.5 kg:** Suitable for families with 3 to 4 members.
- **740 rpm:** Higher spin speed for faster drying time.
- **8 Wash Programs:** Variety of options for different fabric types and soil levels.
- **6th Sense 1-2-3 Technology:** Simplifies operation with three easy steps.
- **4 Water Levels:** Allows selection based on load size.
- **Auto Restart:** Resumes operation after power interruptions.
- **Power Scrub Technology:** Unique agitator design with three surfaces for effective scrubbing.
- **Spa Drum:** Features 50% fewer perforated holes than ordinary wash drums, providing a gentle massage to clothes and reducing lint.
- **Special Features:** Auto tub clean, Child Lock, Magic Lint Filter.

3.2 Components

Familiarize yourself with the main components of your washing machine:



This image displays the Whirlpool Whitemagic Classic 652 SD fully-automatic top-loading washing machine in grey, showing its overall design and the control panel on top.



A top-down view of the washing machine with the lid open, revealing the stainless steel Spa Drum and the agitator inside, along with the control panel.



This image provides a detailed view of the washing machine's control panel, highlighting the '6th Sense 1-2-3 Wash' buttons, various wash programs (P1-P8), water level settings, and special features like Child Lock and Auto Tub Clean.

4. INSTALLATION AND SETUP

4.1 Unpacking

Carefully remove all packaging materials. Ensure all components, including the user manual and hose pipe (1.5 mm dimension), are present. Keep packaging materials away from children.

4.2 Location Requirements

- Place the washing machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or heat sources.

4.3 Connecting Water and Drain Hoses


Connect the water inlet hose to a cold water tap with sufficient water pressure. Ensure all connections are tight to prevent leaks. Position the drain hose securely into a standpipe or laundry tub, ensuring it is not kinked or blocked.

4.4 Power Connection

Plug the power cord into a properly grounded electrical outlet. Ensure the voltage matches the specifications of the washing machine (230 Volts). Do not use extension cords or adapters.



A side view of the washing machine, illustrating its compact design and grey finish.

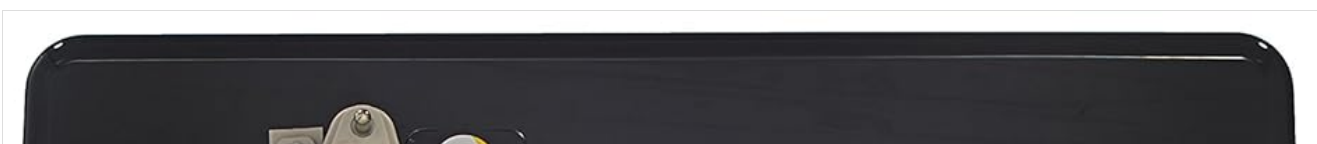



The back of the washing machine, displaying the power cord, water inlet, and drain hose connections.

5. OPERATING YOUR WASHING MACHINE

5.1 Before Each Wash

- Sort laundry by fabric type, color, and soil level.
- Check all pockets for small items like coins, keys, or tissues.
- Close zippers, hooks, and fasteners to prevent damage to clothes and the drum.

5.2 Loading Laundry

Open the lid and evenly distribute the clothes inside the drum. Do not overload the machine; leave enough space for clothes to move freely during the wash cycle.

5.3 Adding Detergent

Add the appropriate amount of detergent suitable for top-loading washing machines into the detergent dispenser. Refer to your detergent packaging for recommended quantities based on load size and water hardness.

5.4 Using the 6th Sense 1-2-3 Technology

The 6th Sense 1-2-3 operation simplifies your laundry process:

1. **Press 'Power' button:** Turn on the washing machine.
2. **Select desired 'Program':** Choose from the available wash programs (P1-P8) based on your laundry needs.
3. **Press 'Start/Pause' button:** Begin the wash cycle. The machine's intelligence will take over to deliver the perfect wash.

5.5 Wash Programs

Your washing machine offers 8 distinct wash programs:

Program	Description
P1 Normal	For daily laundry with normal soil.
P2 Speedy Wash	Quick wash for lightly soiled clothes.
P3 Heavy	For heavily soiled items.
P4 Delicate	Gentle wash for delicate fabrics.
P5 Whites	Optimized for white garments.
P6 Rinse + Dry	Rinsing followed by a spin cycle.
P7 Dry Only	Spin cycle only to remove excess water.
P8 Aqua Store	Stores water for later use.

5.6 Additional Functions

- **Extra Rinse:** Adds an additional rinse cycle to ensure thorough detergent removal.
- **Water Level:** Manually adjust the water level (Min, Low, Medium, High) if desired.
- **Child Lock:** Prevents accidental changes to settings during operation. Activate by pressing and holding the designated button.

- **Auto Tub Clean:** A dedicated program to clean the washing machine drum.

6. CARE AND MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

6.2 Cleaning the Drum

Utilize the 'Auto Tub Clean' feature periodically to clean the inner drum and prevent odor buildup. Follow the instructions on the control panel for this cycle.

6.3 Cleaning the Magic Lint Filter

The Magic Lint Filter collects lint and debris during washing. Remove and clean the filter regularly (after every few washes) to maintain efficient operation. Rinse it under running water and reinsert it properly.

6.4 Winterizing (for cold climates)

If the washing machine is to be left in an unheated area subject to freezing temperatures, drain all water from the machine to prevent damage. Consult a qualified technician if unsure.

7. TROUBLESHOOTING GUIDE

Before contacting customer service, refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged Lid not closed properly 'Start/Pause' button not pressed	Check power connection Ensure lid is fully closed Press 'Start/Pause' button
Water not filling	Water tap is off Water inlet hose kinked or blocked Water pressure too low	Open water tap Straighten hose, clear blockage Check household water pressure
Machine vibrates excessively	Machine not level Load unbalanced Shipping bolts not removed	Adjust leveling feet Redistribute laundry evenly Ensure all shipping bolts are removed (during installation)
Water not draining	Drain hose kinked or blocked Drain pump filter clogged	Check and clear drain hose Clean the drain pump filter (refer to specific instructions in full manual)
Detergent residue on clothes	Too much detergent used Insufficient rinse cycles	Reduce detergent quantity Select 'Extra Rinse' option

8. TECHNICAL SPECIFICATIONS

Below are the technical specifications for the Whirlpool Whitemagic Classic 652 SD washing machine:

Specification	Detail
Brand	Whirlpool
Model	Whitemagic Classic 652 SD
Capacity	6.5 Kilograms
Maximum Rotational Speed	740 RPM
Installation Type	Freestanding
Form Factor	Top-Loading
Special Features	Auto Restart, Auto tub clean, Child Lock, Magic Lint Filter, Power Scrub Technology
Colour	Grey
Control Console	Fully Automatic
Number of Option Cycles	8
Access Location	Top Load
Voltage	230 Volts
Material	Stainless Steel (Drum)
Item Weight	28 kg
Item Dimensions (LxWxH)	56 x 54 x 90 Centimeters
Included Components	Product, User Manual, Hose Pipe (Dimension 1.5 mm)

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Warranty Information

Your Whirlpool Whitemagic Classic 652 SD washing machine comes with a warranty of **2 years on the product** and **2 years on the motor** from the date of purchase. Please retain your purchase receipt for warranty claims.

9.2 Customer Support

For any service requests, technical assistance, or further inquiries, please contact Whirlpool customer support. Refer to the contact information provided in your warranty card or visit the official Whirlpool website for details.