



Manuals.plus /

› **TECH DECK** /

› TECH DECK Starter Kit Fingerboard Ramp Set Instruction Manual

TECH DECK 20103155

TECH DECK Starter Kit Fingerboard Ramp Set Instruction Manual

Model: 20103155

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your TECH DECK Starter Kit Fingerboard Ramp Set. Please read this manual thoroughly before use to ensure proper setup and enjoyment of your product. The Starter Kit offers a customizable fingerboard experience with authentic graphics and various ramp configurations.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years. Adult supervision is recommended during assembly and play, especially with smaller components.

Ensure all parts are securely connected before use. Do not attempt to modify the product as this may compromise its structural integrity and safety.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x Signature Pro Fingerboard (Stevie Williams DGK)
- 1 x Quarter Pipe Ramp
- 1 x Launch Ramp
- 2 x Kicker Ramps
- 6 x Connectors
- 2 x Trainer Clips



Image: All components included in the TECH DECK Starter Kit.

SETUP INSTRUCTIONS

The TECH DECK Starter Kit features an X-Connect system for easy assembly and customization. Follow these steps to set up your ramp:

1. **Unpack Components:** Carefully remove all ramps, the fingerboard, connectors, and trainer clips from the packaging.

2. **Connect Ramp Sections:** Identify the connection points on the sides of the ramps (Quarter Pipe, Launch Ramp, Kicker Ramps). Use the provided connectors to securely link the ramp sections together. The X-Connect system allows for various configurations.
3. **Secure Connections:** Ensure each connector is firmly pressed into place to create a stable ramp structure.
4. **Attach Trainer Clips (Optional):** For beginners, attach the yellow trainer clips to the fingerboard. These clips help maintain balance and control, making it easier to learn tricks.



Image: Example of an assembled ramp configuration.



Image: Fingerboard with trainer clips for enhanced control.

OPERATING INSTRUCTIONS

Once your ramp set is assembled, you can begin practicing various fingerboard tricks. The trainer clips are

particularly useful for mastering aerial maneuvers.

- **Basic Riding:** Place your fingers on the fingerboard and push off to gain momentum.
- **Using Ramps:** Approach ramps with sufficient speed. Use the quarter pipe for vertical tricks and the launch ramp for jumps.
- **Trainer Clips:** The trainer clips provide a secure grip on the fingerboard, allowing for easier execution of ollies, kickflips, and other air tricks. Practice lifting the board with your fingers while using the clips.
- **Customization:** Experiment with different ramp layouts to create unique skate park scenarios and challenge yourself with new trick combinations.

Your browser does not support the video tag.

Video: Product Overview - Demonstrates various features and play scenarios of the Tech Deck ramp set.

Your browser does not support the video tag.

Video: Tech Deck Fingerboards - Showcases the fingerboards in action on various ramps.

MAINTENANCE

To ensure the longevity of your TECH DECK Starter Kit, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down ramps and fingerboards with a dry or slightly damp cloth to remove dust and debris. Avoid harsh chemicals.
- **Storage:** Store the kit in a cool, dry place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically check all connectors and ramp sections for any signs of wear or damage. Replace any broken parts to maintain optimal performance and safety.

TROUBLESHOOTING

Problem	Solution
Ramp sections do not stay connected.	Ensure connectors are fully inserted and clicked into place. Check for any debris in the connection slots. If connectors are damaged, replace them.
Fingerboard wheels do not spin freely.	Check for hair or debris caught in the axles. Clean the wheels and axles. Ensure the nuts on the axles are not overtightened.
Difficulty performing tricks.	Utilize the included trainer clips to assist with finger placement and control. Practice basic maneuvers before attempting advanced tricks. Refer to online tutorials for technique guidance.

SPECIFICATIONS

- **Model Number:** 20103155
- **Product Dimensions:** 9.1 x 8 x 3.2 inches
- **Item Weight:** 12 ounces
- **Recommended Age:** 8 years and up

- **Manufacturer:** Spin Master

WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For detailed warranty information, product support, or to contact customer service, please visit the official Spin Master website or refer to the contact information provided on the product packaging. Keep your purchase receipt for warranty claims.