

[Manuals.plus](#) /

› [WINIA](#) /

› Winia KOR-667DW Microwave Oven 0.7 cu.ft User Manual

WINIA KOR-665

Winia KOR-667DW Microwave Oven 0.7 cu.ft User Manual

Model: KOR-665

1. INTRODUCTION

Thank you for choosing the Winia KOR-667DW Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and keep it for future reference.

The Winia KOR-667DW is a compact 0.7 cubic feet microwave oven designed for convenient heating, reheating, and cooking. It features a digital control panel, LED display, and a variety of pre-programmed functions to simplify your daily cooking tasks.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic precautions:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not heat liquids or other foods in closed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Only allow children to use the oven under close supervision.
- Do not deep fry in the microwave oven.
- Do not cook eggs in their shell.
- Always use microwave-safe cookware.
- Ensure proper ventilation around the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Winia KOR-667DW Microwave Oven.



Figure 3.1: Front view of the Winia KOR-667DW Microwave Oven, showing the white exterior, door, and digital control panel.



Figure 3.2: Close-up of the digital control panel with LED display, showing number pad, auto-cook menus, and function buttons.



Figure 3.3: Interior view of the microwave oven with the door open, revealing the glass turntable and roller ring.

4. SETUP

4.1 Unpacking

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Remove any protective film from the cabinet surface.

4.2 Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure there is adequate ventilation: leave at least 10 cm (4 inches) of space at the back, 20 cm (8 inches) on the top, and 5 cm (2 inches) on the sides.

- Keep the oven away from heat sources and strong magnetic fields.

4.3 Electrical Connection

Plug the power cord into a standard 120V, 60Hz grounded electrical outlet. Do not use extension cords or adapters.

4.4 Turntable Installation

1. Place the roller ring in the center of the oven cavity floor.
2. Place the glass turntable securely on top of the roller ring. Ensure it sits properly in the center support.

Video 4.1: An unboxing video demonstrating the initial setup and placement of a similar microwave oven. This video provides a visual guide for unpacking and preparing the appliance for first use.

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

1. Press the 'Clock' button.
2. Use the number pad to enter the current time (e.g., 12:30).
3. Press the 'Clock' button again to confirm.

5.2 Basic Cooking (Time Cook)

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Enter the desired cooking time using the number pad.
4. Press the 'Start' button.

5.3 Power Levels

The oven has 10 power levels. To adjust the power level:

1. Enter the desired cooking time.
2. Press the 'Power' button.
3. Use the number pad to select a power level from 1 (lowest) to 10 (highest).
4. Press 'Start'.

5.4 Auto-Cook Menus

The oven features 6 auto-cook menus for quick heating and reheating:

- Potatoes
- Popcorn
- Pizza
- Beverages
- Frozen Dinner
- Reheat

To use an auto-cook menu:

1. Place food in the oven.
2. Press the corresponding auto-cook button (e.g., 'Popcorn').

3. Press 'Start'. The oven will automatically set the cooking time and power level.

5.5 Defrost Function

The defrost function allows you to defrost food by weight or time.

1. Press the 'Defrost' button.
2. Select defrost by weight or time using the appropriate button.
3. Enter the weight or time using the number pad.
4. Press 'Start'.

5.6 Quick Start

Press the 'Start +30sec' button to immediately start cooking at full power for 30 seconds. Each subsequent press adds 30 seconds to the cooking time.

5.7 Child Lock

To activate the child lock, press and hold the 'Stop/Cancel' button for 3 seconds. The display will show a lock indicator. To deactivate, press and hold the 'Stop/Cancel' button again for 3 seconds.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

6.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.

6.2 Interior Cleaning

Clean the interior cavity with a soft cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen food particles, making them easier to wipe away.

6.3 Turntable Cleaning

The glass turntable and roller ring can be removed and washed in warm, soapy water or in the dishwasher.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Cooking time or power level set incorrectly; Microwave-safe cookware not used.	Close the door firmly; Adjust cooking time and power level; Use appropriate microwave-safe dishes.
Turntable not rotating	Turntable not properly placed; Roller ring dirty or damaged.	Ensure turntable is correctly seated on the roller ring; Clean or replace roller ring.

Problem	Possible Cause	Solution
Unusual noise during operation	Turntable or roller ring misaligned; Food container touching oven walls.	Adjust turntable and roller ring; Ensure food container does not obstruct rotation.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Technical details for the Winia KOR-667DW Microwave Oven.



Figure 8.1: Diagram showing the dimensions of the Winia KOR-667DW Microwave Oven: 44.6 cm width, 31.8 cm depth, and 27 cm height.

Feature	Detail
Brand	WINIA
Model Number	KOR-665
Color	White
Product Dimensions (L x W x H)	44.6 x 31.8 x 27 cm
Product Weight	9 kg
Power	120 Watts
Voltage	120 Volts
Material	Aluminum

Feature	Detail
Installation Type	Freestanding
Control Type	Button
Special Features	Child lock, Auto-cook, Defrost, Clock function, Reheat function, Keep warm function, Built-in display, Programmable
Components Included	Microwave oven

9. WARRANTY AND SUPPORT

Your Winia KOR-667DW Microwave Oven comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service, or to inquire about replacement parts, please visit the official WINIA website or contact their customer service department. Keep your purchase receipt and model number (KOR-665) handy when contacting support.

You can visit the [WINIA Brand Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07C4FBVL1>

More documents and user manuals: <https://manuals.plus/>