Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Orion /
- > Emerson OEM 076R095070 VCR Remote Control User Manual

Orion 076R095070

Emerson OEM 076R095070 VCR Remote Control User Manual

Model: 076R095070

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Emerson OEM 076R095070 VCR Remote Control. This infrared remote is designed for specific Emerson, Orion, Sansui, and White-Westinghouse VCR models, ensuring seamless control over your video cassette recorder functions. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

SETUP

Battery Installation

The Emerson 076R095070 remote control requires two (2) AA batteries for operation. Follow these steps to install the batteries:

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Press down on the tab and slide the cover off.
- 3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is designed to operate various functions of compatible VCR models. Point the remote control directly at the VCR's infrared sensor for optimal response.



Image: Front view of the Emerson OEM 076R095070 VCR Remote Control, showing all buttons and their labels. The remote is black with gray and orange buttons.

Button Functions

- POWER: Turns the VCR on or off.
- **EJECT:** Ejects the video cassette from the VCR.
- PLAY: Starts playback of the video cassette.

- REW (Rewind): Rewinds the video cassette.
- F.FWD (Fast Forward): Fast forwards the video cassette.
- STOP: Stops playback, rewind, or fast forward.
- PAUSE/STILL: Pauses playback or displays a still frame.
- SPEED: Adjusts playback speed (functionality may vary by VCR model).
- REC (Record): Initiates recording (requires a recordable cassette and proper VCR setup).
- REPEAT: Repeats a section or the entire tape (functionality may vary by VCR model).
- TRACKING AUTO: Automatically adjusts video tracking for optimal picture quality.
- TRACKING (Up/Down Arrows): Manually adjusts video tracking.

Compatible VCR Models

This remote control is an OEM replacement and is compatible with the following VCR models. It supports all VCP (Video Cassette Player) features for these units:

- EMERSON: VCPR200, VCPR200A, VCPR200B, VCPR200C, VCPR205, VCPR205D, VCP681
- ORION: VCP1506, VCP1508, VP0050, VP0060
- SANSUI: VCP1500
- WHITE-WESTINGHOUSE: WVCP-8000

Additionally, this remote can be used for tape play functions across all Orion and Sansui VCR applications.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

• Remote not responding:

- Ensure the remote is pointed directly at the VCR's infrared sensor.
- Check if the batteries are correctly installed with the correct polarity (+/-).
- · Replace the batteries with fresh AA batteries.
- Ensure there are no obstructions between the remote and the VCR.

Limited functionality:

- Verify that your VCR model is listed as compatible in the "Compatible VCR Models" section. Some advanced functions may not be supported by all VCRs.
- Consult your VCR's original instruction manual for specific function compatibility.

If problems persist after trying these steps, contact the manufacturer or your product supplier for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	076R095070
Brand	Orion (OEM for Emerson)
Manufacturer	Emerson
Connectivity Technology	Infrared
Controller Type	Button Control
Compatible Devices	VCR
Power Source	2 AA Batteries (not included)
Special Feature	Ergonomic design

© 2023 Orion/Emerson. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - 076R095070



Orion Video Capture Device Instruction Manual

Comprehensive guide to installing and using the Orion Video Capture Device (#52181) for Windows and Mac OS X, enabling analog video signal capture from various sources like CCTV cameras, DVDs, and camcorders.



Video Repair Parts Catalogue - VCR Components and Accessories

Comprehensive catalogue of VCR repair parts, including heads, motors, belts, pinch rollers, and more from major brands like JVC, Sony, Panasonic, and Sharp. Find replacement components for your VCR.



Sony RM-VL1000T Integrated Remote Commander Component Codes

A comprehensive list of component codes for the Sony RM-VL1000T Integrated Remote Commander, covering various brands and types of audio-visual equipment such as TVs, VCRs, CD players, tape decks, MD decks, DVD players, and receivers.



Universal Remote Control Programming Guide

Comprehensive guide for programming a universal remote control to operate set-top boxes and televisions, including brand code, auto search, and manual search methods. Features instructions for battery installation and volume priority settings.



ADB Potenza Universal Remote Control Technical Guide

Comprehensive technical guide for the WTCtv ADB Potenza Universal Remote Control, including instructions for programming, brand setup, automatic search, learning features, volume lock, and troubleshooting common issues. Find brand codes for various electronic devices.