

Bazooka BS-5502

Bazooka BS-5502 Portable Bluetooth Speaker User Manual

Model: BS-5502

1. INTRODUCTION

Thank you for choosing the Bazooka BS-5502 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Bazooka BS-5502 is designed to deliver clear sound and dynamic bass, offering versatile audio playback options including Bluetooth wireless streaming, memory card support, and AUX input for non-Bluetooth devices.

2. PRODUCT OVERVIEW

2.1. Features

- Portable design with included shoulder strap for easy transport.
- Wireless Bluetooth connectivity for streaming audio from compatible devices.
- Integrated 14 cm (5.5 inch) woofer for enhanced bass and clear audio.
- Supports memory card (SD/USB) playback.
- AUX input for wired connection to audio sources.
- Powered via electric cable.

2.2. Package Contents

- Bazooka BS-5502 Portable Bluetooth Speaker
- Shoulder Strap
- Power Cable
- User Manual (this document)

2.3. Component Identification



Figure 1: Front view of the Bazooka BS-5502 speaker, showing the control panel, speakers, and input ports.



Figure 2: Side view of the Bazooka BS-5502 speaker, illustrating the woofer component.



Figure 3: The Bazoooka BS-5502 speaker with the detachable shoulder strap attached for portability.

The control panel typically includes:

- **Power Switch:** ON/OFF
- **Mode Button:** Switches between Bluetooth, AUX, and Memory Card/USB modes.
- **Play/Pause Button:** Controls audio playback.
- **Previous/Next Track Buttons:** Navigates through audio tracks.
- **Volume Control Knobs:** Adjusts master volume and bass level.
- **USB Port:** For USB flash drive playback.
- **Memory Card Slot:** For SD card playback.
- **AUX Input:** 3.5mm jack for external audio devices.
- **Charging Port:** For connecting the power cable.

3. SETUP

3.1. Powering the Speaker

1. Connect the provided power cable to the charging port on the speaker.
2. Plug the other end of the power cable into a standard electrical outlet.
3. Flip the Power Switch to the "ON" position. The speaker will indicate it is powered on, often with an audible prompt or LED indicator.

Note: Ensure the power source matches the speaker's voltage requirements to prevent damage.

3.2. Attaching the Shoulder Strap

To attach the shoulder strap, locate the two attachment points on the sides of the speaker. Securely clip each end of the shoulder strap to these points. Adjust the strap length for comfortable carrying.

4. OPERATING INSTRUCTIONS

4.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **Mode** button until the Bluetooth indicator is active (usually a flashing LED or an audible prompt).

2. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
3. Search for available devices. The speaker should appear as "BS-5502" or "Bazooka BS-5502".
4. Select the speaker from the list to initiate pairing.
5. Once paired, the speaker will usually provide an audible confirmation, and the Bluetooth indicator light will become solid.

You can now play audio from your device through the Bazooka BS-5502 speaker.

4.2. AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
3. Press the **Mode** button on the speaker until it switches to AUX mode.
4. Play audio from your external device. Volume can be controlled via both the speaker and the external device.

4.3. Memory Card / USB Playback

1. Insert a USB flash drive into the USB port or an SD card into the memory card slot on the speaker. Ensure the card/drive contains compatible audio files (e.g., MP3).
2. Press the **Mode** button until the speaker automatically switches to USB or SD card playback mode.
3. The speaker will begin playing audio files from the inserted storage device.
4. Use the **Play/Pause** and **Previous/Next Track** buttons to control playback.

4.4. Volume and Bass Control

Use the dedicated **Volume Control** knob to adjust the overall sound output. The **Bass Control** knob allows you to fine-tune the bass level to your preference.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Power Cable:** Regularly inspect the power cable for any damage. If damaged, discontinue use and replace it with an approved cable.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off.	Ensure power cable is securely connected to both speaker and outlet. Turn the power switch to "ON".

Problem	Possible Cause	Solution
No sound	Volume too low; Incorrect mode selected; Device not playing audio.	Increase speaker volume. Press the Mode button to select the correct input (Bluetooth, AUX, USB/SD). Ensure your connected device is playing audio.
Bluetooth not pairing	Speaker not in pairing mode; Device Bluetooth off; Speaker too far from device.	Ensure speaker is in Bluetooth pairing mode (flashing LED). Turn on Bluetooth on your device. Move device closer to the speaker (within 10 meters). Forget previous pairings on your device and try again.
Distorted sound	Volume too high; Audio source quality poor.	Reduce speaker volume. Check the audio quality of the source device.

7. SPECIFICATIONS



Figure 4: The Bazooka BS-5502 speaker being measured, indicating its approximate length.

- **Model:** BS-5502
- **Speaker Type:** Woofer
- **Woofer Diameter:** 14 cm (5.5 inches)
- **Connectivity:** Bluetooth, AUX (3.5mm), USB, SD Card
- **Bluetooth Version:** (Not specified, assuming standard)
- **Sound Channel Configuration:** 2.0
- **Power Source:** Electric Cable
- **Product Dimensions (L x W x H):** Approximately 38.1 x 20.8 x 19.99 cm (15 x 8.2 x 7.9 inches)
- **Product Weight:** Approximately 1.9 kg (4.19 lbs)
- **Color:** Camouflage (as per product description, though images show red)
- **Recommended Uses:** Gaming consoles, computers, music players, smartphones, tablets, TVs.

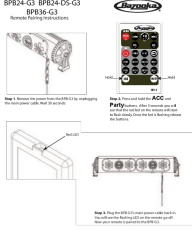



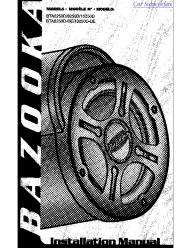
8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time

of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.
For technical assistance or inquiries, please visit the official Bazooka website or contact their customer service department.

© 2023 Bazooka. All rights reserved.

Related Documents - BS-5502

 <p>BPB24-G3 BPB24-DS-G3 BPB36-G3 Remote Pairing Instructions</p> <p>Step 1: Remove the back cover of the remote control by sliding the cover off the back.</p> <p>Step 2: Press and hold the ACC button for 5 seconds.</p> <p>Step 3: Press and hold the LED button for 5 seconds.</p> <p>Step 4: Press and hold the LED button for 5 seconds.</p> <p>Step 5: Press and hold the LED button for 5 seconds.</p>	<p>Bazooka BPB24-G3, BPB24-DS-G3, BPB36-G3 Remote Pairing Instructions</p> <p>Learn how to pair your Bazooka G3 remote with your BPB24-G3, BPB24-DS-G3, or BPB36-G3 sound system. Follow these simple steps to connect your remote.</p>
 <p>Party Bar G3 Operation and Pairing Guide</p> <p>1. Long press the Mode button to turn on the Party Bar G3.</p> <p>2. Click the LED button to turn on/off the LED lights.</p> <p>3. Long press the LED button to turn on the LED lights.</p> <p>4. Click the LED button to turn on/off the LED lights.</p> <p>5. Long press the LED button to turn on the LED lights.</p> <p>6. Click the LED button to turn on/off the LED lights.</p> <p>7. Press the +/- buttons to adjust the volume of the Party Bar.</p> <p>8. Press the +/- buttons to track through the LED lights.</p> <p>9. Press the +/- buttons to track through the LED lights.</p> <p>10. Press the +/- buttons to track through the LED lights.</p>	<p>Bazooka Party Bar G3: Operation and Pairing Guide</p> <p>Comprehensive guide to operating the Bazooka Party Bar G3, including button functions, party modes, and remote pairing instructions. Learn how to connect, control music, and customize LED lighting for an enhanced audio-visual experience.</p>
 <p>BPB-DBC-G2 Wireless G2 Dashboard Controller: Operation and Pairing Guide</p> <p>1. Long press the Mode button to turn on the BPB-DBC-G2.</p> <p>2. Click the LED button to turn on/off the LED lights.</p> <p>3. Long press the LED button to turn on the LED lights.</p> <p>4. Click the LED button to turn on/off the LED lights.</p> <p>5. Long press the LED button to turn on the LED lights.</p> <p>6. Click the LED button to turn on/off the LED lights.</p> <p>7. Press the +/- buttons to adjust the volume of the Party Bar.</p> <p>8. Press the +/- buttons to track through the LED lights.</p> <p>9. Press the +/- buttons to track through the LED lights.</p> <p>10. Press the +/- buttons to track through the LED lights.</p>	<p>Bazooka BPB-DBC-G2 Wireless G2 Dashboard Controller: Operation and Pairing Guide</p> <p>Comprehensive guide to operating and pairing the Bazooka BPB-DBC-G2 Wireless G2 Dashboard Controller with your Party Bar system. Learn about button functions, audio modes, and LED controls for an enhanced audio experience.</p>
 <p>Party Bar G2 Quick Start Guide and Features</p> <p>1. Long press the Mode button to turn on the Party Bar G2.</p> <p>2. Click the LED button to turn on/off the LED lights.</p> <p>3. Long press the LED button to turn on the LED lights.</p> <p>4. Click the LED button to turn on/off the LED lights.</p> <p>5. Long press the LED button to turn on the LED lights.</p> <p>6. Click the LED button to turn on/off the LED lights.</p> <p>7. Press the +/- buttons to adjust the volume of the Party Bar.</p> <p>8. Press the +/- buttons to track through the LED lights.</p> <p>9. Press the +/- buttons to track through the LED lights.</p> <p>10. Press the +/- buttons to track through the LED lights.</p>	<p>Bazooka Party Bar G2 Quick Start Guide and Features</p> <p>A concise guide to operating the Bazooka Party Bar G2, including button functions, pairing instructions, and FCC compliance information. Learn how to control music, lights, and connect multiple devices.</p>
 <p>BZOOKA Installation Manual</p> <p>1. Long press the Mode button to turn on the Party Bar G2.</p> <p>2. Click the LED button to turn on/off the LED lights.</p> <p>3. Long press the LED button to turn on the LED lights.</p> <p>4. Click the LED button to turn on/off the LED lights.</p> <p>5. Long press the LED button to turn on the LED lights.</p> <p>6. Click the LED button to turn on/off the LED lights.</p> <p>7. Press the +/- buttons to adjust the volume of the Party Bar.</p> <p>8. Press the +/- buttons to track through the LED lights.</p> <p>9. Press the +/- buttons to track through the LED lights.</p> <p>10. Press the +/- buttons to track through the LED lights.</p>	<p>Bazooka Subwoofer Installation Manual: Models BTA6250D, BTA8250D, BTA10250D</p> <p>Comprehensive installation manual for Bazooka car subwoofers, covering placement, mounting, wiring, specifications, features, troubleshooting, and warranty information for models BTA6250D, BTA8250D, BTA10250D, BTA8250D-DE, and BTA10250D-DE.</p>



[Bazooka BTA Series Amplified Tube Installation Manual](#)

Installation manual for Bazooka BTA Series amplified tube subwoofer speaker systems, covering models BTA6250D, BTA8250D, BTA10250D, BTA8250D-DE, and BTA10250D-DE. Includes helpful hints, vehicle and boat placement recommendations, mounting instructions, wiring diagrams, specifications, features, troubleshooting, and warranty information.