

[Manuals.plus](#) /

› [KHOI1971](#) /

› KHOI1971 Wall AC Adapter Cable for Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing Baby - Instruction Manual

KHOI1971 KHOI1971 CUSTOM MADE

KHOI1971 Wall AC Adapter Cable for Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing Baby - Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of the KHOI1971 Wall AC Adapter Cable, designed for compatibility with the Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing Baby. Please read all instructions carefully before use to ensure proper operation and safety.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical products, especially near children. Failure to do so may result in fire, electric shock, or injury.

- **WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Do not expose the adapter to water or excessive moisture.
- Do not disassemble or modify the adapter.
- Ensure the adapter is used with compatible devices only, specifically the Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing.
- Keep the adapter and its cable out of reach of infants and young children to prevent strangulation hazards.
- Unplug the adapter from the wall outlet when not in use or during electrical storms.
- Inspect the adapter and cable regularly for any signs of damage. Discontinue use if damaged.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x KHOI1971 Wall AC Adapter Cable

SETUP INSTRUCTIONS

Follow these steps to properly connect your AC adapter to the Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing:


1. Locate the power input port on your Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing. This is typically a small circular port.
2. Take the barrel connector end of the KHOI1971 Wall AC Adapter Cable and carefully insert it into the power

input port of the swing. Ensure a snug fit.

3. Plug the two-prong end of the AC adapter into a standard 110V-240V wall electrical outlet.
4. Once connected, the LED light on the adapter should illuminate, indicating that power is being supplied.



This image displays the KH011971 Wall AC Adapter. It features a standard two-prong US plug, a black casing, and a label detailing input (100-240V, 50-60Hz, 0.35A) and output specifications, along with regulatory marks (FC CE). A barrel connector cable extends from the adapter.

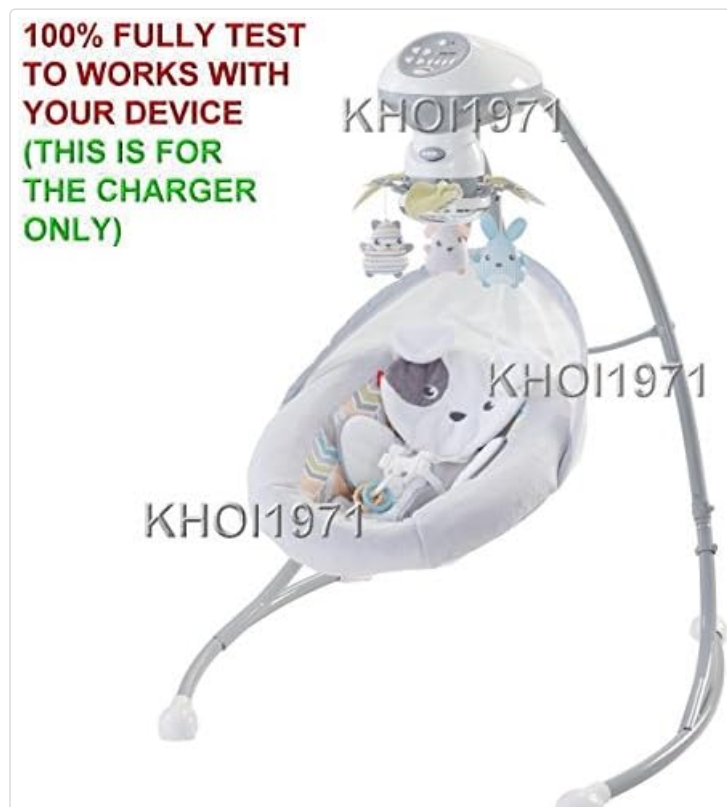

This image illustrates the KH011971 AC Adapter in context with a Fisher-Price DRG43 Snuggly Puppy Sweet Dreams Cradle N Swing. The swing features a white and grey puppy-themed seat, a mobile with hanging toys, and a control panel. The adapter is designed to power this type of baby swing.

OPERATING INSTRUCTIONS

Once the KH011971 Wall AC Adapter Cable is correctly connected to both the Fisher-Price DRG43 Snuggly Puppy Sweet Dreams Cradle N Swing and a power outlet, the swing should receive power. The adapter features a built-in

Smart IC chip for auto shut-off and an LED light power indicator for visual confirmation of power on. Operate your swing according to its own instruction manual.

MAINTENANCE AND CARE

To ensure the longevity and safe operation of your KHOI1971 Wall AC Adapter Cable, follow these maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and the swing before cleaning. Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically check the cable and adapter housing for any cuts, fraying, or other signs of damage. If damage is observed, discontinue use immediately.

TROUBLESHOOTING

If you encounter issues with your KHOI1971 Wall AC Adapter Cable, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Swing does not power on.	Adapter not properly plugged in. No power from outlet. Adapter or cable is damaged. Incompatible device.	Ensure adapter is fully inserted into wall outlet and swing. Test outlet with another device. Inspect adapter and cable for damage. Confirm compatibility with Fisher-Price DRG43 model.
LED indicator light is off.	No power to adapter. Adapter malfunction.	Check wall outlet. Ensure secure connection. If problem persists, the adapter may be faulty.
Adapter feels hot during use.	Normal operation (slight warmth). Overload or malfunction (excessive heat).	A slight warmth is normal. If the adapter becomes excessively hot to the touch, unplug it immediately and discontinue use. Contact support.

SPECIFICATIONS

- **Brand:** KHOI1971
- **Model Number:** KHOI1971 CUSTOM MADE
- **Input Voltage:** 100-240 Volts AC, 50-60Hz, 0.35A
- **Output:** Not explicitly stated in product data, but designed for Fisher-Price DRG43.
- **Special Feature:** Smart IC chip for auto shut-off, LED light power indicator.
- **Connector Type:** Barrel connector
- **Compatible Devices:** Fisher-Price DRG43 Snug a Puppy Sweet Dreams Cradle N Swing Baby
- **Item Weight:** 8 ounces

WARRANTY AND SUPPORT

For warranty information or technical support regarding your KHOI1971 Wall AC Adapter Cable, please refer to the

documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07C6HPT6S>

More documents and user manuals: <https://manuals.plus/>