

[Manuals.plus](#) /

› [Childhome](#) /

› Childhome CHBEFRNH140 Cradle House Bed Frame Instruction Manual

Childhome CHBEFRNH140

Childhome CHBEFRNH140 Cradle House Bed Frame

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Childhome CHBEFRNH140 Cradle House Bed Frame. This manual provides essential information for the safe assembly, proper use, and maintenance of your new children's bed frame. Please read all instructions carefully before assembly and retain this manual for future reference.

2. SAFETY INFORMATION

Your child's safety is paramount. Please observe the following safety guidelines:

- Always supervise children when they are using the bed frame.
- Ensure all assembly hardware is securely tightened before use and check periodically.
- Do not allow children to climb on the outside of the bed frame structure.
- Keep small parts and packaging materials away from children during assembly to prevent choking hazards.
- Place the bed frame on a flat, stable surface.
- The maximum recommended weight for this bed frame is 120 kg.

3. PACKAGE CONTENTS

Before beginning assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Wooden frame components (various lengths and shapes for the house structure)
- Assembly hardware (screws, bolts, connectors)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Assembly of the Childhome Cradle House Bed Frame requires basic tools (not included), such as a screwdriver or Allen key. It is recommended that two adults assemble the bed frame.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts diagram (if available) to identify each wooden component and piece of

hardware.

3. **Assemble Base Frame:** Begin by connecting the four main horizontal wooden beams to form the rectangular base of the bed. Secure them using the provided hardware.
4. **Attach Vertical Posts:** Connect the vertical posts to the corners of the assembled base frame. Ensure they are upright and stable.
5. **Construct House Structure:** Attach the angled roof beams to the top of the vertical posts to form the house shape.
6. **Tighten All Connections:** Once the entire frame is assembled, go back and ensure all screws and bolts are securely tightened. Do not overtighten.



Front view of the Childhome Cradle House bed frame, showing its house-shaped structure. This image displays the Childhome Cradle House bed frame from the front, highlighting its distinctive house-shaped design. The frame is made of light-colored wood, ready for assembly or use.



Side view of the Childhome Cradle House bed frame, illustrating its wooden construction. A side view of the Childhome Cradle House bed frame, showcasing its sturdy wooden construction and the open design suitable for a child's room.

5. OPERATING AND USAGE

The Childhome Cradle House Bed Frame is designed to provide a safe and comfortable sleeping area for children.

- **Mattress Placement:** Place a suitable mattress directly onto the floor within the bed frame. Ensure the mattress fits snugly to prevent gaps where a child could become entrapped.
- **Decorating:** The house-shaped frame can be decorated with light fabrics, lights, or toys to create a cozy play and sleep environment. Ensure any decorations are securely attached and do not pose a strangulation or choking hazard.
- **Supervision:** Always ensure adequate supervision, especially for younger children.



Childhome Cradle House bed frame with a mattress placed inside, ready for use. The Childhome Cradle House bed frame is shown here with a mattress fitted, demonstrating how the bed appears when prepared for a child. The mattress fits snugly within the wooden frame.

6. MAINTENANCE AND CARE

Proper care will extend the life of your Childhome Cradle House Bed Frame.

- **Cleaning:** Wipe the wooden frame clean with a damp cloth and mild soap. Dry immediately with a soft cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Hardware Check:** Periodically check all screws, bolts, and connections to ensure they remain tight. Retighten as necessary to maintain stability.
- **Storage:** If disassembling for storage, keep all hardware in a secure bag to prevent loss. Store wooden components in a dry, temperate environment.


7. TROUBLESHOOTING

If you encounter any issues with your bed frame, please refer to these common solutions:

- **Wobbling Frame:** Check all assembly points. Ensure every screw and bolt is fully tightened. Uneven flooring can also cause wobbling; try moving the bed to a different spot or using furniture pads to level it.
- **Missing Parts:** If parts were missing upon initial unboxing, do not attempt to substitute with non-original parts. Contact Childhome customer support for replacements.
- **Damaged Components:** If any wooden components are cracked or broken, discontinue use immediately and contact customer support for advice or replacement parts.

8. SPECIFICATIONS

Feature	Detail
Model Number	CHBEFRNH140 (BEFRHN)
Material	Wood
Style	House/Cabin
Color	Beige
Item Weight	8 Kilograms
Maximum Weight Recommendation	120 Kilograms
Package Dimensions (L x W x H)	163 x 21.5 x 13.5 cm
Assembled Dimensions	Length: 163 cm, Width: 21.5 cm. <i>Note: The assembled height is not explicitly provided in the product specifications, but is significantly taller than the package height.</i>
Assembly Required	Yes

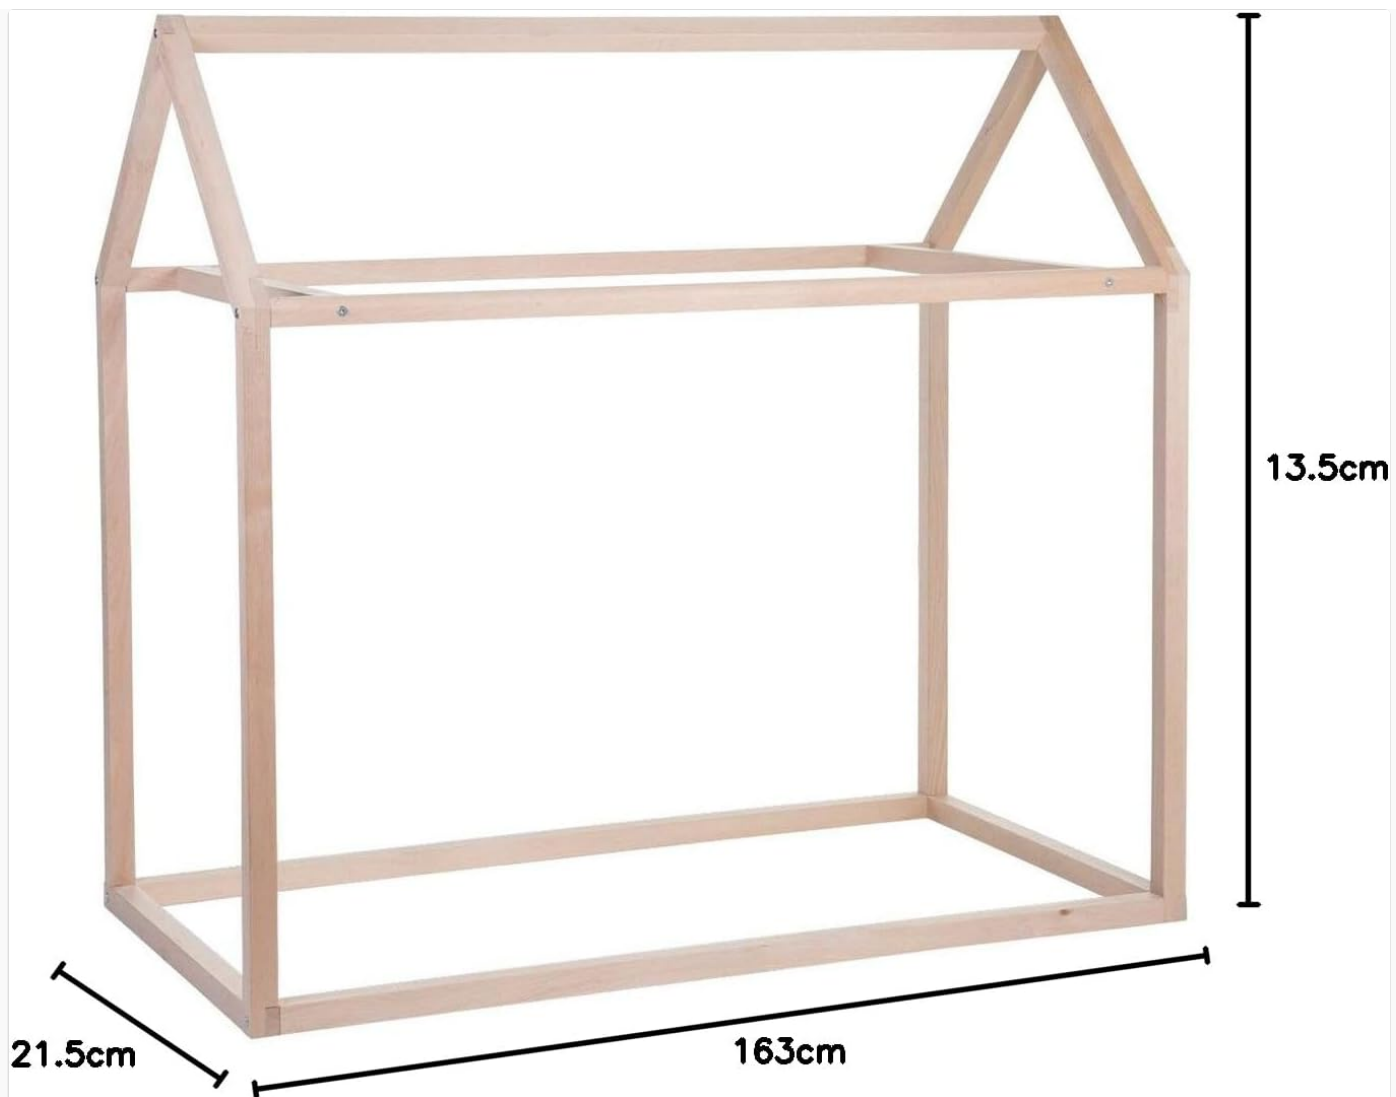

This diagram illustrates the dimensions of the Childhome Cradle House bed frame components. It indicates a length of 163 cm and a width of 21.5 cm. Please note that the 13.5 cm height shown in this diagram likely refers to a component dimension or packaging, as the assembled bed frame is significantly taller.

9. WARRANTY INFORMATION

Childhome products are manufactured to high-quality standards. This product comes with a limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the official Childhome website or contact their customer service directly. Please retain your proof of purchase for any warranty claims.

10. SUPPORT AND CONTACT

For further assistance, questions, or to report missing/damaged parts, please contact Childhome customer support through their official website or the contact information provided with your purchase. When contacting support, please have your model number (CHBEFRNH140) and proof of purchase ready.

You can visit the official Childhome store for more information: [Childhome Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07C6X8JVJ>

More documents and user manuals: **<https://manuals.plus/>**