

[Manuals.plus](#) /

› [RCECAOSHAN](#) /

› RCECAOSHAN Replacement Remote Control for Fujitsu Air Conditioners (Models AR-RAH2U, AR-RAH1U, AR-RAE2U, AR-RAE1U, AR-RY3 to AR-RY21)

RCECAOSHAN AR-RAH2U, AR-RAH1U, AR-RAE2U, AR-RAE1U, AR-RAH2E, AR-RAH1E, AR-RY3, AR-RY4, AR-RY5, AR-RY6, AR-RY7, AR-RY8, AR-RY9, AR-R

RCECAOSHAN Replacement Remote Control for Fujitsu Air Conditioners

Instruction Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, and basic troubleshooting of your RCECAOSHAN replacement remote control for Fujitsu air conditioners. Please read this manual thoroughly before use to ensure proper functionality and to extend the life of your remote control.

This remote control is designed as a direct replacement for various Fujitsu air conditioner remote models. It is not a universal remote control. Please verify compatibility with your original remote control model number before use.

PRODUCT OVERVIEW



Image: Front view of the RCECAOSHAN replacement remote control for Fujitsu air conditioners. The remote features a digital display showing "22°C" and "1:00" time, along with various control buttons such as START/STOP, SET TEMP, AIR CLEAN, COIL DRY, SLEEP, FAN CONTROL, SWING, TIMER, CLOCK ADJUST, TEST RUN, and RESET. It is shown in a white plastic holder.

The RCECAOSHAN replacement remote control is designed to replicate the functions of your original Fujitsu air conditioner remote. It features an ergonomic design for comfortable handling and clear button labeling for ease of use.

SETUP

1. Battery Installation

The remote control requires two (2) AAA 1.5V ordinary batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

***Note:** Remove batteries if the remote control will not be used for an extended period to prevent leakage.*

OPERATING INSTRUCTIONS

This remote control operates via infrared (IR) signals. Ensure there is a clear line of sight between the remote and the air conditioner's receiver.

Basic Functions

- **START/STOP Button:** Press this yellow button to turn the air conditioner ON or OFF.
- **SET TEMP. Buttons (Up/Down Arrows):** Use these buttons to adjust the desired temperature. The display shows temperature in Celsius or Fahrenheit.
- **FAN CONTROL:** Press to cycle through fan speed settings (e.g., Auto, Low, Medium, High).
- **SWING:** Activates or deactivates the air conditioner's louver swing function.

Advanced Functions

- **AIR CLEAN:** Activates the air purification function, if available on your air conditioner model.
- **COIL DRY:** Initiates a coil drying cycle to prevent mold and mildew growth.
- **SLEEP:** Activates the sleep mode, which typically adjusts temperature and fan speed for comfortable sleep.
- **TIMER:** Allows setting ON/OFF timers for the air conditioner. Refer to your air conditioner's main manual for specific timer programming details.
- **CLOCK ADJUST:** Used to set the current time on the remote's display.
- **TEST RUN:** For service and diagnostic purposes. Avoid pressing during normal operation.
- **RESET:** Resets the remote control to its default settings.

***Note:** Not all functions may be supported by every Fujitsu air conditioner model. Refer to your air conditioner's original manual for specific feature availability.*

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's display becomes dim or its response time slows. Always replace both batteries simultaneously with new ones of the same type.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote not responding	◦ Dead or incorrectly installed batteries. ◦ No clear line of sight to the air conditioner. ◦ Remote control malfunction.	◦ Replace batteries with new AAA batteries, ensuring correct polarity. ◦ Ensure no obstructions between the remote and the air conditioner. ◦ Point the remote directly at the air conditioner's receiver.
Air conditioner not responding to specific functions	◦ Function not supported by your air conditioner model. ◦ Temporary glitch.	◦ Consult your air conditioner's original manual for supported features. ◦ Remove and reinsert batteries in the remote.
Temperature display incorrect (Celsius/Fahrenheit)	• Incorrect temperature unit setting.	• The remote supports both Celsius and Fahrenheit. There is usually a hidden button or a combination of buttons to switch between them. Refer to the original remote's manual or try pressing the "TEMP" up/down buttons simultaneously for a few seconds.

SPECIFICATIONS

- **Brand:** RCECAOSHAN
- **Compatible Models:** AR-RAH2U, AR-RAH1U, AR-RAE2U, AR-RAE1U, AR-RAH2E, AR-RAH1E, AR-RY3, AR-RY4, AR-RY5, AR-RY6, AR-RY7, AR-RY8, AR-RY9, AR-RY10, AR-RY11, AR-RY12, AR-RY13, AR-RY14, AR-RY15, AR-RY16, AR-RY17, AR-RY18, AR-RY19, AR-RY20, AR-RY21
- **Connectivity Technology:** Infrared (IR)
- **Battery Type:** 2 x AAA 1.5V (not included)
- **Maximum Range:** 10 Meters (approx. 33 feet)
- **Special Features:** Ergonomic design, Celsius/Fahrenheit display

WARRANTY AND SUPPORT

For any questions or issues not covered in this manual, please contact the seller or manufacturer for assistance. Information regarding specific warranty terms may be provided at the point of purchase or on the product packaging. Manufacturer: Home Appliances Inc Of ShenZhen

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question