

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux 579L French Door Frost Free Refrigerator User Manual

Electrolux DM84X

Electrolux 579L French Door Frost Free Refrigerator User Manual

Model: DM84X

INTRODUCTION

Thank you for choosing an Electrolux appliance. This user manual provides essential information for the safe and efficient operation of your new 579L French Door Frost Free Refrigerator, Model DM84X. Please read this manual thoroughly before installation and use, and keep it for future reference.



Figure 1: Front view of the Electrolux 579L French Door Refrigerator.

This image displays the sleek stainless steel exterior of the Electrolux 579L French Door Refrigerator. It features two upper doors for the refrigerator compartment and a large lower drawer for the freezer, characteristic of a French Door design. The control panel is visible on the upper right door.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is designed for household use only. Do not attempt to repair or modify the appliance yourself. Refer all servicing to qualified personnel.

- Ensure the refrigerator is connected to a properly grounded electrical outlet with the correct voltage (110 Volts).
- Do not use extension cords or ungrounded adapters.
- Keep ventilation openings clear of obstruction.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the appliance before cleaning or performing any maintenance.

SETUP

1. Unpacking

Carefully remove all packaging materials, including tape and protective films. Dispose of packaging responsibly. Check for any damage during transit. If damage is found, contact your retailer immediately.

2. Placement

Place the refrigerator on a flat, stable surface away from direct sunlight, heat sources (like stoves or radiators), and moisture. Ensure adequate air circulation around the appliance. Allow at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) at the top for proper ventilation.



Figure 2: Refrigerator Dimensions.

This diagram illustrates the physical dimensions of the Electrolux refrigerator, indicating a height of 192.2 cm, a width of 87 cm, and a depth of 82.3 cm. These measurements are crucial for planning the installation space.

3. Leveling

Use the adjustable leveling feet at the bottom of the refrigerator to ensure it is perfectly level. A level appliance operates more efficiently and prevents door alignment issues.

4. Electrical Connection

Connect the power cord to a dedicated 110 Volt, 60 Hz, grounded electrical outlet. Do not share the outlet with other high-power appliances. Wait at least 2-4 hours after placement before plugging in the refrigerator to allow refrigerants to settle.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The electronic control panel is located on the exterior of the upper right door, allowing for easy temperature adjustments and feature activation without opening the doors.



Figure 3: Digital Control Panel.

This image provides a detailed view of the refrigerator's digital control panel, featuring a display for temperature readings and various touch-sensitive buttons for functions such as temperature adjustment, ice express, turbo freezer, and holiday mode.

2. Temperature Settings

Use the temperature control buttons on the panel to set the desired temperature for the refrigerator and freezer compartments. Recommended settings are typically 3°C to 5°C (37°F to 41°F) for the refrigerator and -18°C to -20°C (0°F to -4°F) for the freezer.

3. Internal Organization

The 579L capacity offers ample storage. Utilize the adjustable shelves, door bins, and specialized drawers for optimal organization and food preservation.



Figure 4: Empty Interior Layout.

This image shows the interior of the refrigerator with its doors open, revealing the empty shelves, door bins, and crisper drawers in both the upper refrigerator and lower freezer sections. It highlights the spacious and flexible storage design.



Figure 5: Organized Interior with Food.

This image displays the refrigerator's interior fully stocked with a variety of food items, demonstrating its large capacity and how different compartments can be used to organize groceries efficiently, including fruits, vegetables, beverages, and prepared meals.

4. Special Features

- **Frost Free:** This technology prevents ice buildup, eliminating the need for manual defrosting.
- **French Door Design:** The dual upper doors provide easy access to the refrigerator compartment, while the large lower drawer offers convenient access to the freezer.
- **HortiNatura / HortiFruti Drawers:** Dedicated drawers designed to maintain optimal humidity levels for fruits and vegetables, keeping them fresh longer.



Figure 6: Crisper Drawers.

This close-up image highlights the specialized HortiNatura and HortiFruti crisper drawers, designed to optimize humidity for storing fresh produce, ensuring fruits and vegetables remain crisp and extend their shelf life.

MAINTENANCE

1. Cleaning the Interior

Unplug the refrigerator before cleaning. Use a soft cloth and a mild, non-abrasive detergent with warm water to clean the interior surfaces, shelves, and drawers. Rinse with clean water and dry thoroughly. Avoid harsh chemicals or abrasive cleaners.

2. Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain to prevent streaks. Keep the door seals clean to ensure a tight seal.

3. Condenser Coils

Periodically clean the condenser coils located at the back or bottom of the refrigerator. Dust and debris on the coils can reduce

efficiency. Use a vacuum cleaner with a brush attachment to gently remove any buildup.

TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; thermostat set too high; poor ventilation; door left open.	Check power connection; adjust temperature setting; ensure proper clearance; close door completely.
Unusual noises	Appliance not level; items vibrating inside; normal operating sounds (e.g., refrigerant flow).	Level the refrigerator; rearrange items; these sounds are normal.
Water on floor	Drain tube clogged; excessive humidity.	Clear drain tube; ensure doors are closed properly.
Doors not closing properly	Appliance not level; food packages obstructing; dirty door gasket.	Level the refrigerator; rearrange contents; clean door gasket.


If the problem persists after checking these points, please contact Electrolux customer support.

SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model	DM84X
Capacity	579 Liters
Voltage	110 Volts
Color	Inox (Stainless Steel)
Defrost Type	Frost Free
Form Factor	French Door
Installation Type	Freestanding
Dimensions (HxWxD)	192.2 cm x 87 cm x 82.3 cm
Weight	113 kg
Energy Efficiency Label (ENCE)	A+

AS CLASSES DE EFICIÊNCIA ENERGÉTICA MUDARAM e agora se dividem entre A+++ e C.

Confira qual é a nova classificação desta Geladeira Electrolux.

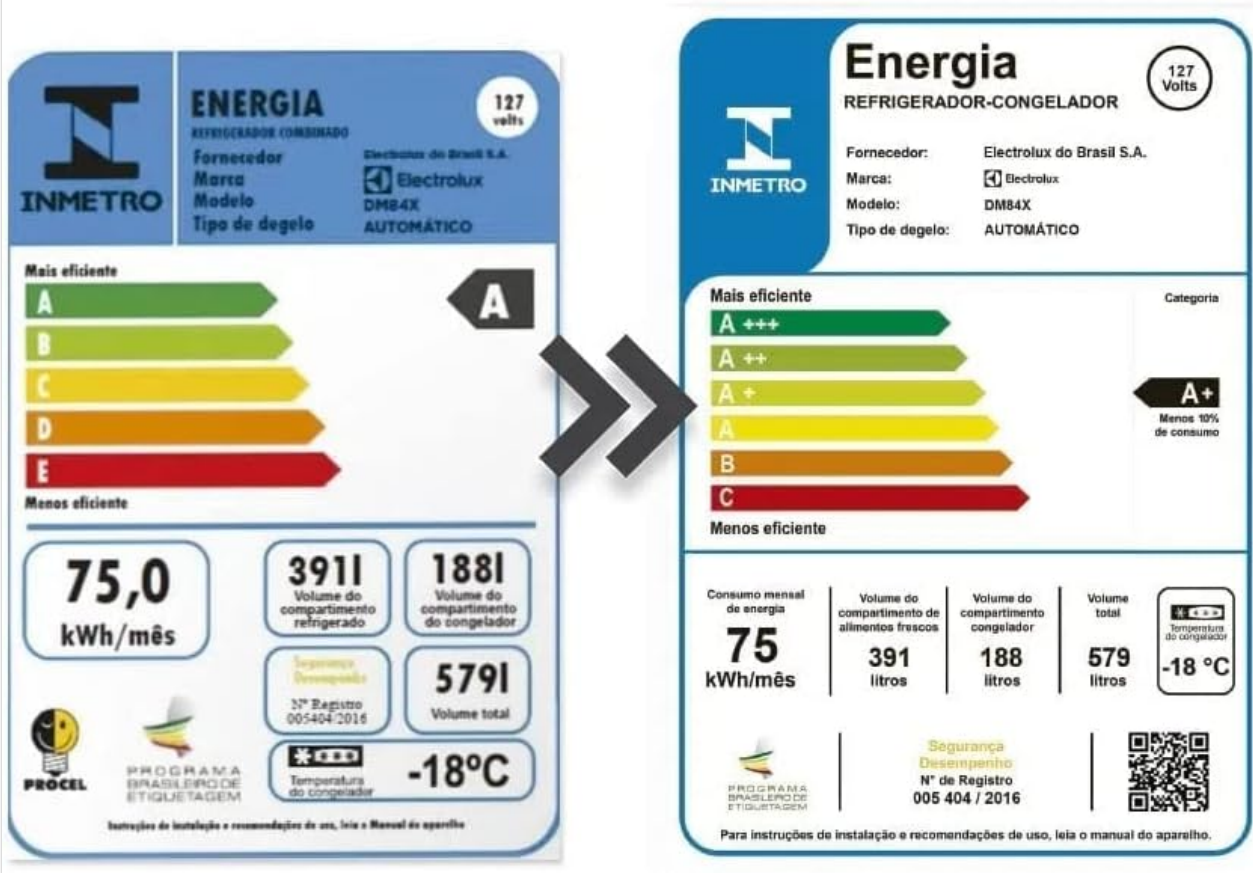

ANTIGA CLASSIFICAÇÃO

NOVA CLASSIFICAÇÃO

*Durante o período de transição, entre setembro de 2021 e dezembro de 2022, você pode receber sua Geladeira Electrolux tanto com a etiqueta antiga quanto com a nova, o que não altera o consumo total de kWh/mês.

Figure 7: Energy Efficiency Label.

This image displays the energy efficiency label for the Electrolux refrigerator, highlighting its A+ rating. It also shows a comparison between older and newer classification standards, indicating the product's high energy efficiency.

WARRANTY AND SUPPORT

Electrolux appliances come with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. You can find contact information on the Electrolux official website or in your product documentation.

For more information, visit the official [Electrolux Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question