



[Manuals.plus](#) /

> [KYOCERA](#) /

> Kyocera MK-8115A Maintenance Kit User Manual for ECOSYS M8124cidn and M8130cidn Printers

KYOCERA MK-8115A (1702P30UN0)

Kyocera MK-8115A Maintenance Kit

USER MANUAL

1. Introduction

This manual provides essential information for the proper installation, operation, and maintenance of the Kyocera MK-8115A Maintenance Kit. This kit is designed to ensure the continued optimal performance and longevity of your Kyocera ECOSYS M8124cidn and ECOSYS M8130cidn multifunctional printers.

Regular replacement of maintenance kit components is crucial for maintaining print quality and preventing potential printer malfunctions. Please read these instructions carefully before proceeding with any procedures.



Image 1.1: Kyocera MK-8115A Maintenance Kit packaging and components.

2. Setup and Installation

Follow these general steps for installing the Kyocera MK-8115A Maintenance Kit. Refer to your specific printer's user manual for detailed, model-specific instructions and safety precautions.

1. **Safety First:** Power off the printer and unplug it from the electrical outlet. Allow the printer to cool down if it has been recently in use.
2. **Access Components:** Open the necessary covers and panels on your printer to access the maintenance kit components. Consult your printer's manual for exact locations.
3. **Remove Old Parts:** Carefully remove the used maintenance kit components. Be aware that some parts may contain residual toner or be hot. Place used parts in a designated disposal bag.
4. **Install New Parts:** Unpack the new components from the MK-8115A kit. Install each new part securely into its corresponding position. Ensure all connections are firm.
5. **Close and Secure:** Close all printer covers and panels firmly.
6. **Power On and Reset:** Plug the printer back in and power it on. Follow the on-screen prompts or consult your printer's manual to reset the maintenance counter. This step is crucial for the printer to recognize the new kit and track its lifespan.

Important: Always handle components with care. Avoid touching sensitive areas like the drum surface.

3. Operating Considerations

Once the Kyocera MK-8115A Maintenance Kit is correctly installed and the maintenance counter is reset, your Kyocera ECOSYS M8124cidn or M8130cidn printer should resume normal operation with improved print quality and reliability.

- **Print Quality:** Monitor print quality after installation. Initial prints may show minor variations as the new components settle.
- **Error Messages:** If any error messages related to maintenance appear, ensure the kit was installed correctly and the counter was reset.
- **Printer Functionality:** The maintenance kit does not alter the printer's operational functions; it restores them to optimal condition.

4. Maintenance and Replacement

The Kyocera MK-8115A Maintenance Kit is designed for a yield of up to 200,000 pages at 5% average coverage. This yield is an estimate and can vary based on usage patterns, paper type, and environmental conditions.

- **Replacement Indicator:** Your printer will typically display a message or warning when the maintenance kit is nearing the end of its life and requires replacement.
- **Timely Replacement:** Replace the kit promptly when indicated to prevent print quality degradation, potential damage to the printer, and ensure continuous reliable operation.
- **Genuine Parts:** Always use genuine Kyocera maintenance kits to ensure compatibility and optimal performance.

5. Troubleshooting

If you encounter issues after installing the maintenance kit, consider the following:

- **Error Message Persists:** Double-check that all components of the maintenance kit are correctly installed and seated. Ensure the maintenance counter has been properly reset according to your printer's manual.
- **Poor Print Quality:** If print quality issues (e.g., streaks, faded prints, spots) persist, verify that all new components are free from damage or contamination. Perform a print quality calibration or cleaning cycle if available on your printer.
- **Printer Not Recognizing Kit:** Confirm that you have installed the correct maintenance kit for your printer model. Ensure all electrical contacts are clean and properly connected.
- **Unusual Noises:** If you hear unusual noises, power off the printer immediately and inspect the installation for any misaligned or improperly secured components.

For persistent issues, refer to your Kyocera ECOSYS M8124cidn or M8130cidn printer's comprehensive user manual or contact Kyocera technical support.

6. Specifications

- **Product Name:** Kyocera MK-8115A Maintenance Kit
- **Model Number:** 1702P30UN0

- **Compatible Printers:** Kyocera ECOSYS M8124cidn, Kyocera ECOSYS M8130cidn
- **Manufacturer:** Kyocera
- **Estimated Yield:** Up to 200,000 pages (at 5% average coverage)
- **Item Weight:** Approximately 33.8 pounds (15.3 kg)
- **ASIN:** B07C7WL8F3

7. Warranty and Support

The Kyocera MK-8115A Maintenance Kit is covered by Kyocera's standard manufacturer warranty. Please refer to the warranty documentation included with your purchase or visit the official Kyocera website for detailed terms and conditions.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Kyocera customer support. When contacting support, have your printer model, the maintenance kit model (MK-8115A or 1702P30UN0), and the ASIN (B07C7WL8F3) readily available for efficient service.

Kyocera Official Website: www.kyoceradocumentsolutions.com