

## Sony SRS-HG10

# Sony Wireless Portable Speaker SRS-HG10 User Manual

Model: SRS-HG10 | Brand: Sony

## 1. INTRODUCTION

Thank you for purchasing the Sony Wireless Portable Speaker SRS-HG10. This manual provides essential information for setting up, operating, and maintaining your speaker. The SRS-HG10 is designed to deliver rich low-frequency sound and clear, expansive high-frequency audio in a compact form factor, supporting High-Resolution Audio, Bluetooth, Wi-Fi, and LDAC. It also integrates with services like Chromecast built-in and Spotify Connect for high-quality music streaming.

Please read this manual thoroughly before using the speaker and retain it for future reference.

## 2. KEY FEATURES

- **High-Resolution Audio Compatibility:** Enjoy high-quality sound even wirelessly.
- **DSEE HX Technology:** Upscales compressed audio sources and CD audio to near High-Resolution Audio quality.
- **LDAC Support:** Enables high-resolution equivalent audio playback when connected wirelessly to compatible devices.
- **Streaming Service Support:** Compatible with various music streaming services like Google Play Music, AWA, and Spotify.
- **Compact Design:** Weighs approximately 700g, featuring two 35mm full-range speaker units.
- **Long Battery Life:** Up to 12 hours of continuous playback on a 5-hour charge.
- **NFC One-Touch Connection:** Easy pairing with NFC-enabled devices.
- **Clear Sound Reproduction:** Equipped with 35mm full-range speakers for clear, low-

distortion audio.

- **Music Center App:** Wireless control via smartphone using the dedicated 'Music Center' application.

### 3. PRODUCT OVERVIEW



Figure 1: Sony SRS-HG10 Wireless Portable Speaker (Grayish Black)

コンパクトかつ  
高音質を実現



Figure 2: Compact design with High-Resolution Audio support.

12時間使用可能な  
ロングバッテリー搭載



Figure 3: Up to 12 hours of playback on a single charge.

## 迫力の重低音を楽しむ 「Extra Bass」



クラブやフェスにいるような  
重低音の迫力を

※写真の商品はブラック色です。

Figure 4: Enjoy powerful deep bass with 'Extra Bass'.

## NFC搭載のスマホで ワンタッチ接続



ペアリング・接続・切断  
接続切り替えがワンタッチ

※写真の商品はブラック色です。

Figure 5: One-touch connection with NFC-enabled smartphones.

## オーディオ入力可能で アナログも高音質



本体背面に  
オーディオ入力端子を搭載

※写真の商品はブラック色です。

Figure 6: Audio input terminal on the back for high-quality analog sound.



質量  
約 **700** g

実用最大出力  
**24** W  
(12W+12W)

電池持続時間  
約 **12** 時間  
(Bluetooth接続時)

**Figure 7:** Product dimensions and key specifications.

---

## 4. SETUP

### 4.1 Initial Power On

1. Ensure the speaker is fully charged before first use. Connect the supplied Micro USB cable to the DC IN 5V port on the speaker and to a USB AC adapter (not supplied).
2. Press and hold the **POWER** button on the top of the speaker until the indicator lights up.

### 4.2 Connecting via Bluetooth

1. Turn on the speaker. The **BLUETOOTH** indicator will flash slowly.
2. On your smartphone or audio device, enable Bluetooth and search for available devices.
3. Select "SRS-HG10" from the list of devices.
4. Once connected, the **BLUETOOTH** indicator will stop flashing and remain lit.

### 4.3 Connecting via Wi-Fi (Music Center App)

For Wi-Fi setup and advanced features, use the Sony | Music Center app (available on App Store and Google Play).

1. Download and install the Sony | Music Center app on your smartphone.
  2. Connect your smartphone to the same Wi-Fi network you intend to use for the speaker.
  3. Open the Music Center app and follow the on-screen instructions to add your SRS-HG10 speaker to the network.
  4. The app will guide you through connecting the speaker to your Wi-Fi network and configuring streaming services.
- 

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Playback

- **Power On/Off:** Press the **POWER** button.
- **Volume Control:** Use the **+** and **-** buttons on the speaker or your connected device.
- **Play/Pause:** Press the **PLAY/PAUSE** button.
- **Skip Tracks:** Use the **NEXT** and **PREVIOUS** buttons (if available on the speaker or via the app).

### 5.2 Using 'Extra Bass'

To enhance low-frequency sound, press the **EXTRA BASS** button on the speaker. Press it again to deactivate.

## 5.3 Using the Music Center App

The Sony | Music Center app allows you to:

- Control playback and volume.
  - Manage Wi-Fi connections and streaming services.
  - Adjust sound settings (e.g., equalizer).
  - Update speaker firmware.
- 

## 6. MAINTENANCE

To ensure long-lasting performance and appearance of your SRS-HG10 speaker:

- Wipe the speaker with a soft, dry cloth.
  - Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene, as these may damage the surface.
  - Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.
  - Keep the speaker away from strong magnetic fields.
- 

## 7. TROUBLESHOOTING

If you experience issues with your speaker, try the following:

- **No Power:** Ensure the battery is charged. Connect the speaker to a power source.
- **No Sound:** Check the volume level on both the speaker and the connected device. Ensure the correct input source is selected.
- **Bluetooth Connection Issues:** Make sure the speaker is in pairing mode. Delete the speaker from your device's Bluetooth list and try pairing again. Ensure no other devices are interfering.
- **Wi-Fi Connection Issues:** Verify your Wi-Fi network is active and the password is correct. Use the Music Center app to reconfigure the Wi-Fi settings.
- **Distorted Sound:** Reduce the volume on both the speaker and the connected device. Check for any physical obstructions or damage to the speaker.

For further assistance, please refer to the official Sony support website or contact customer service.

---

## 8. SPECIFICATIONS

Feature	Specification
Model Name	SRS-HG10

Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth, NFC, Wi-Fi
Special Features	Bluetooth, Wi-Fi, Portable, Wireless, Built-in Microphone
Recommended Use	Music
Compatible Devices	Smartphones
Subwoofer Diameter	35 mm
Surround Sound Channel Configuration	4.2
Color	Grayish Black
Included Components	Micro USB Cable, USB AC Adapter
Product Dimensions	6 cm (Depth) x 20.4 cm (Width) x 6.2 cm (Height)
Product Weight	0.7 kg
Waterproof	No
Control Method	App
Speaker Size	35 mm
Power Source	Battery, Power Cord
Battery	1 Lithium Polymer Battery (Included)
Number of Speakers	2
Output Wattage	24 Watts
Battery Type	Lithium Ion
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

## 9. WARRANTY AND SUPPORT

For product support, warranty information, and to register your product, please visit the official Sony support website. Product registration provides access to helpful information, easy initial setup guides, software update programs, care methods, and accessory introductions to enhance your product experience.

Visit: <https://sony.jp/reg/sa1/>

