

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Marvel Spider-Man Digital Quartz Watch User Manual

Accutime SPD4516

Accutime Marvel Spider-Man Digital Quartz Watch User Manual

Model: SPD4516

INTRODUCTION

This manual provides instructions for the Accutime Marvel Spider-Man Digital Quartz Watch, model SPD4516. Please read this manual thoroughly before using the watch to ensure proper operation and longevity.



Figure 1: Front view of the Accutime Marvel Spider-Man Digital Watch, displaying 10:10 on the LCD screen. The watch features a red and blue plastic casing and strap with Spider-Man web and character designs.

PRODUCT OVERVIEW

The Accutime Marvel Spider-Man Digital Watch is designed for children, featuring a durable plastic construction and an easy-to-read LCD display. It includes basic timekeeping functions and a fun Spider-Man design.

Components:

- **Digital Display:** Shows time in hours and minutes.
- **Function Buttons:** Typically two buttons for setting time and activating features.
- **Plastic Casing:** Durable and lightweight.
- **Plastic Strap:** Adjustable for various wrist sizes.
- **Battery:** Pre-installed (2 x LR41 (1.5V)).



Figure 2: The Accutime Marvel Spider-Man Digital Watch presented in its themed metal tin packaging, alongside another view of the watch with its light-up feature activated.

SETUP

Initial Battery Activation:

The watch comes with a pre-installed battery. If the display is blank, check for a small plastic tab protruding from the side or back of the watch. Gently pull this tab out to activate the battery. If no tab is present, the watch should be ready for use.

Setting the Time:

1. Locate the function buttons on the side of the watch. There are typically two buttons: one for 'Mode' or 'Set' and another for 'Adjust' or 'Light'.
2. Press the 'Mode' or 'Set' button repeatedly until the hour digits begin to flash.
3. Use the 'Adjust' or 'Light' button to increment the hour. Pay attention to AM/PM if applicable (though most simple digital watches for children may use 24-hour format or simply cycle through 12 hours).
4. Press the 'Mode' or 'Set' button again to move to the minute digits.

5. Use the 'Adjust' or 'Light' button to increment the minutes.
6. Press the 'Mode' or 'Set' button one last time to confirm the setting and return to normal time display.



Figure 3: Side view of the watch, highlighting the two control buttons used for setting the time and other functions.

OPERATING INSTRUCTIONS

Reading the Time:

The time is displayed digitally on the LCD screen. The first two digits represent the hour, and the last two digits represent the minutes.

Using the Light Feature:

Press the 'Light' button (often the top right button) to illuminate the display for a few seconds, making it easier to read in low-light conditions. Some models may feature a multi-color LED light show.



Figure 4: The watch with its LED light show active, demonstrating the vibrant illumination around the digital display.

MAINTENANCE

Cleaning:

Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the watch casing. Avoid using harsh chemicals or abrasive cleaners.

Battery Replacement:

When the display becomes dim or stops working, the battery needs to be replaced. This watch uses 2 x LR41 (1.5V) batteries. Battery replacement should ideally be performed by a qualified technician to avoid damaging the watch or compromising its water resistance (if any). The watch is not waterproof.



Figure 5: Rear view of the watch, showing the case back with product details and battery information.

Storage:

Store the watch in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, consider removing the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is dead or low. Battery activation tab still in place.	Remove battery tab. Replace battery (2 x LR41).
Time is incorrect.	Time was not set correctly.	Refer to "Setting the Time" section to reset.

Problem	Possible Cause	Solution
Buttons are unresponsive.	Battery is too low. Internal malfunction.	Replace battery. If issue persists, contact customer support.
Light feature not working.	Battery is low. LED malfunction.	Replace battery. If issue persists, contact customer support.

SPECIFICATIONS

- Model Number:** SPD4516
- Display Type:** Digital LCD
- Movement:** Quartz
- Case Material:** Plastic
- Strap Material:** Plastic
- Case Diameter:** 31 mm
- Battery Type:** 2 x LR41 (1.5V) (Included)
- Water Resistance:** Not Water Resistant
- Manufacturer:** Accutime Watch Corp.

WARRANTY AND SUPPORT

This watch comes with a one-year warranty from Accutime Watch. For warranty claims or technical support, please contact Accutime Watch customer service. Keep your proof of purchase for warranty validation.

Note: The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question