

SilverCrest SC-Black

Silvercrest Digital Kitchen Scale User Manual

Model: SC-Black | Brand: SilverCrest

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Silvercrest Toughened Glass Electronic Digital Kitchen Weighing Measurement Scale. This precision instrument is designed for accurate weighing of food items and liquids in your kitchen. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Silvercrest Digital Kitchen Scale, a sleek black device with a digital display showing a measurement of 64 units, with three slices of butter placed on its surface.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the product.

- **General Safety:** Keep all safety advice and instructions in a safe place for future reference.
- **Children and Packaging:** WARNING! DANGER OF DEATH AND ACCIDENTS FOR TODDLERS AND CHILDREN! Never leave packaging material unsupervised. Children may underestimate the dangers. Always keep children away from the product.
- **Product Condition:** Check the product for any damage before use. Do not use a damaged product.
- **Electromagnetic Interference:** Magnetic fields may cause the product to malfunction. If this happens, briefly remove the product from the field and reinsert it.
- **Food Safety:** The taste and smell of your food are not detrimentally affected by this product.

- **Battery Safety:** DANGER TO LIFE! Keep batteries/rechargeable batteries out of reach of children. If accidentally swallowed, seek immediate medical attention. EXPLOSION! Never recharge non-rechargeable batteries. Do not short-circuit batteries/rechargeable batteries and/or throw them into fire. Overheating or bursting can be the result. Never throw batteries/rechargeable batteries into fire or water. Do not exert mechanical force on batteries/rechargeable batteries.
- **Risk of Battery Leakage:** Avoid extreme environmental conditions and temperatures, which could affect batteries/rechargeable batteries, e.g., radiators/direct sunlight. Avoid contact with the skin, eyes, and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of water and seek immediate medical attention. WEAR PROTECTIVE GLOVES! Leaked or damaged batteries/rechargeable batteries can cause burns on contact with the skin.
- **Product Damage:** Only use the specified type of battery. When inserting, ensure the correct polarity. This is shown inside the battery compartment. Clean the contacts on the battery and in the battery compartment before inserting. Remove exhausted batteries/rechargeable batteries from the product immediately.
- **Environmental Conditions:** Ensure accurate weighing even in high humidity areas as its splash-proof design.

3. PREPARING THE PRODUCT FOR USE (SETUP)

Before using your kitchen scale, follow these steps for proper setup.

3.1 Unpacking

- Carefully remove the scale and all accessories from the packaging.
- Verify that all items are present and that the product is undamaged. If any parts are missing or damaged, do not use the product.

3.2 Battery Installation

The scale requires one 3V CR2032 button cell battery. To install or replace the battery:

1. Locate the battery compartment on the back of the product.
2. Open the battery compartment cover.
3. Insert the new CR2032 battery with the positive (+) side facing up, ensuring correct polarity.
4. Close the battery compartment cover securely.

3.3 Placement

For accurate measurements, place the scale on a hard, flat, and stable surface. Avoid soft or uneven surfaces, which can lead to inaccurate readings.

4. OPERATION

4.1 Turning On/Off

- **Turning On:** Press the **ZERO** button to turn on the scale. The LCD display will show "0" or "0 g" when ready for use.
- **Turning Off:** Press and hold the **ZERO** button for approximately 3 seconds to turn off the scale. The scale also features an auto power-off function to conserve battery life if left idle for a period.

4.2 LCD Display Overview

The LCD display provides various indicators for measurement and status:

- **Measurement Value:** Displays the current weight or volume.
- **Unit Indicator:** Shows the selected unit (g, oz, ml, fl.oz).
- **Tare Symbol:** Indicates when the tare function is active.

- **Negative Value Symbol:** Appears if a negative weight is measured (e.g., after taring and removing an item).
- **Low Battery Indicator:** A battery icon will appear when the battery needs replacement.

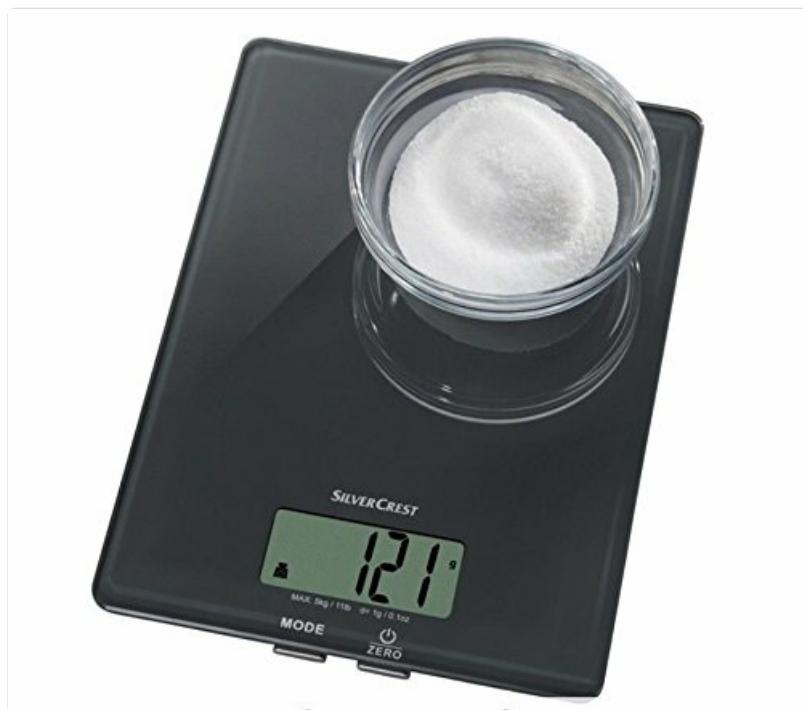


Image: The Silvercrest Digital Kitchen Scale displaying a measurement of 121 units, with a clear glass bowl filled with white sugar placed on its surface.

5. WEIGHING

To weigh items using your Silvercrest kitchen scale:

1. Ensure the scale is on a flat, stable surface and turned on. The display should show "0" or "0 g".
2. Place the item directly onto the weighing surface. The display will show the weight.
3. For weighing ingredients in a container, place the empty container on the scale first. Press the **ZERO** button to reset the display to "0" (tare function). Then add your ingredients to the container. The display will show only the weight of the added ingredients.
4. The scale will automatically lock the reading once the data is stable.

6. CHANGING THE MEASURING UNIT

Your Silvercrest kitchen scale can measure in various units, including grams (g), ounces (oz), milliliters (ml), and fluid ounces (fl.oz) for liquids.

- To switch between units, press the **MODE** button. Each press will cycle through the available units.
- The display will indicate the currently selected unit.
- The Aquatronic function allows for precise measurement of liquids (water and milk) in ml or fl.oz.

7. CLEANING AND MAINTENANCE

Proper care ensures the longevity and accuracy of your scale.

- Never immerse the product in water or other liquids. This can damage the product.
- Clean the product with a slightly dampened, fluff-free cloth. To remove more stubborn dirt, you can use a mild soap solution. Ensure no moisture enters the product.

- Do not use abrasive cleaning agents or harsh chemicals.
- Store the scale in a dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your scale, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display shows "Eeee"	Overload. The maximum weighing capacity (5 kg) has been exceeded.	Remove the item from the scale immediately. Do not exceed the maximum weight limit.
Display shows "Lo"	Low battery.	Replace the battery (CR2032) as described in the "Battery Installation" section.
Inaccurate or fluctuating readings	Scale is not on a flat, stable surface; external vibrations; magnetic interference.	Ensure the scale is on a solid, level surface. Avoid placing near vibrating appliances or strong magnetic fields.
Scale does not turn on	Dead battery; incorrect battery installation.	Check battery polarity and ensure it is correctly inserted. Replace battery if necessary.

9. SPECIFICATIONS

- **Model:** SC-Black
- **Brand:** SilverCrest
- **Material:** Toughened Glass
- **Color:** Black
- **Display Type:** LCD
- **Maximum Capacity:** 5 kg / 11 lb 17.6 oz
- **Minimum Weight:** 1 g / 0.0353 oz
- **Units:** g, oz, ml, fl.oz
- **Power Source:** 1 x 3V CR2032 button cell battery
- **Dimensions (LxWxH):** 23 x 17 x 2 Centimeters
- **Special Features:** Aquatronic function for liquid measurement, Tare function, Auto power on/off.



Image: A collection of Silvercrest kitchen scales, showcasing different designs and materials including glass, stainless steel, and wood, each with various food items like chocolate, raspberries, and blueberries on them.

10. DISPOSAL

Help protect the environment by disposing of the product and its packaging responsibly.

- **Packaging:** The packaging is made entirely of recyclable materials. Dispose of it in accordance with local recycling regulations.
- **Product:** The product contains electronic components and batteries. Do not dispose of it with household waste. Take it to an appropriate collection point for the recycling of electrical and electronic equipment.
- **Batteries:** Dispose of used batteries at designated collection points or return them to the retailer. Do not dispose of batteries with household waste.

11. WARRANTY AND SUPPORT

Your Silvercrest Digital Kitchen Scale comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty information provided with your purchase or contact the manufacturer directly.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact SilverCrest customer service. Contact details can typically be found on the product packaging or the official SilverCrest website.

