

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Miele](#) /
- › [Miele WCE 670 WCS Washing Machine User Manual](#)

Miele WCE 670 WCS TDos&WiFi

Miele WCE 670 WCS Washing Machine User Manual

Model: WCE 670 WCS TDos&WiFi

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation of your new Miele WCE 670 WCS washing machine. Please read this manual carefully before first use to ensure proper installation, operation, and maintenance. Keep this manual for future reference.



Image: Miele WCE 670 WCS Washing Machine. This image shows the front of the washing machine, highlighting its sleek white design, the central porthole door, and the intuitive control panel located at the top right.

SETUP AND INSTALLATION

Unpacking and Placement

- Carefully remove all packaging materials. Ensure no parts are left inside the drum or behind the machine.
- Remove the transport bars from the rear of the machine. Refer to the quick start guide for detailed instructions on transport bar removal.
- Place the washing machine on a firm, level surface. Adjust the feet to ensure the machine is stable and level.
- Ensure adequate ventilation around the machine. Do not install in areas prone to freezing temperatures.

Water and Electrical Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is secure to prevent leaks.
- Position the drain hose into a suitable drain or sink, ensuring it is securely fixed to prevent displacement during operation.
- Plug the power cord into a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the machine's rating plate.

Initial Setup

- Before the first wash, run a maintenance wash cycle without laundry and detergent to clean the drum.
- Familiarize yourself with the control panel.
- **TwinDos System:** Insert the UltraPhase 1 and UltraPhase 2 detergent cartridges into their respective compartments. The machine will automatically detect them.
- **WiFiConn@ct:** To enable smart features and app control, follow the instructions in the display to connect your washing machine to your home Wi-Fi network. Download the Miele@mobile app for remote control and monitoring.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Miele WCE 670 WCS Control Panel. This detailed view of the control panel highlights the central display, the rotary program selector on the right, and various touch buttons for settings like temperature, spin speed, and extra options.

- The display shows program information, time remaining, and settings.
- The rotary selector allows you to choose wash programs.
- Buttons for temperature, spin speed, and additional options (e.g., "Short", "Pre-ironing", "Water Plus", "Extra").
- The "Start/Stop" button initiates or pauses a cycle.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the door and load laundry loosely into the drum. Do not overload the machine.
- Close the door firmly until it clicks.

Detergent Dispensing

- **TwinDos:** The machine automatically dispenses the correct amount of UltraPhase 1 and 2 liquid detergents based on the program and load. Ensure TwinDos is activated in the settings.
- **CapDosing:** For special applications (e.g., wool care, reproofing), insert a Miele Cap into the CapDosing compartment. The machine will dispense the contents at the appropriate time.
- **Manual Detergent:** If not using TwinDos or CapDosing, add powder or liquid detergent to the main detergent compartment in the dispenser drawer.

Program Selection and Start

- Turn the program selector to choose the desired wash program (e.g., Cotton, Minimum Iron, Delicates, Wool, Silk, Express 20, Dark Garments/Jeans, Outdoor, Proofing, Shirts).
- Adjust temperature and spin speed if necessary using the corresponding buttons.
- Select any additional options (e.g., "Pre-ironing" to reduce creasing, "Water Plus" for increased water levels).
- Press the "Start/Stop" button to begin the wash cycle. The door will lock, and the program will start.
- To pause a program, press "Start/Stop" again. To cancel, turn the program selector to "Off".

Using WiFiConn@ct

- Once connected to your home network, you can control and monitor your washing machine via the Miele@mobile app on your smartphone or tablet.
- Features include remote start, program selection, status updates, and notifications when the cycle is complete.
- Ensure the "MobileControl" option is enabled on the machine's control panel to allow app control.

MAINTENANCE AND CARE

Cleaning the Detergent Dispenser Drawer

- Regularly remove and clean the detergent dispenser drawer to prevent residue buildup.
- Rinse under warm water and use a brush if necessary.

Cleaning the Drum and Door Seal

- Wipe the door seal after each wash to remove lint and moisture.
- Run a "Maintenance Wash" program (if available) or a hot wash cycle with a drum cleaner periodically to prevent odors and bacteria buildup.

Cleaning the Drain Filter

- Locate the drain filter access panel at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully unscrew and remove the filter. Clean it under running water and remove any foreign objects.
- Reinsert and securely tighten the filter.

TwinDos System Care

- If you do not use the TwinDos system for an extended period, run the "TwinDos maintenance" program to flush the lines and prevent blockages.
- Replace empty TwinDos cartridges promptly.

TROUBLESHOOTING

Before contacting Miele Service, please consult the following table for common issues and their solutions. Many problems can be resolved without professional assistance.

Problem	Possible Cause	Solution
Machine does not start.	Power cord unplugged, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start/Stop.
Water not entering machine.	Water tap closed, inlet hose kinked, water filter blocked.	Open water tap, straighten hose, clean water inlet filter.
Poor wash results.	Overloading, incorrect detergent dosage, wrong program.	Reduce load size, check TwinDos settings or manual dosage, select appropriate program.
Unusual noise or vibration.	Transport bars not removed, machine not level, foreign objects in drum/pump.	Ensure transport bars are removed, level the machine, check drain filter and drum for objects.
Error message on display.	Specific issue indicated by code.	Refer to the full operating instructions for specific error code meanings and solutions. If persistent, contact Miele Service.

SPECIFICATIONS

Feature	Value
Model Number	WCE 670 WCS TDos&WiFi
Dimensions (H x W x D)	85 x 59.6 x 63.6 cm
Capacity	8 Kilograms
Energy Efficiency Class	A+++
Annual Energy Consumption	176 kWh/year
Annual Water Consumption	10120 Liters/year
Maximum Spin Speed	1400 RPM
Spin-drying Efficiency Class	B
Noise Level (Washing)	48 dB
Noise Level (Spinning)	72 dB

Feature	Value
Special Features	TwinDos, WiFiConn@ct, CapDosing, Pre-ironing, Delay Start

WARRANTY AND SUPPORT

Your Miele washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to order spare parts, please contact Miele Customer Service. You can find contact information on the Miele official website or in the documentation provided with your appliance.

When contacting support, please have your model number (WCE 670 WCS TDos&WiFi) and serial number ready. The serial number is typically located on the rating plate inside the door frame or on the back of the appliance.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This includes:

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Keep children and pets away from the appliance during operation.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Always unplug the appliance from the electrical outlet before cleaning or performing any maintenance.

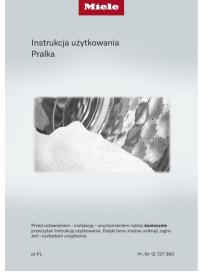
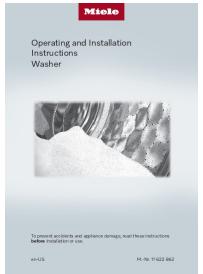
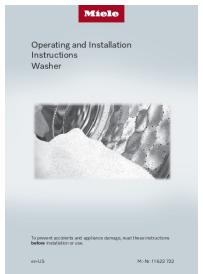
VIDEO RESOURCES

No official product videos from the seller were found in the provided data to embed in this manual. Please refer to the Miele official website for any available video tutorials or demonstrations related to your washing machine model.

© 2024 Miele. All rights reserved.

Related Documents - WCE 670 WCS TDos&WiFi

	<p>Miele WWD660 WCS TDos W1 Washing Machine: Features, Specs, and Dimensions</p> <p>Detailed product information for the Miele WWD660 WCS TDos W1 front-loading washing machine. Explore features like TwinDos, CapDosing, Pre-Ironing, Miele@home connectivity, and technical specifications including dimensions and energy efficiency.</p>
--	---

	<p>Miele WCE 670 Washing Machine Quick Start Guide</p> <p>A concise guide to operating the Miele WCE 670 washing machine, covering preparation, program selection, detergent use, and troubleshooting.</p>
	<p>Miele WWG 880 Pralka Instrukcja Użytkowania</p> <p>Szczegółowa instrukcja obsługi pralki Miele WWG 880, obejmująca instalację, użytkowanie, wybór programów, konserwację i rozwiązywanie problemów. Dowiedz się, jak bezpiecznie i efektywnie korzystać z urządzenia Miele.</p>
	<p>Miele WWI 860 Washing Machine: Operating Instructions</p> <p>Comprehensive operating instructions for the Miele WWI 860 washing machine, covering installation, usage, maintenance, and troubleshooting for optimal performance and safety.</p>
	<p>Miele Washer Operating and Installation Instructions</p> <p>Comprehensive guide for Miele washing machines, covering operating instructions, installation procedures, safety precautions, and maintenance tips. Learn how to use various programs, extra options, and the TwinDos system for optimal laundry care.</p>
	<p>Miele Washing Machine Operating and Installation Instructions</p> <p>Comprehensive guide for Miele washing machines, covering operation, installation, safety, maintenance, and troubleshooting. Learn how to use various programs, settings, and features like TwinDos and MobileStart for optimal laundry care.</p>