



[Manuals.plus](#) /

› [Barbasol](#) /

› Barbasol Rechargeable Electric Beard Trimmer User Manual

## Barbasol CBT13002BOX

# Barbasol Rechargeable Electric Beard Trimmer User Manual

Model: CBT13002BOX

## INTRODUCTION

---

Thank you for choosing the Barbasol Rechargeable Electric Beard Trimmer. This manual provides detailed instructions for the safe and effective use of your new grooming device. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Barbasol Rechargeable Electric Beard Trimmer shown alongside its retail packaging, highlighting its key features.

## SAFETY INFORMATION

**WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:

- Keep blades away from water.
- Do not use on infants or children.
- Be cautious when using blades.
- Always unplug the trimmer when not in use.
- Follow recommended cleaning and maintenance procedures.
- Do not immerse the charging adapter or cord in water.
- Do not use if the trimmer or charging cable is damaged.

## PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present:

- Barbasol Rechargeable Electric Beard Trimmer
- Charging Cable/Adapter
- Adjustable Guide Comb
- Cleaning Brush (typically included with trimmers)

## PRODUCT FEATURES

---

The Barbasol Rechargeable Electric Beard Trimmer is designed for efficient and comfortable grooming. Key features include:

- **Built-In Adjustable Settings:** Features 5 position guides (3/16" - 9/16") with an easy click mechanism for achieving different beard lengths.
- **Rechargeable Battery:** Provides approximately 30 minutes of shaving time after an 8-hour charging period.
- **Washable Heads:** Designed for easy cleaning by rinsing under water.
- **Stainless Steel Blades:** Durable and sharp blades for precise trimming.

**RECHARGEABLE**

**8 hours charging time provides  
about 30 minutes shaving time**



Image: A detailed view of the trimmer head, illustrating the adjustable guide comb for various length settings.



Image: A hand holding the Barbasol trimmer, demonstrating its comfortable grip design.

## SETUP

---

### Initial Charging

1. Before first use, ensure the trimmer is fully charged.
2. Connect the charging cable to the trimmer and plug the adapter into a standard electrical outlet.
3. Allow the trimmer to charge for approximately 8 hours for a full charge. The charging indicator light (if present) will typically illuminate during charging.
4. Once fully charged, unplug the trimmer from the power outlet.

### Attaching the Guide Comb

1. Ensure the trimmer is turned off before attaching or detaching the guide comb.
2. Align the guide comb with the trimmer head and gently push until it clicks into place.
3. To remove, gently pull the guide comb away from the trimmer head.

## OPERATING THE TRIMMER

---

### Adjusting Length Settings

1. With the guide comb attached, locate the adjustment mechanism on the trimmer.
2. Slide or click the mechanism to select one of the 5 available length settings (3/16" - 9/16").
3. Ensure the desired length is securely locked before beginning to trim.

### Trimming Your Beard

1. Ensure your beard is clean and dry before trimming.
2. Turn on the trimmer by sliding the power switch.
3. Start with a longer setting if you are unsure of the desired length, and gradually reduce it.
4. Hold the trimmer with the blades flat against your skin and move it against the direction of hair growth for an even trim.
5. For detailing or shaping, you may remove the guide comb and use the bare blades carefully.
6. After trimming, turn off the trimmer.

## MAINTENANCE

---

---

## Cleaning the Trimmer

1. Always ensure the trimmer is turned off and unplugged before cleaning.
2. Remove the guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades and the trimmer body.
4. The trimmer heads are washable. Rinse the blades under running water. **Do not immerse the entire trimmer body in water.**
5. Shake off excess water and allow the blades to air dry completely before reattaching the guide comb or storing the trimmer.

## Blade Care

For optimal performance and longevity, it is recommended to periodically oil the blades with a drop of light machine oil (not included) after cleaning, especially if the trimmer is used frequently. This helps maintain blade sharpness and smooth operation.

---

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 8 hours.
Trimmer pulls hair or cuts poorly.	Blades are dirty or dull.	Clean the blades thoroughly. Apply a drop of oil to the blades. If problem persists, blades may need replacement (contact support).
Trimmer makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure blades are clean and properly seated. Apply oil to the blades.
Battery life is shorter than expected.	Battery not fully charged or aging.	Ensure full 8-hour charge. Battery performance may decrease over time.

---

## SPECIFICATIONS

Feature	Detail
Model Name	BARBASOL RECHARGABLE BEARD TRIMMER
Item Model Number	CBT13002BOX
Brand	Barbasol
Power Source	Battery Powered
Charging Time	Approx. 8 hours
Shaving Time	Approx. 30 minutes
Adjustable Settings	5 positions (3/16" - 9/16")
Blade Material	Stainless Steel

Feature	Detail
Item Weight	8.4 ounces
Product Dimensions	1 x 1 x 1 inches
Color	Black
Material	ABS Plastic

## WARRANTY AND SUPPORT

---

### Warranty Information

This Barbasol Rechargeable Electric Beard Trimmer comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

### Customer Support

For technical assistance, warranty claims, or general inquiries, please contact Barbasol customer support. Refer to the product packaging or the official Barbasol website for the most current contact information.