

Manuals.plus /

- › PowerXL /
- › PowerXL Smokeless Electric Grill User Manual

## PowerXL PG-1500

# PowerXL Smokeless Electric Grill User Manual

Model: PG-1500 | Brand: PowerXL

## 1. INTRODUCTION

Welcome to the PowerXL Smokeless Electric Grill user manual. This innovative indoor grill allows you to enjoy the authentic taste of grilled foods year-round, without the smoke typically associated with outdoor grilling. Equipped with a built-in fan and non-stick cooking surfaces, it ensures a clean and efficient cooking experience. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.



Figure 1: PowerXL Smokeless Electric Grill

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to prevent injury or damage. This appliance is for household use only.

- Read all instructions carefully before operation.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure the water tray is filled with water before use to minimize smoke.

## 3. PRODUCT COMPONENTS

Your PowerXL Smokeless Electric Grill comes with the following main components:

**A. Grill Base Unit:** Houses the heating element and fan.

**B. Interchangeable Grill Plate:** Non-stick Cerami-Tech coated surface for grilling.

**C. Interchangeable Griddle Plate:** Non-stick Cerami-Tech coated flat surface for griddling (may be sold separately or included).

**D. Glass Lid:** Transparent lid with a silicone seal to contain heat and minimize smoke.

**E. Heating Element:** Provides even heat distribution.

**F. Oil Drip Tray:** Collects excess fat and grease.

**G. Water Tray:** Located beneath the drip tray, helps to cool smoke and reduce odors.

**H. Detachable Power Cord:** For easy storage.



Figure 2: Exploded View of Components



Figure 3: All Components Included



Figure 4: Griddle Plate

## 4. SETUP

Before first use, wash all removable parts (Grill/Griddle Plate, Glass Lid, Oil Drip Tray, Water Tray) in warm, soapy water or in the dishwasher. Wipe the main unit with a clean, damp cloth.

1. Place the Grill Base Unit on a stable, heat-resistant surface.
2. Slide the Water Tray into the base unit. Ensure it is properly seated.
3. Pour approximately 2 cups (470ml) of water into the Water Tray. This is crucial for the smokeless function.
4. Place the Oil Drip Tray on top of the Water Tray.
5. Insert the Heating Element into the designated slots on the base unit, ensuring it clicks securely into place.
6. Place either the Grill Plate or Griddle Plate on top of the Heating Element.
7. Attach the Glass Lid.
8. Plug the Detachable Power Cord into the unit, then into a standard 110V electrical outlet.

## 5. OPERATING INSTRUCTIONS

Your PowerXL Smokeless Electric Grill is designed for versatile indoor cooking. Follow these steps for optimal results:

### 5.1. Powering On and Temperature Control

1. Ensure the unit is properly assembled and the Water Tray is filled.
2. Press the **POWER** button to turn on the grill. The fan will automatically activate.

3. Use the temperature dial to select your desired cooking temperature, ranging up to 450°F. The LED lights around the dial will indicate the selected temperature.
4. Allow the grill to preheat for 5-10 minutes until it reaches the set temperature.

## **5.2. Grilling and Griddling**

Place your food directly onto the preheated Grill Plate or Griddle Plate. The non-stick Cerami-Tech coating ensures easy food release.



Figure 5: Grilling Steaks and Vegetables



Figure 6: Griddling Breakfast Items

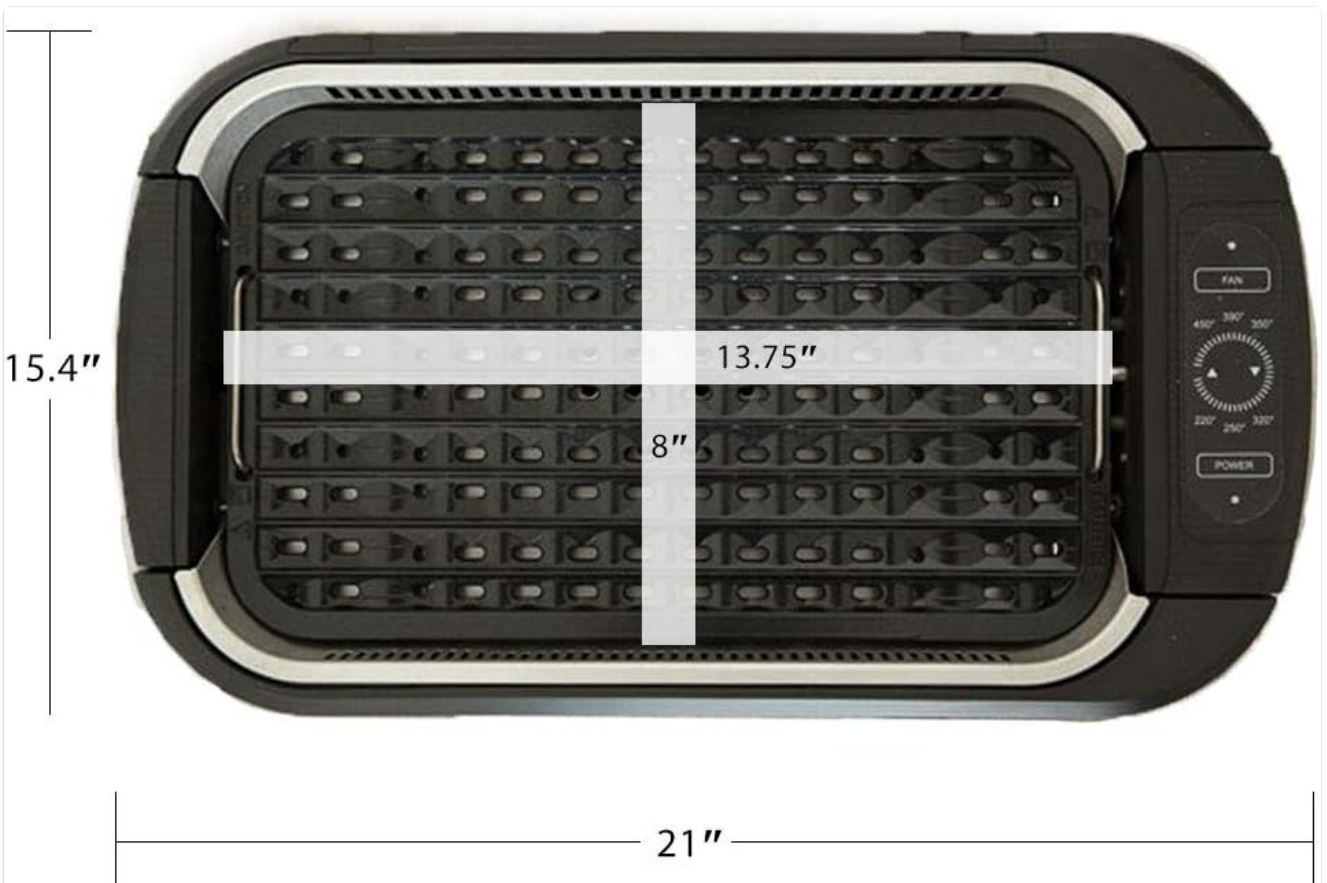


Figure 7: Cooking Chicken

### 5.3. Smokeless Technology

The integrated Turbo Extraction Fan and the water in the Water Tray work together to capture and reduce smoke. Ensure the fan is always on during cooking for optimal smokeless performance.

The Oil Drip Tray collects fats and juices, preventing them from burning and creating smoke. This design contributes to a cleaner cooking environment and easier cleanup.

## 6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your PowerXL Smokeless Electric Grill.

1. Always unplug the unit and allow it to cool completely before cleaning.
2. Remove the Grill/Griddle Plate, Glass Lid, Oil Drip Tray, and Water Tray.
3. These removable parts are **dishwasher safe** for convenient cleaning.
4. For manual cleaning, wash parts with warm, soapy water using a non-abrasive sponge or cloth.
5. Wipe the Grill Base Unit with a damp cloth. Do not immerse the base unit in water.
6. Empty and clean the Water Tray after each use.



Figure 8: Dishwasher Safe Grill Plate

## 7. TROUBLESHOOTING

| Problem                         | Possible Cause  | Solution  |
|---------------------------------|---|---|
| Grill not turning on.           | Not plugged in; power button not pressed; power outlet issue.     | Ensure cord is securely plugged into unit and outlet. Press POWER button. Check outlet with another appliance.    |
| Excessive smoke during cooking. | Water tray empty; fan not on; too much fat/grease; high-fat food. | Fill water tray. Ensure fan is on. Empty drip tray if full. For high-fat foods, use less oil and trim excess fat. |
| Food sticking to the plate.     | Plate not properly seasoned; food not cooked enough to release.   | Ensure plate is clean and lightly oiled before use. Allow food to cook longer before attempting to flip.          |
| Uneven cooking.                 | Grill not preheated; food unevenly distributed.                   | Allow sufficient preheating time. Distribute food evenly across the cooking surface.                              |

## 8. SPECIFICATIONS

**Brand:** PowerXL

**Model Number:** PG-1500

**Product Dimensions:** 21"D x 15.4"W x 8.1"H

**Wattage:** 1500 watts

**Voltage:** 110 Volts

**Item Weight:** 15.47 pounds

**Material:** Plastic (Base), Ceramic-Tech (Plates)

**Color:** Black

**Special Feature:** Programmable, Smokeless

**Number of Settings:** 6 (Temperature)

**UPC:** 752356825034, 752356824587

**First Available:** March 27, 2018



Figure 9: Product Dimensions

## 9. WARRANTY AND SUPPORT

This PowerXL Smokeless Electric Grill comes with a **Limited Warranty**. For detailed warranty information, product registration, or customer support, please refer to the warranty card included in your product packaging or visit the official PowerXL website. You can also find additional resources and FAQs on the PowerXL store page on Amazon. For further assistance, please contact PowerXL Customer Service.