



[Manuals.plus](#) /

> [WOLF Garten](#) /

> WOLF-Garten Power Wheels Loopo M (Model 122-116-650) Instruction Manual

## WOLF Garten 122-116-650

# WOLF-Garten Power Wheels Loopo M (Model 122-116-650) Instruction Manual

For Loopo M Robotic Lawnmowers, Model Year 2018 and Earlier

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective installation, operation, and maintenance of your WOLF-Garten Power Wheels Loopo M, model 122-116-650. These power wheels are designed as a replacement accessory for WOLF-Garten Loopo M robotic lawnmowers from model year 2018 and earlier, enhancing their performance and longevity.

Please read this manual thoroughly before proceeding with installation or use. Keep it in a safe place for future reference.

## SAFETY INSTRUCTIONS

---

- Always disconnect the robotic lawnmower from its power source and ensure it is turned off before performing any installation, maintenance, or cleaning.
- Wear appropriate personal protective equipment (PPE), such as gloves, during installation to prevent injury.
- Ensure the robotic lawnmower is stable and cannot move unexpectedly during wheel replacement.
- Use only original WOLF-Garten replacement parts and accessories to ensure compatibility and maintain product warranty.
- Keep children and pets away from the work area during installation.

## PACKAGE CONTENTS

---

Verify that all components are present in the package:

- WOLF-Garten Power Wheels Loopo M (Model 122-116-650) - Quantity: 2
- Instruction Manual (this document)



Image: WOLF-Garten Power Wheels Loopo M, Model 122-116-650. This image shows the two large power wheels designed for the Loopo M robotic lawnmower.

## SETUP AND INSTALLATION

---

This section details the steps to replace the existing wheels on your Loopo M robotic lawnmower with the new WOLF-Garten Power Wheels.

1. **Prepare the Lawnmower:** Turn off your Loopo M robotic lawnmower and disconnect it from its charging station and any power source. Place it on a stable, flat surface, preferably upside down or tilted to access the wheels easily.
2. **Remove Old Wheels:** Depending on your specific Loopo M model, the wheels are typically secured by a central screw, a retaining clip, or a quick-release mechanism. Carefully identify and remove the fastening mechanism. Gently pull the old wheel off the axle. Repeat for the other wheel.
3. **Inspect Axle:** Clean any debris or grass clippings from the axle and surrounding area. Inspect the axle for any damage or wear.
4. **Install New Power Wheels:** Align the new WOLF-Garten Power Wheel with the axle. Push it firmly onto the axle until it is fully seated. Secure the wheel using the original fastening mechanism (screw, clip, etc.). Ensure the wheel rotates freely without excessive wobble. Repeat for the second wheel.
5. **Final Check:** Once both wheels are installed, place the robotic lawnmower back on its wheels. Gently push it to ensure both wheels turn smoothly and are securely attached. Reconnect the power and turn on the lawnmower.

*Note: For detailed instructions specific to your Loopo M robotic lawnmower model, refer to its original user manual regarding wheel replacement procedures.*

## OPERATING CONSIDERATIONS

---

After installing the WOLF-Garten Power Wheels, your Loopo M robotic lawnmower should operate as before, potentially

with improved traction or durability due to the design of these power wheels. No specific operational changes are required for the robotic lawnmower itself.

- **Initial Test Run:** After installation, perform a short test run of your robotic lawnmower in a controlled area to ensure proper function and wheel rotation.
- **Observe Performance:** Monitor the lawnmower's movement and cutting performance. The new wheels should provide consistent traction.

## MAINTENANCE

---

Regular maintenance of your WOLF-Garten Power Wheels will ensure their longevity and optimal performance.

- **Cleaning:** Periodically clean the wheels to remove accumulated grass clippings, dirt, and debris. Use a brush or damp cloth. Avoid using high-pressure water jets directly on the wheel bearings.
- **Inspection:** Regularly inspect the wheels for signs of wear, cracks, or damage. Check that they are securely fastened to the axle.
- **Storage:** If the robotic lawnmower is stored for an extended period, ensure the wheels are clean and dry.

## TROUBLESHOOTING

---

If you encounter issues after installing the WOLF-Garten Power Wheels, consider the following:

Problem	Possible Cause	Solution
Wheel does not rotate freely.	Incorrect installation; debris caught in axle; wheel not fully seated.	Remove wheel, clean axle, re-install ensuring it is fully seated and secured.
Lawnmower moves unevenly or with difficulty.	One or both wheels not properly installed; damage to wheel or axle.	Check both wheels for secure attachment and free rotation. Inspect for damage.
Unusual noise from wheels.	Debris in wheel mechanism; worn bearing (unlikely for new wheels); loose fastening.	Clean wheels thoroughly. Ensure all fasteners are tight. If noise persists, contact WOLF-Garten support.

## SPECIFICATIONS

---

Feature	Detail
Model Number	122-116-650
Compatibility	WOLF-Garten Loopo M robotic lawnmowers (Model Year 2018 and earlier)
Product Dimensions	19.5 x 19.5 x 16 cm (per wheel, approximate)
Item Weight	1.14 kg (total for the set, approximate)
Manufacturer	WOLF-Garten

## WARRANTY AND SUPPORT

---

WOLF-Garten products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your original Loopo M robotic lawnmower or visit the official WOLF-Garten website.

For technical support, spare parts, or further assistance, please contact WOLF-Garten customer service. Contact details can typically be found on the official WOLF-Garten website or in your original product documentation.

*Please have your product model number (122-116-650) and the serial number of your Loopo M robotic lawnmower ready when contacting support.*

© 2023 WOLF-Garten. All rights reserved.  
This manual is subject to change without notice.