



Manuals.plus /

› NBSLA /

› NBSLA BZ059 Remnant Holder Instruction Manual for Bizerba Slicers (SE12, SE12D, GSP, GSPG, V12, VS12F)

NBSLA BZ059

NBSLA BZ059 Remnant Holder Instruction Manual

For Bizerba Slicers: SE12, SE12D, GSP, GSPG, V12, VS12F

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of the NBSLA BZ059 Remnant Holder. This product is designed as a direct replacement part for specific Bizerba meat slicer models, ensuring secure food placement during slicing operations.

The remnant holder is compatible with the following Bizerba slicer models:

- Bizerba SE12
- Bizerba SE12D
- Bizerba GSP
- Bizerba GSPG
- Bizerba V12
- Bizerba VS12F

It replaces Bizerba part number **60220401708**.

2. SAFETY INFORMATION

Always prioritize safety when operating meat slicers and handling their components. Failure to follow safety guidelines can result in serious injury.

- **Read Slicer Manual:** Always refer to your specific Bizerba meat slicer's instruction manual for comprehensive safety and operation procedures.
- **Power Off:** Ensure the meat slicer is turned off and unplugged from the power source before installing, removing, or cleaning the remnant holder.
- **Sharp Blades:** Exercise extreme caution around the slicer blade. Never touch the blade directly.
- **Secure Installation:** Ensure the remnant holder is correctly and securely installed before operating the slicer.
- **Proper Use:** Use the remnant holder only for its intended purpose: to secure food items for slicing.

- **Inspect for Damage:** Before each use, inspect the remnant holder for any signs of damage, cracks, or wear. Do not use a damaged holder.
- **Keep Hands Clear:** Always keep hands and fingers away from the slicer blade during operation. The remnant holder is designed to keep your hands safe.

3. PACKAGE CONTENTS

- 1 x NBSLA BZ059 Remnant Holder

4. SETUP AND INSTALLATION

The NBSLA BZ059 Remnant Holder is designed for easy installation on compatible Bizerba meat slicers.

1. **Power Off Slicer:** Ensure your Bizerba meat slicer is completely turned off and unplugged from the electrical outlet.
2. **Remove Old Holder (if applicable):** If replacing an existing remnant holder, carefully remove it according to your slicer's manual.
3. **Position New Holder:** Align the NBSLA BZ059 Remnant Holder with the designated attachment points on your Bizerba slicer's carriage. The holder typically slides onto a rail or clips into place.
4. **Secure Attachment:** Ensure the holder is firmly seated and locked into position. Some models may have a knob or lever to secure it. Verify there is no wobble or looseness.
5. **Visual Inspection:** Double-check that the remnant holder is correctly installed and does not obstruct any moving parts of the slicer.



Figure 1: Top-down view of the NBSLA BZ059 Remnant Holder, showing the handle and spiked plate.



Figure 2: Side view of the remnant holder, illustrating its profile and attachment mechanism.

5. OPERATING INSTRUCTIONS

Once the remnant holder is securely installed, you can proceed with slicing operations. Always refer to your Bizerba slicer's manual for detailed operating procedures.

1. **Prepare Food Item:** Place the food item (e.g., meat, cheese, vegetables) onto the slicer carriage.
2. **Engage Remnant Holder:** Press the remnant holder firmly against the food item. The spikes on the holder are designed to grip the food securely, preventing slippage during slicing.
3. **Adjust Slicing Thickness:** Set your slicer to the desired slicing thickness.
4. **Begin Slicing:** Turn on the slicer and carefully push the carriage, with the food item held by the remnant holder, towards the rotating blade. Maintain a firm and steady pressure.
5. **Maintain Grip:** Continue to use the remnant holder to push the food item until it is too small to safely slice further. This ensures maximum yield and user safety.
6. **Power Off:** After slicing, turn off the slicer and unplug it before removing any remaining food or cleaning.



Figure 3: Front view of the remnant holder, highlighting the food-gripping spikes.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your remnant holder and ensure hygienic operation.

1. **Disconnect Power:** Always ensure the slicer is unplugged before cleaning.
2. **Remove Holder:** Detach the remnant holder from the slicer carriage.
3. **Wash:** Wash the remnant holder with warm, soapy water. Use a brush to clean between the spikes thoroughly.
4. **Rinse:** Rinse thoroughly with clean water to remove all soap residue.
5. **Sanitize (Optional):** For commercial use, follow local health regulations for sanitizing food contact surfaces.
6. **Dry:** Allow the remnant holder to air dry completely or dry with a clean cloth before reattaching or storing.
7. **Inspect:** Periodically inspect the holder for any signs of wear, cracks, or damage. Replace if necessary.



Figure 4: Back view of the remnant holder, showing the attachment side.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remnant holder does not fit the slicer.	Incorrect slicer model or improper alignment.	Verify your Bizerba slicer model is listed as compatible (SE12, SE12D, GSP, GSPG, V12, VS12F). Ensure the holder is aligned correctly with the carriage attachment points.
Food item slips during slicing.	Insufficient pressure on the food, worn spikes, or food surface is too slick.	Apply firm, consistent pressure on the remnant holder. Inspect spikes for wear; replace holder if spikes are dull. Ensure food surface is not excessively wet or oily.
Remnant holder feels loose after installation.	Not fully engaged or secured.	Ensure the holder is pushed completely into its slot and any locking mechanisms (knobs, levers) are tightened. If it remains loose, the holder may be incompatible or damaged.

8. SPECIFICATIONS

Feature	Detail
Model Number	BZ059
Brand	NBSLA (Manufacturer: NATIONAL BAND SAW)
Compatibility	Bizerba Slicer Models: SE12, SE12D, GSP, GSPG, V12, VS12F
Replaces Part Number	60220401708
Product Dimensions	304.8 x 304.8 x 101.6 inches (approx. 12 x 12 x 4 inches)
Item Weight	11.61 ounces
Material	Durable material suitable for food contact (as per product description)

9. WARRANTY AND SUPPORT

Specific warranty information for the NBSLA BZ059 Remnant Holder is not provided in the product details. For warranty inquiries or technical support, please contact the manufacturer, NATIONAL BAND SAW, or your point of purchase.

For further assistance, please refer to the official NBSLA store or contact their customer service.