



Manuals.plus /

- › Akai Professional /
- › AKAI AQUA7003V/T Washing Machine User Manual

## Akai Professional AQUA7003V/T

# AKAI AQUA7003V/T Washing Machine User Manual

Model: AQUA7003V/T

## INTRODUCTION

Thank you for choosing the AKAI AQUA7003V/T Front-Load Washing Machine. This appliance is designed to provide efficient and reliable laundry care for your home. With a 7 kg load capacity and a maximum spin speed of 1000 RPM, it offers excellent performance for various fabric types.

Key features include:

- Energy Efficiency Class: **A++**
- Load Capacity: **7 kg**
- Maximum Spin Speed: **1000 RPM**
- Number of Programs: **15**
- Noise Level: **58 dB**
- Special Functions: Delay Timer, Temperature Adjustment, Spin Exclusion, Pre-wash

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Do not wash items that are soiled with flammable liquids.
- Always unplug the appliance before cleaning or maintenance.
- Do not open the detergent dispenser or door during operation.

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your AKAI washing machine.



Figure 1: Front view of the AKAI AQUA7003V/T Washing Machine. Shows the main body, front-loading door, control panel with program selector knob, and digital display.

## Control Panel



Figure 2: Close-up of the control panel. Features a central program selection knob, a digital display, and several push buttons for

*functions like start/pause, temperature, spin speed, delay timer, and pre-wash.*

- **Detergent Dispenser:** Located on the top left, for adding detergent and fabric softener.
- **Program Selector Knob:** Central knob to choose from 15 washing programs.
- **Display Panel:** Shows program status, time remaining, and selected options.
- **Function Buttons:** For adjusting temperature, spin speed, delay start, pre-wash, and start/pause.
- **Door:** Front-loading door for loading and unloading laundry.
- **Filter Cover:** Located at the bottom right, for accessing the drain pump filter.

## SETUP AND INSTALLATION

### Unpacking

1. Remove all packaging materials, including the polystyrene base and any protective film.
2. Remove the transport bolts from the rear of the machine. Keep them for future transport.

### Positioning and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet to ensure the machine is stable and balanced. The dimensions of the product are approximately 84.5 cm (Height) x 59.7 cm (Width) x 52.7 cm (Depth).

### Water Connection

- Connect the inlet hose to a cold water tap with a 3/4" thread.
- Ensure all connections are tight to prevent leaks.

### Drain Connection

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.

### Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

## OPERATING INSTRUCTIONS

### Before Each Wash

1. Sort laundry by fabric type, color, and degree of soiling.
2. Check pockets for small items.
3. Load laundry into the drum, ensuring not to overload (max 7 kg).
4. Add appropriate detergent and fabric softener to the dispenser compartments.

### Starting a Wash Cycle

1. Close the washing machine door firmly.
2. Turn the **Program Selector Knob** to choose the desired washing program (e.g., Cotton, Synthetics,

Delicates).

3. Adjust additional options using the function buttons:
  - **Temperature:** Select the desired wash temperature.
  - **Spin Speed:** Adjust the spin speed (up to 1000 RPM).
  - **Delay Timer:** Set a delayed start time for the wash cycle.
  - **Pre-wash:** Activate the pre-wash function for heavily soiled items.
  - **Spin Exclusion:** Disable the final spin cycle if desired.
4. Press the **Start/Pause** button to begin the wash cycle.

## Ending a Wash Cycle

The machine will signal the end of the cycle. Open the door and remove your laundry promptly to prevent wrinkles and odors.

## WASHING PROGRAMS

The AKAI AQUA7003V/T offers 15 washing programs to suit various fabric types and soiling levels. Refer to the control panel for specific program names and their corresponding symbols.

Program	Description	Typical Use
<b>Cotton</b>	For durable cotton items, white and colored.	Towels, bed linen, t-shirts, underwear.
<b>Synthetics</b>	For synthetic or mixed fabrics.	Blouses, shirts, mixed fabric garments.
<b>Delicates</b>	For delicate items that require gentle washing.	Lingerie, silk, lace.
<b>Wool</b>	For machine-washable wool items.	Wool sweaters, cardigans.
<b>Quick Wash</b>	For lightly soiled items that need a quick refresh.	Lightly worn clothes.
<b>Rinse &amp; Spin</b>	For rinsing and spinning hand-washed items.	Hand-washed garments.
<b>Spin</b>	For draining water and spinning laundry.	Removing excess water from laundry.

## MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Rinse it under running water to remove any detergent residue.
- Clean the dispenser housing with a brush.
- Reinsert the drawer.

### Cleaning the Drain Pump Filter

The drain pump filter should be cleaned periodically to prevent blockages.

1. Place a shallow container under the filter cover (bottom right of the machine) to catch any water.
2. Open the filter cover.
3. Slowly unscrew the filter counter-clockwise and allow water to drain.
4. Remove any lint, coins, or foreign objects from the filter.
5. Clean the filter under running water.
6. Screw the filter back in clockwise and close the cover securely.

## Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a descaling agent) every few months to clean the drum and remove detergent residue.

## Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
<b>Machine does not start</b>	Power cord not plugged in; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is latched; Select a program; Press Start/Pause.
<b>No water intake</b>	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten hose; Clean filter in hose connection.
<b>Water not draining</b>	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten hose; Clean drain pump filter (see Maintenance section).
<b>Excessive vibration/noise</b>	Machine not level; Transport bolts not removed; Overloaded or unbalanced load.	Adjust leveling feet; Remove transport bolts; Redistribute laundry; Reduce load size.
<b>Detergent residue in dispenser</b>	Insufficient water pressure; Detergent clumping.	Check water supply; Use less detergent or dissolve it before adding.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Akai Professional
Model Number	AQUA7003V/T
Type	Front-Load, Free-Standing Washing Machine
Load Capacity	7 kg
Max Spin Speed	1000 RPM
Energy Efficiency Class	A++
Noise Level (Washing)	58 dB
Number of Programs	15
Dimensions (H x W x D)	84.5 x 59.7 x 52.7 cm
Weight	40 kg
Color	White
Special Features	Delay Timer, Temperature Adjustment, Spin Exclusion, Pre-wash

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Akai Professional website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Akai Professional customer service.

*Note: Information regarding returns and refunds can be found on the retailer's website where the product was purchased.*