

Maxwest Vice 3G Flip

Maxwest Vice 3G Flip Phone User Manual

Model: Vice 3G Flip

INTRODUCTION

The Maxwest Vice 3G Flip Phone is designed for ease of use, featuring large buttons and a dual SIM card slot for managing two different numbers. It supports 3G connectivity and includes essential features like Bluetooth, MP3 player, camera, and an SOS function for emergencies. This manual provides comprehensive instructions for setting up, operating, and maintaining your device.

SAFETY INFORMATION

Please read this section carefully before using your phone to ensure safe and proper operation.

- Do not use the phone while driving.
- Keep the phone away from water and moisture.
- Use only manufacturer-approved batteries and chargers.
- Avoid exposing the phone to extreme temperatures.
- Do not attempt to disassemble or modify the phone.
- Dispose of batteries and the device responsibly according to local regulations.

PACKAGE CONTENTS

Ensure all items are present in your package:

- Maxwest Vice 3G Flip Phone
- Battery
- Charger
- User Manual (this document)

PRODUCT OVERVIEW



Image: The Maxwest Vice 3G Flip Phone shown in both its open and closed configurations, highlighting its compact design when folded and the full keypad and screen when open.



Image: The Maxwest Vice 3G Flip Phone in its open state, displaying the main 2.4-inch LCD screen and the large, easy-to-use physical keypad with navigation buttons.



Image: The Maxwest Vice 3G Flip Phone in its closed state, showing the external 1.8-inch LCD screen which displays essential information like time and notifications without opening the phone.

Key Components:

- **Main Display:** 2.4-inch LCD screen (internal).
- **External Display:** 1.8-inch LCD screen (external).
- **Keypad:** Large, tactile buttons for easy dialing and navigation.
- **Camera:** Rear camera for photos.
- **SOS Button:** Dedicated button for emergency calls/messages.
- **Micro USB Port:** For charging and data transfer.
- **Speaker/Microphone:** For calls and audio playback.

SETUP

1. Installing SIM Cards and MicroSD Card:

The Maxwest Vice 3G Flip Phone supports Dual SIM (standard SIM size) and a MicroSD card up to 8GB (not included).

1. Remove the back cover of the phone.
2. If the battery is installed, remove it.
3. Carefully insert your standard SIM cards into the designated SIM1 (3G) and SIM2 (2G) slots. Ensure the gold contacts face down.
4. Insert the MicroSD card into its slot, if desired.
5. Reinsert the battery and replace the back cover.

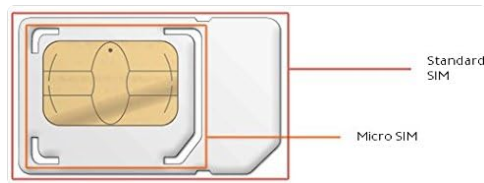


Image: A diagram illustrating the placement of a standard SIM card and a Micro SIM card, indicating the correct orientation for insertion into the phone's slots.

2. Battery Installation and Charging:

1. After installing SIM/MicroSD cards, insert the battery into its compartment, aligning the gold contacts.
2. Connect the charger cable to the phone's Micro USB port and plug the charger into a power outlet.
3. Allow the phone to charge fully before first use. The battery indicator will show charging status.

OPERATING INSTRUCTIONS

Powering On/Off:

- To power on, press and hold the Power/End Call button until the screen lights up.
- To power off, press and hold the Power/End Call button, then confirm "Power off" on the screen.

Making/Receiving Calls:

- **To make a call:** Enter the phone number using the keypad and press the Call button (green icon).
- **To receive a call:** Press the Call button (green icon) when the phone rings.
- **To end a call:** Press the End Call button (red icon).

Messaging:

Navigate to the "Messages" menu to compose and read SMS messages.

Using the Camera:

Access the "Camera" application from the main menu to take photos. The phone features a single rear camera.

Bluetooth Connectivity:

Enable Bluetooth in the settings menu to connect to compatible devices like headsets or other phones for file transfer.

FM Radio:

Plug in headphones (not included) to use as an antenna, then access the FM Radio application to listen to local stations.

SOS Function:

The dedicated SOS button can be configured to dial pre-set emergency contacts. Refer to the phone's internal settings for SOS setup.

Pre-installed Applications:

The phone comes with pre-installed applications such as Facebook, Twitter, and YouTube. Access these through the main menu. Note that data charges may apply for internet usage.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Do not use liquid cleaners or aerosols.

- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid overcharging and allow the battery to discharge periodically before recharging.

TROUBLESHOOTING

Problem	Possible Solution
Phone does not power on.	Ensure the battery is correctly installed and charged. Connect the charger and try again.
Cannot make or receive calls.	Check if SIM cards are properly inserted. Verify network signal strength. Ensure your account is active with your service provider.
Poor call quality.	Move to an area with better network coverage. Check for obstructions around the microphone or speaker.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit background data usage.
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both devices. Make sure the other device is in pairing mode and within range.

SPECIFICATIONS

Feature	Detail
Brand	Maxwest
Model Name	Vice
Part Number	Flip
Network Technology	3G (WCDMA 850/1900), 2G (GSM 850/900/1800/1900)
SIM Type	Dual SIM (Standard SIM)
Main Display	2.4-inch LCD
External Display	1.8-inch LCD
Internal Memory	64 MB RAM / 64 MB ROM
Expandable Storage	MicroSD up to 8 GB
Camera	Rear Camera
Connectivity	Bluetooth v2.0, Micro USB v2.0
Battery Composition	Lithium Ion
Dimensions	9.65 x 5.33 x 1.52 cm; 18.14 g (folded)

Feature	Detail
Special Features	Dual SIM, Large Buttons, SOS Function, FM Radio, MP3 Player, Email, Facebook, Twitter, YouTube

WARRANTY AND SUPPORT







For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official Maxwest website. Keep your proof of purchase for warranty claims.

Contact Information: Please refer to the manufacturer's official website or the contact details provided in your product packaging for the most up-to-date support information.



© 2024 Maxwest. All rights reserved.

Related Documents - Vice 3G Flip

	<p>Maxwest Uno Flip 4G User Manual</p> <p>Comprehensive user manual for the Maxwest Uno Flip 4G mobile phone, detailing device layout, features, settings, calling, messaging, SOS functions, and safety information.</p>
	<p>Maxwest Neo Flip LTE User Manual - Device Features and Compliance</p> <p>Comprehensive user guide for the Maxwest Neo Flip LTE, covering device layout, call functions, messaging, settings, browser usage, and important FCC/IC compliance and SAR information.</p>
	<p>Maxwest NEO 4G User Manual: Features and Operation</p> <p>Comprehensive user manual for the Maxwest NEO 4G phone, detailing device layout, calling, messaging, browser usage, settings, and SOS functionality. Includes FCC compliance information.</p>
	<p>Maxwest NEO FLIP LTE User Manual</p> <p>User manual for the Maxwest NEO FLIP LTE mobile phone, covering device layout, basic operations, calling, messaging, contacts, and settings.</p>
	<p>Maxwest Nitro N62 User Manual - Guide to Features and Operation</p> <p>Explore the Maxwest Nitro N62 user manual for detailed information on its features, including SIM card installation, battery charging, camera usage, email setup, and file transfer. Learn how to maximize your device's capabilities.</p>
	<p>Maxwest Astro 4 PRO User Manual - Setup and Features Guide</p> <p>Comprehensive user manual for the Maxwest Astro 4 PRO smartphone, covering setup, SIM card installation, battery charging, sound profiles, phone features, camera, email, file transfer, and FCC compliance information.</p>