

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Denon](#) /

› Denon DCD-1600NE Super Audio CD Player Instruction Manual

Denon DCD-1600NE

Denon DCD-1600NE Super Audio CD Player Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Denon DCD-1600NE Single Disc Super Audio CD Player. Please read these instructions thoroughly before using the unit and retain them for future reference.

KEY FEATURES

- **Versatile Disc Playback:** Supports Super Audio CDs, standard CDs, and DVDs, along with high-resolution audio files including DSD (2.8 MHz / 5.6 MHz), MP3, WAV/FLAC, and WMA.
- **Vibration-Resistant Design:** Features Denon's original S.V.H. (Suppress Vibration Hybrid) loader to minimize noise and vibrations, ensuring pristine sound reproduction.
- **Advanced Audio Processing:** Incorporates Denon's Advanced AL32 Processing Plus, DAC Master Clock circuit design, and Direct Mechanical Ground Construction for accurate and detailed sound.
- **Pure Direct Mode:** Offers a direct signal path by disabling digital outputs and the display, providing high-fidelity audio playback without digital correction.
- **System Compatibility:** Designed to complement Denon PMA-1600NE integrated amplifiers for a cohesive audio system.

WHAT'S IN THE BOX

Upon unpacking, please ensure all the following items are present:

- Denon DCD-1600NE CD Player
- Remote control (RC-1223)
- Two "AAA" batteries for the remote control
- 47" Stereo RCA cable
- Owner's Manual on CD-ROM
- Quick Start Guide

- Warranty Information
- Safety Instructions

SETUP

1. Placement

Place the DCD-1600NE on a stable, level surface away from direct sunlight, heat sources, and excessive moisture. Ensure adequate ventilation around the unit.

2. Connecting Audio Cables

Connect the DCD-1600NE to your amplifier or receiver using the appropriate audio cables. You can use the included stereo RCA cable for analog connection, or optical/digital coaxial cables for digital connection.



Figure 1: Rear panel connections of the Denon DCD-1600NE. This image illustrates the optical, digital coaxial, and analog RCA output ports for connecting to an amplifier or receiver.

- **Analog Connection (RCA):** Connect the RCA output jacks (L/R) on the DCD-1600NE to the corresponding analog input jacks on your amplifier/receiver using the supplied RCA cable.
- **Digital Connection (Optical/Coaxial):** For digital audio, connect either the OPTICAL OUT or COAXIAL OUT jack on the DCD-1600NE to a digital input on your amplifier/receiver. Use only one digital connection type.

3. Power Connection

After all audio connections are made, connect the power cord to the AC inlet on the rear of the unit, then plug it into a wall outlet.

4. Remote Control Batteries

Insert the two supplied "AAA" batteries into the remote control, ensuring correct polarity.

OPERATING THE PLAYER

1. Power On/Off

Press the power button on the front panel or the remote control to turn the unit on or off.



Figure 2: Front panel of the Denon DCD-1600NE, showing the power button, disc tray, display, and playback controls.

2. Loading a Disc

1. Press the OPEN/CLOSE button to open the disc tray.
2. Place a disc (CD, Super Audio CD, or DVD with audio files) onto the disc tray with the label side facing up.
3. Press the OPEN/CLOSE button again to close the disc tray. The unit will begin reading the disc.

3. Playback Controls

- **PLAY (▶):** Starts playback.
- **PAUSE (⏸):** Pauses playback. Press again to resume.
- **STOP (⏹):** Stops playback.
- **SKIP (◀ / ▶):** Skips to the previous or next track.
- **FAST FORWARD/REWIND:** Hold down the SKIP buttons during playback to fast forward or rewind.

4. Pure Direct Mode

Press the PURE DIRECT button on the front panel or remote control to activate this mode. In Pure Direct mode, the digital audio outputs and the display are turned off to minimize interference and achieve the purest possible analog sound quality.

5. Playing USB Audio Files

The DCD-1600NE supports playback of audio files from a USB storage device. Insert the USB device into the USB port on the front panel. Use the unit's controls or remote to navigate and select files for playback.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

- **Disc Handling:** Always handle discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use.
- **Ventilation:** Ensure that the ventilation openings on the unit are not blocked to prevent overheating.

TROUBLESHOOTING

If you experience issues with your DCD-1600NE, please refer to the following common troubleshooting steps:

- **No Power:** Check if the power cord is securely connected to both the unit and the wall outlet. Ensure the power outlet is functional.
- **No Sound:** Verify that the audio cables are correctly connected between the DCD-1600NE and your amplifier/receiver. Check the input selection on your amplifier/receiver to ensure it matches the connected input. Confirm that the volume on your amplifier/receiver is not set to minimum or muted.
- **Disc Not Playing/Reading:** Ensure the disc is clean and free of scratches or smudges. Try a different disc to rule out a disc-specific issue. Make sure the disc is inserted correctly with the label side up.
- **Remote Control Not Working:** Check if the batteries are inserted correctly and are not depleted. Ensure there are no obstructions between the remote control and the unit's remote sensor.

For more detailed troubleshooting, please consult the Owner's Manual on CD-ROM.

SPECIFICATIONS

Specification	Value
Product Dimensions	10.5 x 17.12 x 4.5 inches
Item Weight	22.1 pounds
Item Model Number	DCD-1600NE
Color	Black
Connectivity Technology	Auxiliary
Batteries Required	2 AA batteries (for remote)
Date First Available	April 4, 2018

WARRANTY AND SUPPORT

Your Denon DCD-1600NE comes with a manufacturer's warranty. Please refer to the included Warranty Information document for details regarding coverage, terms, and conditions. For technical support, service, or further inquiries, please visit the official Denon website or contact their customer service department.

For additional resources, you may visit the [Denon Store on Amazon](#).