

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Kikkerland](#) /

> [Beethoven Kitchen Timer Instruction Manual](#)

Kikkerland KIK-KT52-EU

Beethoven Kitchen Timer Instruction Manual

Model: KIK-KT52-EU | Brand: Kikkerland

PRODUCT OVERVIEW

The Kikkerland Beethoven Kitchen Timer is an original kitchen accessory designed to help you manage your cooking times effectively. Shaped as a bust of Ludwig van Beethoven, this unique timer plays a melody from Für Elise when the set time expires, ensuring you never miss a dish.



This image displays the Beethoven Kitchen Timer, featuring a white bust of Ludwig van Beethoven atop a circular base marked with time increments from 0 to 60 minutes. An arrow indicates the current setting.

SETUP AND FIRST USE

Before first use, ensure the timer is placed on a stable, flat surface. The timer requires batteries for the musical chime feature. Locate the battery compartment on the underside of the base. Insert the required batteries (type and quantity as indicated in the battery compartment). Ensure correct polarity.



The timer is shown here on a kitchen counter, demonstrating its compact size and how it fits into a typical kitchen environment. A whisk and bowl are visible in the background.

OPERATING YOUR TIMER

To set the timer, rotate the top part (Beethoven bust) clockwise all the way to the 60-minute mark. This action winds the internal mechanism. Then, rotate the top part counter-clockwise to your desired time setting. Align the arrow on the base with the desired minute mark. When the time elapses, the timer will ring and play a melody from Beethoven's Für Elise.

For accurate timing, always wind the timer fully to 60 minutes before setting it to your desired time. Do not force the timer past the 60-minute mark or below the 0-minute mark.



This image illustrates the timer in a kitchen setting, positioned on a wooden cutting board, suggesting its practical use during food preparation.

CARE AND MAINTENANCE

To clean the timer, wipe it with a soft, damp cloth. Do not immerse the timer in water or use abrasive cleaners, as this may damage the internal mechanism and the musical component. Keep the timer away from extreme temperatures and direct sunlight.



The timer is shown here in a clean kitchen setting, emphasizing its decorative and functional presence alongside other kitchen tools.

TROUBLESHOOTING

- **Timer does not ring or play music:** Ensure the timer was fully wound to 60 minutes before setting the desired time. Check if batteries are correctly inserted and not depleted if the music feature is not working.
- **Timer is inaccurate:** Always wind the timer fully to 60 minutes before setting. Avoid dropping the timer, as internal mechanisms can be sensitive to impact.
- **Timer is stuck:** Do not force the mechanism. If the timer is stuck, gently try to rotate it back and forth within its normal range. If the issue persists, contact customer support.

PRODUCT SPECIFICATIONS

Brand	Kikkerland
Model Number	KIK-KT52-EU

Dimensions (L x W x H)	6.5 x 6.5 x 13.5 cm (2.56 x 2.56 x 5.31 inches)
Weight	100 grams (3.53 ounces)
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Batteries required (for music chime)
Country of Origin	China
UPC	612615091290

WARRANTY AND CUSTOMER SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact Kikkerland customer support. For technical assistance or inquiries, please contact Kikkerland Europe BV at europa@kikkerland.com.