

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LeapFrog](#) /

› [LeapFrog Learning Friends 100 Words Book Instruction Manual](#)

LeapFrog 80-601541

LeapFrog Learning Friends 100 Words Book Instruction Manual

Brand: LeapFrog | **Model:** 80-601541

1. INTRODUCTION AND OVERVIEW

The LeapFrog Learning Friends 100 Words Book is an interactive educational toy designed to introduce new vocabulary to young children. Featuring animal friends Turtle, Tiger, and Monkey, this book helps children explore over 100 age-appropriate words across various categories. It supports bilingual learning in both English and Spanish, offers fun facts, sound effects, and engaging learning songs.



Image: Front view of the LeapFrog Learning Friends 100 Words Book.

2. SETUP

2.1 Battery Installation

The Learning Friends 100 Words Book requires 2 AA batteries for operation. Batteries included are for demo purposes only; new batteries are recommended for regular use. To install or replace batteries:

1. Locate the battery compartment on the back of the book.
2. Use a Phillips head screwdriver to open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.



Image: Rear view of the book, highlighting the battery compartment.

2.2 Power On/Off

To power on the device, slide the power switch located on the side of the book. To power off, slide the switch to the 'Off' position.

3. OPERATING INSTRUCTIONS

3.1 Language Selection

The book supports both English and Spanish. Use the language switch on the side panel to select your preferred language for words, songs, and instructions.

3.2 Volume Control

Adjust the volume using the volume control switch located next to the language switch on the side panel.

3.3 Mode Selection

Three interactive modes are available, selected via buttons on the right-hand side of the book:

- **Words Mode:** Touch any picture on the page to hear the word and its pronunciation.
- **Fun Facts Mode:** Touch pictures to hear interesting facts related to the image.

- **Fun Sounds Mode:** Touch pictures to hear silly sound effects.

3.4 Interacting with Pages

Open the book to any of the colorful pages. Each page features various categories such as pets, animals, food, mealtime, colors, activities, opposites, and outdoor scenes. Simply touch the pictures on the pages to activate the selected mode's audio responses.



Image: The book open to pages displaying various pets and animals.



Image: The book open to pages displaying various fruits and food items.

3.5 Learning Songs

Press the light-up star button on the right side of the book to hear two engaging learning songs.

Your browser does not support the video tag.

Video: A seller's review demonstrating the features and sounds of the LeapFrog Learning Friends 100 Words Book.

4. FEATURES

- Interactive Learning:** Meet learning friends Turtle, Tiger and Monkey who introduce over 100 age-appropriate words chosen by learning experts.
- Category Exploration:** Includes word categories such as pets, animals, food, mealtime, colors, activities, opposites, and outdoor themes.
- Sound Engagement:** Touch words to hear new vocabulary, sound effects, and fun facts.
- Bilingual Support:** Words, songs, and instructions are available in both English and Spanish to promote language skills.
- Musical Fun:** Press the light-up star button to hear two learning songs.

5. MAINTENANCE

5.1 Cleaning

To clean the book, wipe the surfaces with a soft, damp cloth. Do not immerse the book in water or use harsh cleaning agents.

5.2 Battery Care

Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.

6. TROUBLESHOOTING

- **No Sound/Intermittent Sound:** Check if the power switch is in the 'On' position and if the volume is turned up. Replace batteries if necessary.
- **Incorrect Responses:** Ensure the mode selector is set to the desired learning mode (Words, Fun Facts, or Fun Sounds).
- **Device Not Responding:** Turn the unit off and then on again. If the issue persists, replace the batteries.

7. SPECIFICATIONS

- **Product Dimensions:** 9.17 x 9.37 x 1.89 inches
- **Item Weight:** 1.51 pounds
- **Item Model Number:** 80-601541
- **Manufacturer Recommended Age:** 18 months - 4 years
- **Batteries:** 2 AA batteries required (included for demo purposes)
- **Release Date:** January 11, 2018
- **Manufacturer:** VTech

8. WHAT'S IN THE BOX

- LeapFrog Learning Friends 100 Words Book (Frustration Free Packaging), Green

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt for any warranty claims.