

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fingerlings](#) /
- › [Fingerlings HUGS Kiki Interactive Plush Monkey User Manual](#)

Fingerlings 771171135357

Fingerlings HUGS Kiki Interactive Plush Monkey User Manual

Model: 771171135357

INTRODUCTION

Welcome to the world of Fingerlings HUGS Kiki! This interactive plush monkey is designed to provide engaging play through various actions and sounds. Kiki features long arms for hugging, responds to touch and movement, and can even record and repeat your voice in funny ways. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure a delightful experience with your new companion.



Image: Fingerlings HUGS Kiki plush monkey displayed in its retail packaging, highlighting its interactive features.

WHAT'S IN THE BOX

Your Fingerlings HUGS Kiki package includes:

- 1 Fingerlings HUGS Kiki interactive plush monkey
- 2 AAA batteries (pre-installed)

SETUP

Battery Installation

Fingerlings HUGS Kiki comes with 2 AAA batteries pre-installed. If the toy's performance diminishes or it stops responding, new batteries may be required.

1. Locate the battery compartment, typically on the back or underside of the plush toy.
2. Using a small Phillips head screwdriver, open the battery compartment cover.
3. Remove the old batteries and insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Initial Activation

Your Fingerlings HUGS Kiki may be in "Try Me" mode when first unboxed. To switch to full play mode, locate the power switch (often near the battery compartment) and move it from "Try Me" to "On" or "Play" position. If there is an "Off" mode, ensure it is not selected for play.

OPERATING INSTRUCTIONS

Fingerlings HUGS Kiki offers various interactive responses. Experiment with different actions to discover all its reactions.

Giving Hugs

Kiki's long arms are designed for big hugs. Wrap them around your neck or arm, and Kiki will react with sounds and movements, showing affection.

HUG IT OUT



Image: A girl and a boy smiling while hugging the Fingerlings HUGS Kiki plush monkey, demonstrating its huggable design.

Receiving Kisses

To receive a kiss from Kiki, gently press its mouth against your skin. The longer you maintain contact, the longer Kiki's kiss will last.



Image: A girl holding the Fingerlings HUGS Kiki plush monkey, with the toy's mouth pressed against her cheek, illustrating the kissing feature.

Voice Recording and Playback

Kiki can record and repeat your voice in a humorous way:

1. Press and hold Kiki's left ear.
2. Speak clearly into Kiki's microphone (usually located near the mouth).
3. Release Kiki's left ear, and it will repeat what you said with a funny voice effect.

Interactive Play and Reactions

Kiki responds to various movements and interactions with supersized reactions, including burps, toots, and laughs:

- **Swinging:** Gently swing Kiki in the air.
- **Throwing:** Lightly toss Kiki into the air (ensure a soft landing).
- **Tickling:** Tickle Kiki's body.
- **Turning Upside Down:** Invert Kiki to trigger different responses.



Image: A young boy joyfully tossing the Fingerlings HUGS Kiki plush monkey into the air, illustrating its interactive play feature.

MAINTENANCE

Cleaning Instructions

To maintain the condition of your Fingerlings HUGS Kiki:

- Surface clean only. Do not immerse the toy in water, as this can damage the electronic components.
- Use a soft, damp cloth to gently wipe away dirt or stains.
- Avoid using harsh chemicals or abrasive cleaners.
- Allow the toy to air dry completely before further use.

Storage

When not in use, store Kiki in a clean, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

TROUBLESHOOTING

If your Fingerlings HUGS Kiki is not functioning as expected, please refer to the following common solutions:

- **No Response or Weak Reactions:**
 - Check the power switch to ensure it is in the "On" or "Play" position, not "Off" or "Try Me" (unless testing).
 - Replace the batteries with new AAA batteries. Low battery power is a common cause for reduced functionality.
 - Ensure the battery compartment is securely closed.
- **Voice Recording Issues:**
 - Ensure you are pressing and holding the left ear throughout the recording process.
 - Speak clearly and close enough to the toy's mouth/microphone.
 - Check battery levels, as low power can affect advanced functions.
- **Unexpected Sounds or Behavior:**
 - Turn the toy off and then on again to reset its internal system.
 - Ensure the toy is not exposed to extreme temperatures or moisture.

If problems persist after attempting these steps, please contact the manufacturer's customer support.

SPECIFICATIONS

Product Name	Fingerlings HUGS Kiki
Model Number	771171135357
Brand	Fingerlings (by WowWee)
Product Dimensions	18.25 x 5.3 x 29.5 inches
Item Weight	1.06 ounces
Batteries Required	2 x AAA batteries (included)
Recommended Age	24 months - 15 years
Release Date	October 26, 2018

SAFETY INFORMATION

- Adult supervision is recommended for young children.
- Do not throw the toy with excessive force or at other people/objects.
- Keep away from water and moisture to prevent damage to electronic components.
- Do not attempt to disassemble the toy.

- Dispose of batteries responsibly according to local regulations.

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your Fingerlings HUGS Kiki, please visit the official WowWee website or contact their customer service department. Details can typically be found on the product packaging or the manufacturer's official online resources.

Manufacturer: WowWee

© 2025 Fingerlings / WowWee. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.