

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image® LED Light-Up Word Clock User Manual

Sharper Image 1011954

Sharper Image® LED Light-Up Word Clock User Manual

Model: 1011954 | Brand: Sharper Image

INTRODUCTION

Welcome to the world of innovative timekeeping with your new Sharper Image® LED Light-Up Word Clock. This modern and elegant clock displays time using illuminated words, offering a unique and contemporary accent for any home or office. Its intuitive design makes it easy to set up and operate, providing both functionality and a captivating conversation piece.

SHARPER IMAGE®

WORD CLOCK



The Sharper Image LED Light-Up Word Clock in a modern setting.

WHAT'S INCLUDED

Please ensure all items are present in your package:


- 1x Sharper Image® LED Light-Up Word Clock
- 1x USB Power Cord
- 1x USB Adapter



WHAT YOU GET



Word Clock

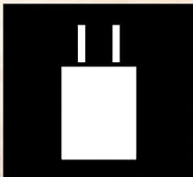

Power Adapter

Included components: Word Clock, USB Power Cord, and USB Adapter.

SETUP

Follow these simple steps to set up your Word Clock:

1. **Connect to Power:** Connect the included USB cable to the clock and then to the USB adapter. Plug the adapter into a standard wall outlet. The word display will flash twice upon successful connection.

SHARPER IMAGE LED LIGHT-UP WORD CLOCK

I	T	L	I	S	A	S	T	H	P	M	A	
A	C	F	I	F	T	E	E	N	D	C	O	
T	W	E	N	T	Y	F	I	V	E	X	W	
T	H	I	R	T	Y	F	T	E	N	O	S	
M	I	N	U	T	E	S	E	T	O	U	R	
P	A	S	T	O	R	U	F	O	U	R	T	
S	E	V	E	N	X	T	W	E	L	V	E	
N	I	N	E	F	I	V	E	C	T	W	O	
E	I	G	H	T	F	E	L	E	V	E	N	
S	I	X	T	H	R	E	E	O	N	E	G	
T	E	N	S	E	Z	O	'	C	L	O	C	K

Step 1: Connect the clock to a power source.

2. **Initial Display:** The clock will initially display "IT IS TWELVE O'CLOCK".

UNIQUE +
WORD DESIGN

FIVE-MINUTE +
INTERVALS

I	T	L	I	S	A	S	T	H	P	M	A	
A	C	F	I	F	T	E	E	N	D	C	O	
T	W	E	N	T	Y	F	I	V	E	X	W	
T	H	I	R	T	Y	F	T	E	N	O	S	
M	I	N	U	T	E	S	E	T	O	U	R	
P	A	S	T	O	R	U	F	O	U	R	T	
S	E	V	E	N	X	T	W	E	L	V	E	
N	I	N	E	F	I	V	E	C	T	W	O	
E	I	G	H	T	F	E	L	E	V	E	N	
S	I	X	T	H	R	E	E	O	N	E	G	
T	E	N	S	E	Z	O	'	C	L	O	C	K

+ LED GLOW

+ SOPHISTICATED
COPPER FINISH

Step 2: The clock will display "IT IS TWELVE O'CLOCK".

3. **Set Time:** Use the "+" (advance) and "-" (reverse) buttons located on the side of the clock to adjust the time. Press and hold the desired button to move the time forward or backward.



+ CONNECT TO A
POWER SOURCE.
THE WORD WILL
FLASH TWICE.

Step 3: Use the '+' and '-' buttons to adjust the time.

4. **Confirm Time:** Release the button once you have reached the desired time. The clock displays time in five-minute segments.



**+ CLOCK WILL
DISPLAY “IT IS
TWELVE O’CLOCK.”**

Step 4: The clock displays time in 5-minute segments.

Watch a setup and operation video:

Official video demonstrating the setup and operation of the Sharper Image Light Up Electronic Word Clock.

OPERATION

The Sharper Image® LED Light-Up Word Clock is designed for simple and intuitive operation:

- **Reading the Time:** The clock displays the time by illuminating specific words in a grid. The time is read from top to bottom.
- **Five-Minute Increments:** The clock changes its display every five minutes.
- **Time Display Format:** The clock displays the time in terms of minutes past the hour (up to 30 minutes) and then minutes until the next hour.
 - Example: "IT IS FIVE MINUTES PAST ONE"
 - Example: "IT IS TEN MINUTES TO TWO"

INCLUDES

1x word clock 1x USB POWER CORD 1x USB adapter

POWER

The word clock is powered by connecting the included usb cable and adapter to a power outlet or by connecting the cable to a 5v usb power. Use UL certified adapter only (5v dc, a1).

SETTING THE CLOCK

1. Connect the clock to a power source. The word will flash 2 times.
2. The clock will display "it is twelve o'clock (right).
3. Move the time forward by pushing and holding the time advance button, or backwards by pushing and holding the time reverse button.
4. When you have reached the desired time, release the button and the clock will display the time in the five minute segments.

READING THE CLOCK

- Every five minutes, the clock will change its display.
- The clock is read from top to bottom.
- The clock displays the time in terms of minutes until the hour

Up to 30 minutes and then minutes until the hour.

0 it is: Five minutes past, ten minutes past, fifteen minutes past, twenty minutes past, twenty five past, minutes past (hour).


0 it is: Twenty five minutes to, twenty minutes to, fifteen minutes to, ten minutes, to five minutes to (hour).



READS: IT IS TWELVE O'CLOCK



READS: IT IS FIFTEEN MINUTES TO THREE

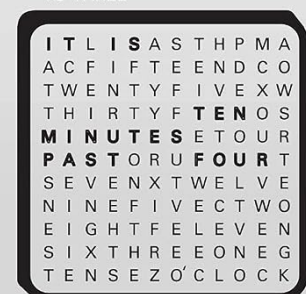

READS: IT IS TEN MINUTES PAST FOUR

Visual guide for setting and reading the time on your Word Clock.

MAINTENANCE

To ensure the longevity and optimal performance of your Word Clock, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the surface of the clock with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or spray cleaners, as they may damage the finish or the LED display.
- **Placement:** Place the clock on a stable, flat surface or mount it securely on a wall. Avoid placing it in direct sunlight or in areas with extreme temperatures or high humidity.
- **Power:** Always use the provided USB power cord and adapter. Disconnect from power before cleaning or if the clock will not be used for an extended period.

TROUBLESHOOTING

If you encounter any issues with your Sharper Image® LED Light-Up Word Clock, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clock is not lighting up.	No power connection or faulty adapter/cable.	Ensure the USB cable is securely plugged into the clock and the adapter. Verify the adapter is firmly plugged into a working wall outlet. Try a different USB port or outlet if available.
Time is incorrect or not changing.	Time not set correctly or power interruption.	Re-set the time using the '+' and '-' buttons on the side of the clock. If power was interrupted, the clock may reset to default and need to be re-set.
Clock appears to be flickering (on camera).	Camera refresh rate interference.	This is a common effect when recording LED displays with certain cameras and is not indicative of a fault with the clock. The clock does not flicker in real life.

If the issue persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Sharper Image
Model Number	1011954
Color	Copper
Display Type	Digital (Word Display)
Product Dimensions	7.75"W x 7.75"H
Power Source	Corded Electric (USB)
Material	Plastic, Metal
Mounting Type	Wall Mount / Desk
Item Weight	1 Pounds
UPC	843479141573

WARRANTY AND SUPPORT

Your Sharper Image® LED Light-Up Word Clock is backed by a **90-day manufacturer warranty** for added peace of mind and reliable product support.

For any questions, issues, or warranty claims, please contact the manufacturer's customer support. You can typically find contact information on the product packaging or by messaging the seller through the platform where you purchased the product for a quick resolution.

Please retain your proof of purchase for warranty purposes.

© 2025 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question