

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ignis](#) /
- › [Ignis IGT 6100 IT Top-Load Washing Machine User Manual](#)

Ignis IGT 6100 IT

Ignis IGT 6100 IT Top-Load Washing Machine User Manual

Model: IGT 6100 IT

INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Ignis IGT 6100 IT top-load washing machine. Please read these instructions carefully before installation, operation, or maintenance to ensure optimal performance and to prevent damage to the appliance or injury to yourself. Keep this manual for future reference.

SAFETY INFORMATION

General Safety:

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Never force the lid open during operation.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install the machine in areas exposed to direct sunlight or extreme temperatures.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.

Electrical Safety:

- Use a dedicated power outlet with the correct voltage and current rating.
- Do not use extension cords or multiple socket adapters.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

SETUP AND INSTALLATION

Your Ignis IGT 6100 IT washing machine is designed for freestanding installation. Follow these steps for proper

setup.

1. Unpacking

Carefully remove all packaging materials, including the polystyrene base and any protective film. Ensure all transport bolts are removed from the rear of the machine before use. Failure to remove these bolts can cause severe vibration and damage during operation.

2. Placement

Place the washing machine on a firm, level floor. Adjust the leveling feet at the bottom of the machine to ensure it is stable and perfectly horizontal. This prevents excessive vibration and noise during operation. The appliance dimensions are approximately 40 cm (width) x 60 cm (depth) x 90 cm (height).



This image displays the front of the Ignis IGT 6100 IT washing machine, highlighting its white finish, top-load access, control panel with buttons and a rotary dial, and the Ignis brand logo.

3. Water Supply Connection

Connect the inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks. Do not use old hoses; always use the new hoses supplied with the appliance.

4. Drain Hose Connection

Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent it from dislodging during the wash cycle. The drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

5. Electrical Connection

Plug the power cord into a properly grounded electrical outlet. Ensure the voltage and frequency of your power supply match the specifications on the appliance's rating plate. The appliance weighs 54 kg, so ensure the floor can support this weight.

OPERATING INSTRUCTIONS

1. Loading Laundry

Open the top lid and the drum door. Load laundry into the drum, making sure not to overload the machine. The maximum capacity is 6 kg. Close the drum door and then the top lid securely.

2. Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and, if desired, fabric softener to its designated compartment. Refer to your detergent packaging for recommended dosages. Close the dispenser drawer.

3. Selecting a Wash Program

Turn the program selector dial (rotary control) to choose the desired wash program based on the fabric type and soil level of your laundry. Use the buttons on the control panel to select additional options such as temperature, spin speed (up to 1000 rpm), or extra rinse, if available for the selected program.

4. Starting the Wash Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically fill with water and start the selected program.

5. Pausing or Changing a Program

To pause a cycle, press the Start/Pause button. To change a program, first press the Start/Pause button, then turn the program selector to the new program. Press Start/Pause again to resume. Note that changing programs mid-cycle may not be possible or may require draining the water first.

6. End of Cycle

Once the wash cycle is complete, the machine will signal with an audible alert or indicator light. Open the top lid and drum door to remove your laundry. Unplug the machine from the power outlet and turn off the water tap after each use.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your washing machine. Always unplug the appliance before cleaning.

1. Cleaning the Exterior

Wipe the exterior surfaces of the machine with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

2. Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue or mold buildup. Use a brush if necessary. Reinsert the drawer once clean.

3. Cleaning the Drain Filter

Locate the drain filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Unscrew the filter cover and carefully remove any lint, coins, or small objects. Clean the filter under

running water and screw it back into place securely.

4. Drum Cleaning

To prevent odors and maintain hygiene, run a maintenance wash cycle periodically. Use a specialized washing machine cleaner or a small amount of white vinegar with an empty drum on a hot wash program.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Lid not closed properly; Program not selected; Start button not pressed.	Check power connection; Ensure lid is fully closed; Select a program; Press the Start button.
No water filling	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Machine vibrates excessively	Transport bolts not removed; Machine not level; Laundry unevenly distributed.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in the drum.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check and clear drain hose; Clean the drain filter.
Lid cannot be opened	Cycle still running; Water inside the drum; Safety lock engaged.	Wait for cycle to finish; Run a drain cycle if water is present; Wait a few minutes for the safety lock to disengage after the cycle ends.

SPECIFICATIONS

Model Number	IGT 6100 IT
Brand	Ignis
Type	Freestanding, Top-Load
Color	White
Capacity	6 Kilograms
Maximum Spin Speed	1000 RPM
Energy Efficiency Class	A+++
Energy Consumption per Wash	0.78 kWh

Annual Energy Consumption	153 kWh
Washing Class	A
Dimensions (W x D x H)	400 mm x 600 mm x 900 mm
Product Weight	54 kg
Control Type	Buttons, Rotary

WARRANTY AND SUPPORT

For information regarding warranty coverage, terms, and conditions, please refer to the separate warranty card provided with your appliance or contact Ignis customer support. Keep your proof of purchase for warranty claims. For technical assistance, spare parts, or service requests, please contact your local Ignis service center or authorized dealer. You may need to provide the model number (IGT 6100 IT) and serial number of your appliance.