

[Manuals.plus](#) /

› [Profi Cook](#) /

› ProfiCook PC-FR 1147 H Air Fryer User Manual

Profi Cook PC-FR 1147 H

ProfiCook PC-FR 1147 H Air Fryer User Manual

Model: PC-FR 1147 H | Brand: Profi Cook

INTRODUCTION

Thank you for choosing the ProfiCook PC-FR 1147 H Air Fryer. This appliance allows for oil- and fat-free frying, offering a healthier way to prepare your favorite meals. With its 2.5-liter capacity, LED display, and various programs, it provides a convenient and efficient cooking experience. This manual provides essential information for the safe and effective use of your air fryer.



Figure 1: ProfiCook PC-FR 1147 H Air Fryer

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric

shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the appliance during operation.
- The appliance features overheating protection. If it overheats, it will automatically shut off.

WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present and in good condition:

- ProfiCook PC-FR 1147 H Air Fryer Unit
- Removable, non-stick coated container with safety switch
- User Manual (this document)

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials from the box. Keep packaging for future storage or disposal.
2. **Placement:** Place the appliance on a stable, heat-resistant surface. Ensure there is sufficient space (at least 10 cm) around the appliance for proper air circulation. Do not place it near walls or other appliances that could be damaged by steam.
3. **Initial Cleaning:** Before first use, thoroughly clean the removable container and basket with warm soapy water. Wipe the exterior of the appliance with a damp cloth.
4. **First Use Cycle:** To eliminate any initial "plastic" odor, it is recommended to run the air fryer empty for approximately 10 minutes at 180°C (356°F) before cooking food. Ensure the area is well-ventilated during this process.
5. **Power Connection:** Plug the power cord into a grounded wall outlet (220-240 V, 50/60 Hz).

OPERATING INSTRUCTIONS

Control Panel Overview



LED display: 7 programs for frying +
variable time program + variable temperature program

Figure 2: LED Display and Control Buttons

The air fryer features an intuitive LED display and touch controls for easy operation:

- **LED Display:** Shows temperature and time settings.
- **Temperature Control Buttons (+/-):** Adjust temperature from 80°C to 200°C.
- **Time Control Buttons (+/-):** Adjust cooking time.
- **Mode/Program Button (M):** Cycle through 7 pre-set frying programs.
- **Power Button:** Turn the appliance on/off and start/pause cooking.

Cooking Process

1. **Prepare Food:** Place the food you wish to cook into the removable, non-stick coated container. Do not overfill the basket to ensure even cooking. The capacity is 2.5 liters.



Figure 3: Loading the Air Fryer Basket

2. **Insert Container:** Slide the container back into the air fryer until it clicks securely into place. The appliance will not operate if the container is not properly inserted due to the safety switch.
3. **Power On:** Press the Power button to turn on the appliance. The LED display will illuminate.
4. **Set Temperature and Time:**
 - **Manual Setting:** Use the Temperature (+/-) buttons to set the desired cooking temperature (80°C-200°C) and the Time (+/-) buttons for the cooking duration.
 - **Pre-set Programs:** Press the Mode (M) button to cycle through the 7 pre-set programs:
 - Fries
 - Meat
 - Shrimp
 - Cake

- Poultry
- Steak
- Fish

Each program has a default temperature and time, which can be adjusted manually after selection if needed.

5. **Start Cooking:** Press the Power button again to start the cooking process. The fan and heating element will activate.
6. **Shaking/Turning Food:** For best results, especially with items like fries or chicken wings, it is recommended to shake or turn the food halfway through the cooking time. Carefully pull out the container using the Cool Touch-handle, shake the contents, and reinsert. The appliance will pause automatically when the container is removed and resume when reinserted.
7. **Completion:** The air fryer will beep when the cooking time is complete. Carefully pull out the container and transfer the cooked food to a serving dish.



Figure 4: Examples of Air Fried Dishes

Note on Heat Distribution: The air fryer utilizes a rapid air circulation system for gentle and even heat distribution,

ensuring crispy and thoroughly cooked results.



Figure 5: Air Circulation Diagram

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. **Removable Container:** The non-stick coated container should be washed with warm soapy water after each use. Avoid abrasive cleaning materials or metal utensils that could damage the non-stick coating. It is recommended to hand wash.
- 3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 4. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Ensure no food particles are left inside.
- 5. **Storage:** Store the cleaned and dry air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; container not properly inserted.	Ensure power cord is securely plugged into a working outlet. Push the container firmly until it clicks into place.
Food is not crispy.	Basket overloaded; insufficient cooking time/temperature; food not shaken.	Do not overload the basket. Increase cooking time or temperature. Shake or turn food halfway through cooking. For some foods (e.g., sweet potato fries), a light coating of oil may be beneficial.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the container and interior thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Plastic smell during first few uses.	New appliance odor.	This is normal for new appliances. Run the air fryer empty for 10-15 minutes at 180°C (356°F) in a well-ventilated area before first use. The smell will dissipate over time.

SPECIFICATIONS

Feature	Detail
Model Number	PC-FR 1147 H (501147)
Brand	Profi Cook
Capacity	2.5 Liters
Power	1500 Watts
Voltage	220-240 V, 50/60 Hz
Temperature Range	80°C – 200°C (Steplessly adjustable)
Programs	7 pre-set frying programs + variable time program
Display	LED Display

Feature	Detail
Features	Cool Touch-handle, Removable non-stick coated container with safety switch, Overheating protection, Automatic shut-off, Timer
Dimensions (L x W x H)	360 x 330 x 260 mm (approx.)
Weight	3.9 Kilograms



Figure 6: Product Dimensions

WARRANTY AND SUPPORT

Profi Cook products are manufactured with quality and reliability in mind. For warranty information, please refer to the warranty card included with your purchase or visit the official Profi Cook website. For technical support, troubleshooting

assistance, or spare parts, please contact Profi Cook customer service. Contact details can typically be found on the manufacturer's website or on the product packaging.

Online Resources: For additional tips, recipes, and frequently asked questions, you may visit the official Profi Cook website or search for user communities online.

© 2024 Profi Cook. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

