

[Manuals.plus](#) /

› [Timegyro](#) /

› Timegyro Digital LED Wall Clock (Model CRS7B) Instruction Manual

Timegyro CRS7B

Timegyro Digital LED Wall Clock (Model CRS7B) Instruction Manual

Model: CRS7B | Brand: Timegyro

INTRODUCTION

Thank you for choosing the Timegyro Digital LED Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your clock. Please read it thoroughly before use.



Image: Front view of the Timegyro Digital LED Wall Clock, highlighting its key features such as battery operation, alarm, 12/24-hour display, snooze, and auto-dimming.

PACKAGE CONTENTS

- 1 x Timegyro Digital LED Wall Clock
- 1 x Instruction Manual
- 1 x Customer After Service Card

SETUP

1. Battery Installation

The clock requires 2 D-size batteries (not included). Open the battery compartment cover on the back of the clock and insert the batteries, ensuring correct polarity (+/-). Close the cover securely.



Image: Rear view of the clock, illustrating the battery compartment and the various setting buttons.

2. Mounting Options

The clock offers two mounting options:

- **Wall Mount:** Use the hanging holes on the back of the clock to securely mount it on a wall.
- **Tabletop:** Utilize the foldable stand located on the back of the clock to place it on a desk or table.



Image: The clock's rear with the foldable stand extended for tabletop use.



Image: Examples of the clock being used as a wall-mounted display and a tabletop clock.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Use the **HOUR** button to adjust the hour.
3. Use the **MIN** button to adjust the minutes.
4. Press **TIME SET** again to confirm, or wait 15 seconds for auto-save.

2. 12/24 Hour Mode Selection

To switch between 12-hour (Standard) and 24-hour (Military) display modes, press the **HOUR (12/24)** button.

3. Brightness Adjustment

The clock features three brightness settings: Low, Medium, and High. To adjust the brightness, press and hold the **MIN** () button for 2 seconds.



Image: The clock displaying time at low, medium, and high brightness settings.

4. Night Mode (Auto Dim)

To conserve battery life, the clock automatically enters night mode between 8:00 p.m. and 6:00 a.m., dimming the display to a low brightness level. This overrides any manual brightness setting during these hours.

5. Setting the Alarm

1. Press the **AL SET** button. An alarm icon will appear, and the alarm time digits will flash.
2. Use the **HOUR** button to set the desired alarm hour.
3. Use the **MIN** button to set the desired alarm minutes.
4. Press **AL SET** again to confirm the alarm settings. The alarm and snooze functions will activate automatically upon saving. If no action is taken for 15 seconds, the settings will auto-save.

6. Alarm On/Off

To turn the alarm on or off, press the **MIN (AL ON/OFF)** button.

7. Snooze Function

When the alarm sounds, press the **SNOOZE/AL STOP** button (located on the front left side of the clock) to activate the snooze function. The alarm will delay for 7 minutes. You can use the snooze function up to 3 times per alarm.

8. Stopping the Alarm

To stop the alarm completely, press any button on the back of the clock, or press the **SNOOZE/AL STOP** button on the front after the third snooze cycle. The alarm will sound for 120 seconds if no operation is performed.

9. Flashing Dots Between Numbers

To start or stop the flashing of the dots between the hour and minute digits, press and hold the **MIN** button for 2 seconds.

MAINTENANCE

1. Battery Replacement

When the display dims significantly or the clock stops functioning, it is time to replace the D-size batteries. Ensure to replace both batteries at the same time for optimal performance. The battery life is approximately one year.

2. Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or display.

TROUBLESHOOTING

| Problem | Solution |
|--------------------------------|---|
| Clock display is blank or dim. | Check if batteries are installed correctly and have sufficient charge. Replace batteries if necessary. Adjust brightness using the MIN button. Note that the clock automatically dims between 8:00 p.m. and 6:00 a.m. |
| Alarm does not sound. | Ensure the alarm is set and turned ON (check for the alarm icon on the display). Verify the alarm time is correct. |
| Time is inaccurate. | The clock has an accuracy of +/- 30 seconds per month. If significant deviation occurs, reset the time. |
| Cannot adjust settings. | Ensure you are pressing and holding the correct buttons for the specified duration (e.g., 2 seconds for brightness). If issues persist, try pressing the RESET button on the back of the clock. |

SPECIFICATIONS

- **Brand:** Timegyro
- **Model:** CRS7B
- **Display Type:** Digital LED
- **Color:** Black-red
- **Power Source:** 2 x D-size batteries (not included)

- **Product Dimensions:** 8.86 inches (W) x 5.83 inches (H) x 1.69 inches (D)
- **Weight:** 1.13 lbs
- **Material:** Acrylonitrile Butadiene Styrene
- **Special Features:** Adjustable Brightness (3 levels), Foldable Stand, Large Display, Silent Operation, 12/24 Hour Time Modes, Alarm, Snooze Function, Automatic Night Dimming.
- **Time Accuracy:** +/- 30 seconds per month

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Timegyro Digital LED Wall Clock, please refer to the included Customer After Service Card or contact Timegyro customer support through the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.

