

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IKEA](#) /

› [IKEA Drona Storage Box User Manual](#)

IKEA Drona Box

IKEA Drona Storage Box User Manual

Model: Drona Box (Dark Gray, 15" x 13" x 13")

INTRODUCTION

The IKEA Drona Storage Box is designed to help organize your living space efficiently. This manual provides essential instructions for the proper setup, usage, care, and troubleshooting of your storage boxes to ensure optimal performance and longevity.



Image 1: Close-up view of the Drona storage box fabric and construction details.

SETUP INSTRUCTIONS

The Drona storage box is designed for quick and easy assembly. Follow these steps to set up your box:

- 1. Unfold the Box:** Carefully unfold the storage box from its collapsed state. The sides will naturally extend upwards.
- 2. Insert the Bottom Panel:** Locate the separate bottom panel. Place this panel inside the box, pushing it down firmly until it rests flat against the bottom. This will provide stability and structure to the box.
- 3. Verify Stability:** Ensure all sides are upright and the bottom panel is securely in place. The box should now hold its rectangular shape.

OPERATING INSTRUCTIONS

The Drona storage box is versatile and can be used in various ways:

- **Storage:** Use the box to store items such as clothing, toys, books, magazines, or other household goods.

- Shelving Compatibility:** The dimensions of the Drona box are designed to fit perfectly into many standard shelving units, including the IKEA KALLAX series, providing a neat and integrated storage solution.
- Accessibility:** The open-top design allows for easy access to contents.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and functionality of your Drona storage box:

- Cleaning:** Wipe clean with a damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
- Drying:** Allow the box to air dry completely before storing items or collapsing it.
- Avoid Harsh Chemicals:** Do not use abrasive cleaners or strong chemical solvents, as these can damage the fabric.
- Do Not Wash:** Do not wash, bleach, tumble dry, iron, or dry clean the storage box.

TROUBLESHOOTING

If you encounter any issues with your Drona storage box, refer to the following common solutions:

Problem	Solution
Box does not hold its shape.	Ensure the bottom panel is fully inserted and rests flat against the base of the box.
Unpleasant odor from the box.	Air out the box in a well-ventilated area for several days. If the odor persists, wipe with a damp cloth and mild soap, then air dry thoroughly.
Fabric appears wrinkled.	Wrinkles typically smooth out with use. Do not iron the fabric.

SPECIFICATIONS

Feature	Detail
Model Name	Drona Box
Color	Dark Gray
Material	Fabric (Polyester/Polypropylene)
Product Dimensions (L x W x H)	15" x 13" x 13" (38 cm x 33 cm x 33 cm)
Item Weight (per box)	Approximately 1.89 lbs (0.86 kg)
Capacity	15 Liters
Package Quantity	6 boxes

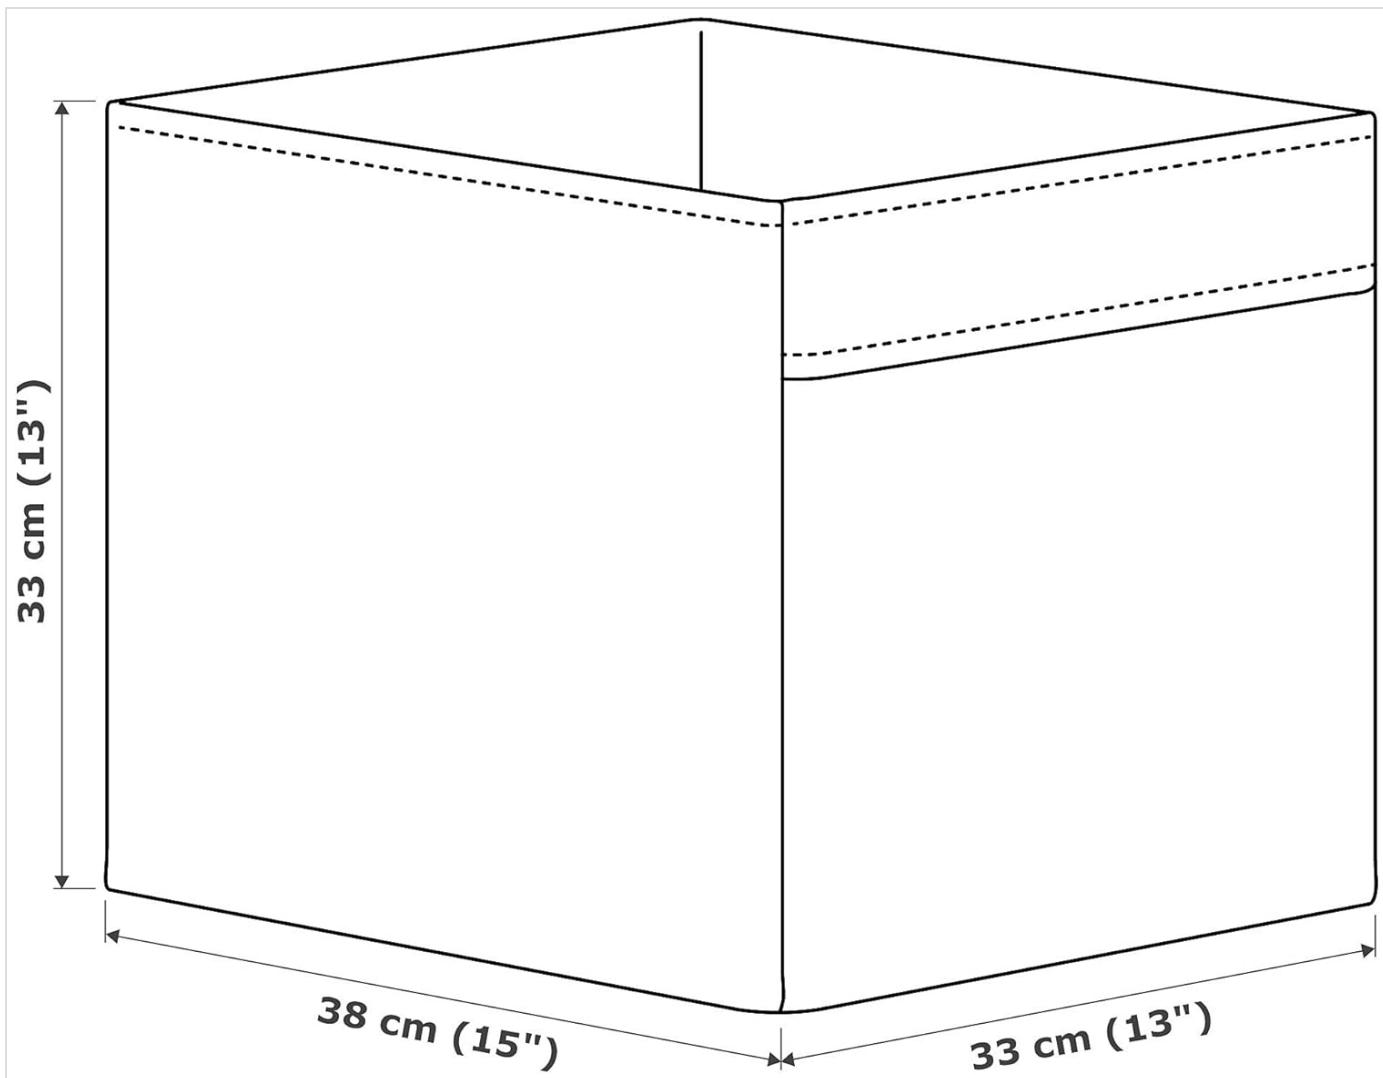


Image 2: Dimensional diagram of the Drona storage box.

WARRANTY AND SUPPORT

Specific warranty details for the IKEA Drona Storage Box are typically provided at the point of purchase or on the official IKEA website. For any product-related inquiries, missing parts, or further assistance, please contact IKEA customer support directly or visit your local IKEA store.

You can find contact information and additional resources on the official [IKEA website](#).