

[Manuals.plus](#) /

> [UBay](#) /

> UBay Universal Remote Control Instruction Manual for Element TVs (Models ELDFT501J, ELDFQ501J, ELEFW503, ELEFW605)

UBay JX8061A

UBay Universal Remote Control Instruction Manual

Model: JX8061A

1. INTRODUCTION

This manual provides instructions for the UBay Universal Remote Control, model JX8061A. This remote is designed to operate various Element brand televisions, offering a direct replacement experience without complex programming.

Compatible Element TV Models include:

- ELDFT501J, ELDFQ501J, ELEFW503, ELEFW605
- ELDFW406, ELCFT262, ELDFW322, ELCFW326, ELCFW329
- ELDFT404, ELCFW328, ELDFW464, ELDFT465J, ELEFQ501J
- ELGFW601, ELDFW501, ELEFW193, ELEFJ191, ELEFT195
- ELEFW195, ELEFS191, ELEFT193, ELEFJ243, ELEFS241
- ELEFW264, ELEFT281, ELEFW325, ELEFT326, ELEFS321
- ELEFJ321, ELEFT406, ELEFQ402, ELEFW401A
- ELEFQ462, ELEFT466, ELEFW462, ELEFC461, ELEFC463JA
- ELEFT502, ELEFW705, ELEFQ391J, ELDFT395J, ELEFJ391
- ELEFC401, ELDFC551J, ELEFC461, ELDFT465J, ELEFQ402
- ELEFW705, ELDFW407, ELEFW5016

2. SETUP

2.1 Battery Installation

The UBay Universal Remote Control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Ensure batteries are inserted correctly. Incorrect polarity can prevent the remote from functioning.

2.2 Initial Use

This remote control is pre-programmed for compatible Element TVs. No additional programming or setup is required. Once batteries are installed, the remote is ready for use.

3. OPERATING INSTRUCTIONS

Below is an overview of the remote control's buttons and their primary functions.





Image 1: Front view of the UBay Universal Remote Control, model JX8061A. It features a black casing with white and red buttons. Key buttons include Power (red), Mute (green), number pad, Channel Up/Down, Volume Up/Down, Menu, OK, and directional navigation.

Remote Control Button Functions

Button	Function
Power (Red)	Turns the television on or off.
Mute (Green)	Mutes or unmutes the television audio.
0-9 (Number Pad)	Direct channel selection.
SOURCE	Selects input sources (e.g., HDMI, AV).
CH +/-	Changes television channels up or down.
VOL +/-	Adjusts television volume up or down.
MENU	Accesses the television's main menu.
OK	Confirms selections within menus.
Directional Arrows	Navigates through menus and options.
EXIT	Exits the current menu or on-screen display.
P.MODE	Cycles through picture modes.
S.MODE	Cycles through sound modes.
MTS	Selects Multi-channel Television Sound options.
SLEEP	Sets the sleep timer for the television.
INFO	Displays current channel information or program details.
FREEZE	Pauses the current image on screen.

Button	Function
CH.LIST	Displays the channel list.
AUTO	Initiates auto-tuning or auto-scan for channels.
ASPECT	Changes the screen aspect ratio.
CC	Activates or deactivates Closed Captions.
V-CHIP	Accesses V-Chip parental control settings.
FAV	Accesses favorite channels list.
ADD/ERASE	Adds or erases items from lists (e.g., favorite channels).

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the device.

5. TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Remote is not working.	• Check if the batteries are inserted correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Ensure there are no obstructions between the remote and the TV's infrared sensor. • Confirm the remote is pointed directly at the TV.
Remote works intermittently.	• Batteries may be low; replace them. • Ensure a clear line of sight to the TV.

Problem	Solution
Some buttons do not respond.	• This remote is designed for specific Element TV models. Verify your TV model is listed as compatible. • Clean the remote control surface, especially around the unresponsive buttons, to remove any debris.

6. SPECIFICATIONS

- **Model:** JX8061A
- **Brand:** UBay
- **Compatible Devices:** Element Televisions (specific models listed in Introduction)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 6 x 1.8 x 0.5 inches (approximately)
- **Weight:** 1.58 ounces (without batteries)
- **Color:** Black
- **Special Feature:** Universal (for specified Element TV models)

7. WARRANTY INFORMATION

Please refer to the retailer or manufacturer’s website for specific warranty details regarding this product. Warranty terms typically cover manufacturing defects and may vary by region and purchase date.

8. CUSTOMER SUPPORT

For further assistance or inquiries, please contact your product retailer or visit the UBay official support channels. Keep your purchase receipt and product model number (JX8061A) available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CGGLJRM>

More documents and user manuals: <https://manuals.plus/>